

# **Dominion KX III User Station**

## **User Guide**

---

Release 2.0

# What's New in the Dominion User Station User Guide for Release 2.0

The following sections have changed or information has been added to the Dominion User Station User Guide based on enhancements and changes to the equipment and/or user documentation.

- ***Importing KVM Switches*** (on page 30)
- ***Port Scanner*** (on page 48)
- ***Hotkeys*** (on page 100)
- ***CommandCenter Secure Gateway (CC-SG) Integration*** (on page 128)
- ***Take a Screenshot*** (on page 184)
- ***Certificate Requirements*** (on page 192)

This document contains proprietary information that is protected by copyright. All rights reserved. No part of this document may be photocopied, reproduced, or translated into another language without express prior written consent of Raritan, Inc.

© Copyright 2018 Raritan, Inc. All third-party software and hardware mentioned in this document are registered trademarks or trademarks of and are the property of their respective holders.

#### FCC Information

This Equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### VCCI Information (Japan)

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。  
取扱説明書に従って正しい取り扱いをして下さい。

Raritan is not responsible for damage to this product resulting from accident, disaster, misuse, abuse, non-Raritan modification of the product, or other events outside of Raritan's reasonable control or not arising under normal operating conditions.

If a power cable is included with this product, it must be used exclusively for this product.



# Contents

What's New in the Dominion User Station User Guide for Release 2.0	ii
--------------------------------------------------------------------	----

---

<b>Chapter 1 Introduction</b>	<b>1</b>
-------------------------------	----------

---

Overview.....	1
Package Contents.....	2
Product Photos and Features .....	2
Product Features .....	2
Product Photos.....	3
Introduction to the User Station.....	4
Front View .....	4
Rear View .....	5
Side View .....	5
Introduction to the Software .....	6
Login Screen .....	6
Main Screen and Main Toolbar .....	7
Online Help and Hotkeys Help.....	9

<b>Chapter 2 Getting Started</b>	<b>10</b>
----------------------------------	-----------

---

Installation and Configuration.....	10
Step 1: Connect the Equipment .....	10
Step 2: Initial Log in to the Dominion User Station .....	11
Step 3: Add KX III KVM Switches (without CC-SG integration).....	12
Step 4: Access KVM Switches and KVM Ports (without CC-SG integration).....	14
Step 5: Use the KVM Client .....	17
Basic Network Settings.....	20
Logout or Shutdown .....	22
VESA Mount (Optional).....	22
Rackmount Using L-type Brackets (Optional) .....	24

<b>Chapter 3 Managing KVM Switches and Ports</b>	<b>26</b>
--------------------------------------------------	-----------

---

User Station Configuration.....	26
Adding KVM Switches .....	28
Editing KVM Switches .....	29
Deleting KVM Switches.....	30
Importing KVM Switches .....	30
Bulk Import Examples .....	33

Contents

Configuring KVM Ports .....	33
Unavailable Hotkeys for Port Access .....	35
Port Data Retrieval Status .....	36
<b>Chapter 4 Navigation and Access to KVM Ports</b> .....	<b>38</b>
Port Navigator .....	39
Identifying States of KVM Switches and Ports .....	41
Identifying External Media .....	44
Dual Video Port Status .....	44
Using Search .....	45
Using Filters .....	45
<b>Chapter 5 Port Scanner</b> .....	<b>48</b>
Operating the Port Scanner .....	49
Scanner Options .....	51
<b>Chapter 6 Using the KVM Client</b> .....	<b>53</b>
Connection Properties .....	54
Default Connection Properties .....	56
Text Readability .....	57
Color Accuracy .....	57
Video Mode .....	57
Noise Filter .....	58
Keyboard Macros .....	58
Mouse Settings .....	59
Synchronize Mouse .....	60
Single Mouse Cursor .....	60
Dual Mouse Modes .....	61
Mouse Synchronization Tips .....	63
Video Settings .....	64
Advanced Video Settings .....	66
Advanced Color Settings .....	68
Peripheral Devices and USB Settings .....	69
Audio Device .....	71
Virtual Media .....	72
SmartCard Reader .....	79
Disconnecting a Virtual Device .....	83
USB Profiles .....	84
Power Control .....	87
View Settings .....	88
Fit window to Target .....	88
Scale Video .....	88

Show Window Decorations .....	89
Full-Screen Mode .....	89
Hide Mouse Cursor .....	89
Window Management .....	90
Dual Video Port Connections.....	92

**Chapter 7 Setting User Preferences 93**

---

KVM Client Settings.....	93
Managing Keyboard Macros.....	96
Executing Macros.....	97
Editing or Deleting Macros .....	98
Keyboard Macro Example .....	98
Audio Settings.....	99
Hotkeys .....	100
Move Keys .....	101
Change Password.....	102

**Chapter 8 Administration Features 104**

---

Users.....	105
Editing or Deleting Users.....	108
User Groups.....	109
Privileges.....	110
Editing or Deleting User Groups.....	111
LDAP .....	113
Adding LDAP Servers.....	114
Enabling or Disabling the LDAP Authentication.....	122
Searching for LDAP Users and Groups .....	123
Setting the Maximum Search Results .....	126
Logging in with LDAP .....	127
LDAP Login Failure Message .....	127
CommandCenter Secure Gateway (CC-SG) Integration .....	128
CC-SG Integration Requirements.....	128
Enabling CC-SG Integration.....	129
Logging in with CC-SG Integration .....	131
Navigator with CC-SG Integration .....	132
CC-SG Authentication Fallback .....	132
Certificates .....	132
Removing an Installed Certificate .....	134
Certificate Failure Messages.....	135

Security Settings.....	135
Display Settings .....	137

**Chapter 9 Maintenance Features 138**

---

Event Log .....	139
Event Type and Description .....	141
Event Log Archives.....	142
Backup and Restore .....	147
Exporting and Importing Backup Files .....	149
Deleting Backup Files.....	150
Factory Reset.....	151
Software Update .....	153
Support .....	155
Support Login.....	155
Log Level for Diagnostic Log Files .....	156
Diagnostic Log File .....	156
About this Device .....	158

**Chapter 10 System Settings 159**

---

Date/Time .....	159
Date and Time .....	160
Time Zone.....	161
Keyboard.....	162
Layouts .....	163
Mouse Keys .....	164
Monitor.....	165
Network Connections .....	166
IPv4 Settings .....	169
IPv6 Settings .....	172
Default Shortcut Icons in the Main Toolbar .....	175
Keyboard Layout Icon.....	175
Volume Icon.....	175
Network Icon .....	176
Clock Icon.....	177
Location and Clock Time Format.....	179

<b>Chapter 11 Additional Features</b>	<b>182</b>
<hr/>	
Device Resume or Screen Unlocking.....	182
Factory Reset at Startup .....	183
Take a Screenshot.....	184
<b>Appendix A Specification</b>	<b>185</b>
<hr/>	
<b>Appendix B Authentication of User Stations and KVM Switches</b>	<b>186</b>
<hr/>	
<b>Appendix C Available Key Sets</b>	<b>188</b>
<hr/>	
<b>Appendix D Card Reader Restriction Caused by KX III KVM Switch Settings</b>	<b>191</b>
<hr/>	
<b>Appendix E Certificate Requirements</b>	<b>192</b>
<hr/>	
<b>Index</b>	<b>197</b>
<hr/>	



# Chapter 1 Introduction

This chapter introduces the Dominion KX III User Station (Dominion User Station).

## In This Chapter

Overview .....	1
Package Contents.....	2
Product Photos and Features .....	2
Introduction to the User Station.....	4
Introduction to the Software .....	6

---


## Overview

The Dominion User Station (DKX3-UST) is designed to access servers and computer devices connected to Dominion KX III KVM switches from customer LAN/WAN networks. ALL KX III KVM switches are supported.

*Note: For information on KX III KVM switches, access its user documentation from its application or the Dominion KX III section of the Raritan website's **Support page** (<http://www.raritan.com/support/>).*

You can store the IP addresses of multiple KX III KVM switches on the Dominion User Station so that you can remotely access any IT device connected to these KVM switches with only one click.

► **Illustration diagram:**

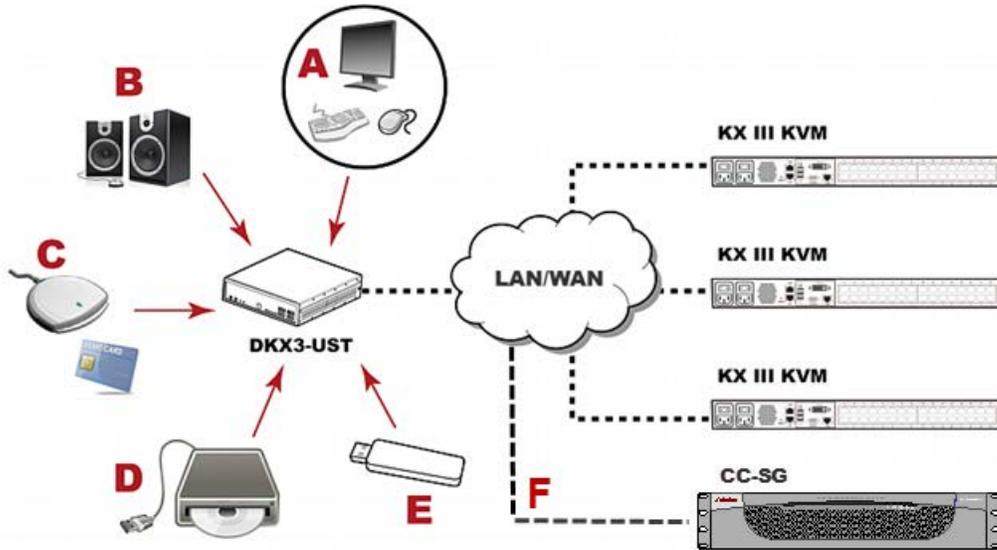

<b>A</b>	A USB Keyboard, USB mouse, and one or two HDMI- or DisplayPort-interfaced monitors
<b>B</b>	Analog or digital audio appliances
<b>C</b>	Optional smart card reader for remote IT device authentication
<b>D</b>	External drives as virtual media, such as CD-ROM
<b>E</b>	USB drives for virtual media or User Station software update
<b>F</b>	Optional integration with CC-SG

---

## Package Contents

The Dominion User Station ships with the following contents.

- Dominion User Station
- Power adapter
- VESA mount kit
- Quick Setup Guide
- Warranty card
- L-type rackmount kit (optional)

---

## Product Photos and Features

---

### Product Features

- Support KVM-over-IP connections to target servers

---

*Note: The User Station CANNOT access a KVM port that is connected to a tiered KVM switch or a blade chassis server.*

---

- Support a HDMI- or DisplayPort-interfaced monitor
- Support for dual video ports
- Support dual monitors
- Support dual LAN connections
- Support virtual media, including external DVD or USB drives

---

*Note: Virtual media is supported only when the accessed KX III KVM switch supports it and you have permissions to use virtual media. See **Virtual Media** (on page 72).*

---

- Support USB audio
- Support power control for target servers (with Raritan PX PDUs)
- Support authentication to target servers via an optional smart card
- Support authentication and authorization via LDAP
- Support the optional FIPS 140-2 mode

---

## Product Photos

### Dominion User Station



### Power adapter and cord




### VESA mount kit



---


## Introduction to the User Station

### Front View

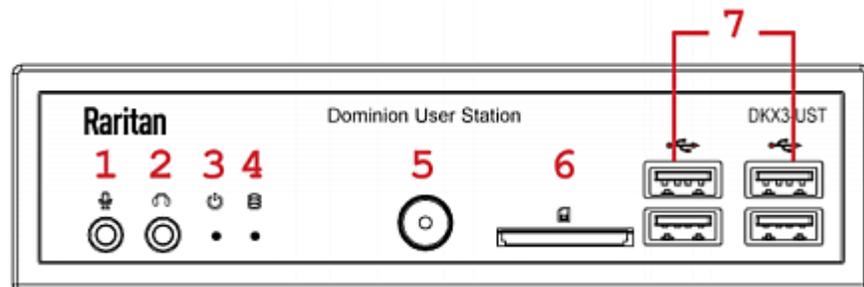

- |                     |                   |
|---------------------|-------------------|
| 1. Microphone input | 5. Power button   |
| 2. Audio output     | 6. SD card reader |
| 3. Power LED        | 7. USB 2.0 ports  |
| 4. Hard disk LED    |                   |


### Rear View

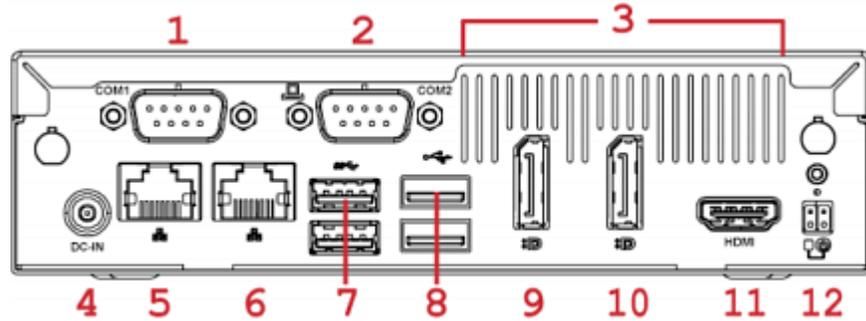

- |                       |                                         |
|-----------------------|-----------------------------------------|
| 1. RS232/RS422/RS485  | 7. USB 3.0 ports                        |
| 2. RS232              | 8. USB 2.0 ports                        |
| 3. Ventilation        | 9. DisplayPort (DP) video 1             |
| 4. DC power input     | 10. DisplayPort (DP) video 2            |
| 5. Gigabit LAN port 1 | 11. HDMI video                          |
| 6. Gigabit LAN port 2 | 12. Connector for external power button |

*Note: Both RS232 ports are reserved and cannot be used by the user. The connector for external power button is reserved for future use.*

### Side View

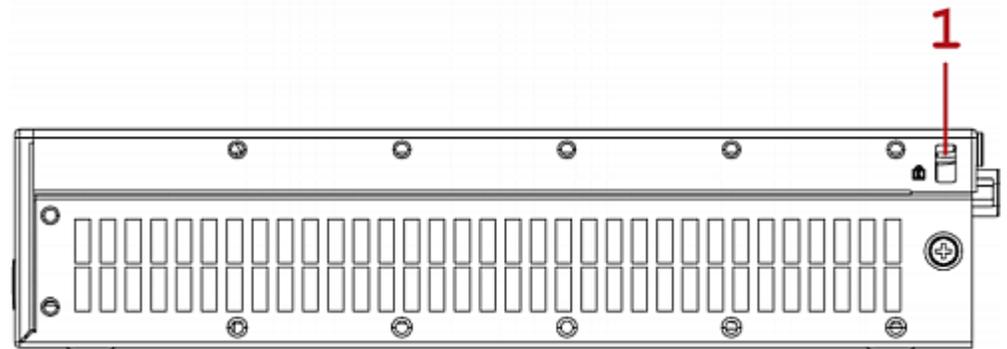

1. Kensington Lock holes

---


## Introduction to the Software

After powering on the User Station, the Login Screen is shown.

After successfully logging in to the User Station, the Main Screen displays.

---

### Login Screen

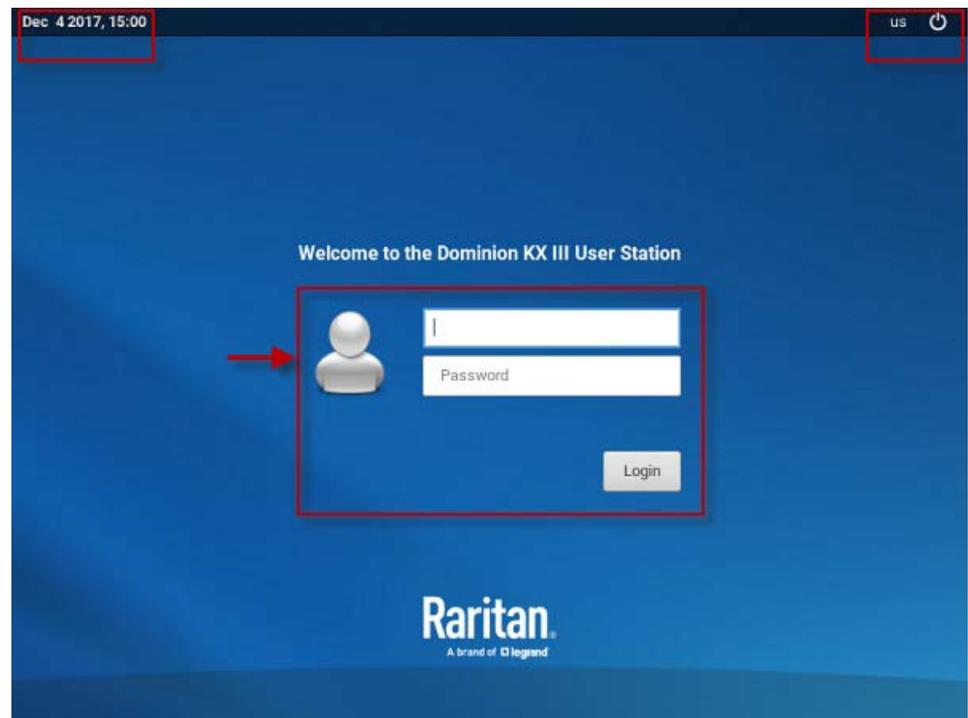


- System date and time
-  Keyboard language (default US English) and  Restart or Shut Down
- Login: The login icon indicates the authentication type being used: Local, LDAP, or CC-SG. CC-SG includes a local authentication checkbox when that option is enabled.



## Main Screen and Main Toolbar

The screen displayed after login is the Main Screen. When logging in for the first time, a welcome message is displayed.

The Main Toolbar is located at the bottom of this screen. This toolbar shows the Main Menu, shortcut icons and lists any open User Station and KVM Client windows.

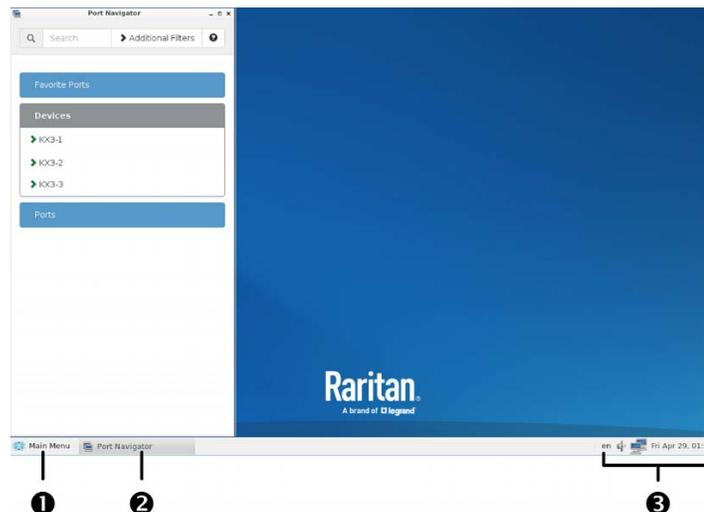

### 1. Main Menu:

This menu contains the primary User Station commands and system settings.

### 2. Open window(s):

If any window is launched, its name is shown in the Main Toolbar. In the above diagram, only the Port Navigator window is launched.

You can right-click any open window in the Main Toolbar to perform one of the following commands:

Command	Description
Minimize	Minimize the window. After a window is minimized, the Minimize command will be replaced by the Unminimize command. Select Unminimize to restore the window.
Maximize	Maximize the window. After a window is maximized, the Maximize command will be replaced by the Unmaximize command. Select Unmaximize to restore the window.
Move	After selecting this command, move your mouse to move the window.
Resize	After selecting this command, move your mouse to resize the window.
Always On Top	When selected, the window is always on top of any open windows.
Close	Close the window.

3. **Shortcut icons for viewing/configuring system settings:**

Hover your mouse pointer over an icon to view information, or click or right-click it to configure settings.

---

*Note: The above diagram shows factory default icons. More icons may be available if you change any system settings. For example, **Displays** (see **'Monitor'** on page 165).*

---

Default icons	Description
	The Keyboard Layout icon indicates the current keyboard layout. The default is <i>en</i> (American English). See <b>Keyboard Layout Icon</b> (on page 175).
	This icon controls the volume. See <b>Volume Icon</b> (on page 175).
	This icon shows or configures the network information. See <b>Network Icon</b> (on page 176).
	The Clock icon indicates the day of the week, date and current time. See <b>Clock Icon</b> (on page 177).

---


## Online Help and Hotkeys Help

Both online help for using the Dominion User Station and information on pre-programmed hotkeys are available in the Main Menu.

### ▶ Online help:

- Choose Main Menu > Help > User Manual.

You must be connected to the Internet to connect to the Dominion User Station's online help.

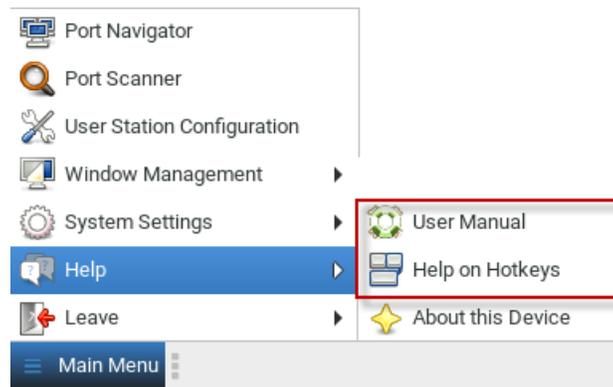

### ▶ Information on pre-programmed hotkeys:

- Choose Main Menu > Help > Help on Hotkeys.

A list of pre-programmed as well as user-configurable hot keys for the User Station displays onscreen.

---

*Note: Information on most hot keys is also available in this User Guide. See **Configuring KVM Ports** (on page 33) and **Hotkeys for Controlling User Station Windows** (see "Move Keys" on page 101).*

---

## Chapter 2 Getting Started

This chapter introduces the basic installation and configuration.

### In This Chapter

Installation and Configuration.....	10
Basic Network Settings.....	20
Logout or Shutdown.....	22
VESA Mount (Optional).....	22
Rackmount Using L-type Brackets (Optional).....	24

---

## Installation and Configuration


---

### Step 1: Connect the Equipment

Only the basic hardware installation is described. For additional connection information, see *Overview* (on page 1).

► **To make a basic connection:**

1. Disconnect all devices from power.
2. Connect a USB keyboard and mouse to the front or rear USB 2.0 ports.
3. **Optional.** Connect a microphone and speakers to the front panel.

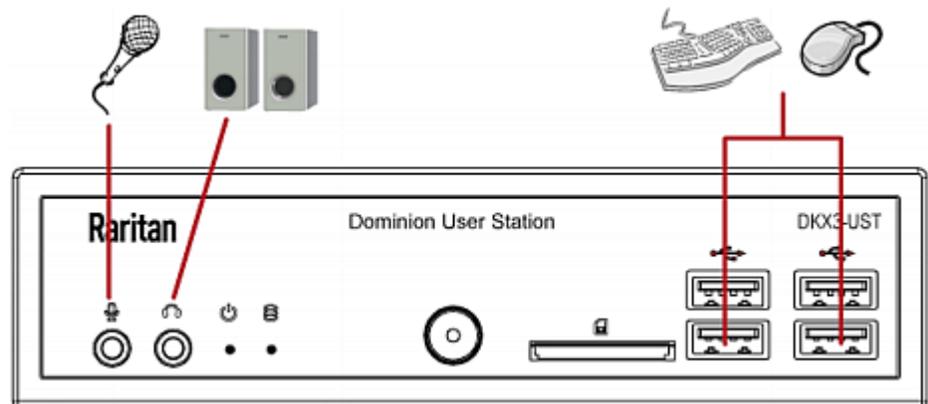

4. Connect the User Station to the network using either or both LAN ports on the rear panel.
5. Connect one or two monitors using either or both DisplayPort ports, or the HDMI port.


---

*Note 1: DisplayPort and HDMI transmit both video and audio signals. Your monitors must support the audio transmission if audio is intended.*

---

*Note 2: Only one or two monitors can be connected to the User Station.*

---

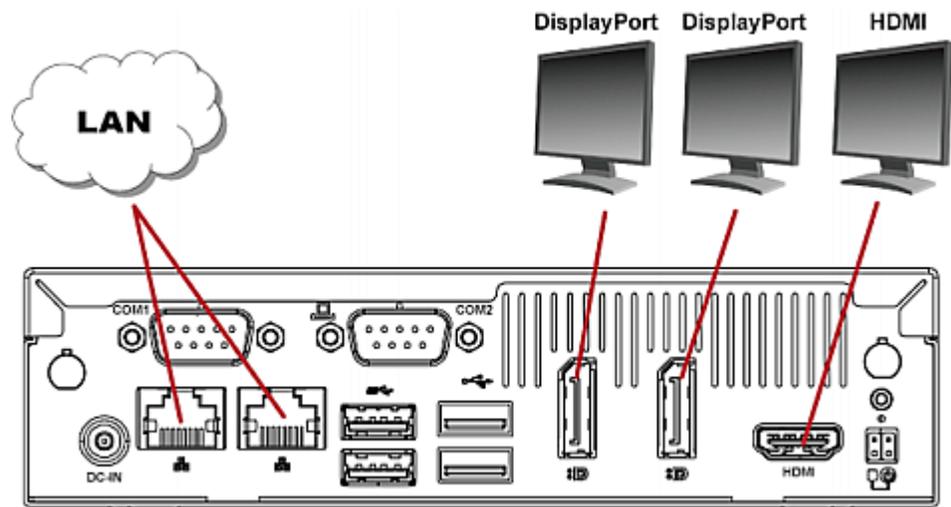

6. Power ON all devices.

---

### Step 2: Initial Log in to the Dominion User Station

Use the factory default user credentials for initial login. User credentials are case sensitive.

► **To log in to the User Station:**

1. Type the user name: `admin`
2. Type the password: `raritan`



3. Click Login or press Enter.

---

*Note: It is strongly recommended to change the factory default password. If the default password has not been changed, you will see a reminder message in the User Station Configuration and Navigator windows. See **Change Password** (on page 102).*

---

### Step 3: Add KX III KVM Switches (without CC-SG integration)


If you are not integrating your User Station with CC-SG, proceed with this step. If you want to integrate CC-SG, see **CC-SG Integration** (see "**CommandCenter Secure Gateway (CC-SG) Integration**" on page 128).

If the User Station is connected to a non-DHCP network, you must manually configure the network settings prior to adding KX III KVM switches. See **Basic Network Settings** (on page 20).

When you are not using CC-SG integration, KX III KVM switches are added in the User Station Configuration window.

► **To add KX III KVM switches:**

1. Launch the User Station Configuration window using either method below.
  - Press *Ctrl+Alt+C*.
  - Choose Main Menu > User Station Configuration. For the Main Menu's location, see **Main Screen and Main Toolbar** (on page 7).

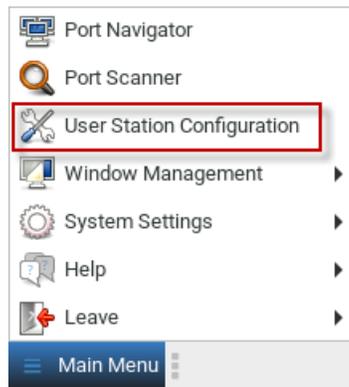

2. Click New.
3. Enter the data for the KX III KVM switch.

**\* IP Address / Hostname**

Type the KVM switch's IPv4/IPv6 address or hostname in this field.

**\* Username**

User credentials on the KVM switch are required for querying this KVM switch's port information.

The user credentials may or may not be the same as your user credentials for the User Station. See *Authentication of User Stations and KVM Switches* (on page 186).

**\* Password**


---

*Note: If you enter incorrect user credentials for a KVM switch, you may be blocked if User Blocking has been enabled on that KVM switch and too many incorrect attempts are made. When this occurs, contact the KVM switch's system administrator for help.*

---

4. Click Add KX Device  to save your data.
5. Click Back to All KX Devices to go back to the list page. Repeat to add more devices.

---

**Important: When CC-SG is not being used, user credentials for a KVM switch are saved on a per-user basis. Other users must enter and save their own user credentials again for the KVM switches you added. See *Editing KVM Switches* (on page 29).**

---

---

#### Step 4: Access KVM Switches and KVM Ports (without CC-SG integration)

You access the computer devices connected to a KVM switch's ports through the Port Navigator window, which contains 3 panels:

- **Favorite Ports** shows the favorite ports you have configured. See *Configuring KVM Ports* (on page 33).
- **Devices** shows all added KX III KVM switches and their ports.
- **Ports** shows only KVM ports.

This window is displayed by default. If not, launch it by pressing *Ctrl+Alt+N* or choosing Main Menu > Port Navigator.


---

*Note: The User Station CANNOT access a KVM port that is connected to a tiered KVM switch or a blade chassis server. Therefore, such KVM ports are not shown in the Port Navigator window.*

---

► **To access a KVM switch's ports:**

1. Click a KVM switch in the Devices panel.

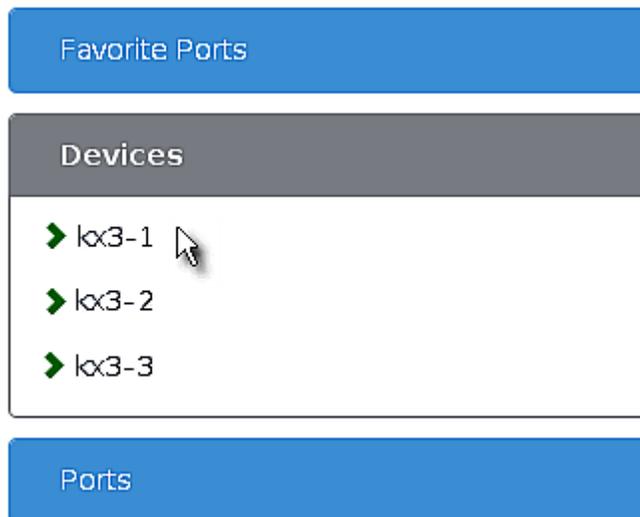


2. Per default, only a list of "up" ports is displayed under the selected KVM switch. For dual port video, only the primary port must be "up" to be displayed.
  - Numbers in parentheses are the physical port numbers on the KVM switch.
  - Dual port video uses doubled icons, and shows the primary then secondary physical port numbers in parentheses.

---

*Note: To show KVM ports whose status is down, see **Using Filters** (on page 45).*

---

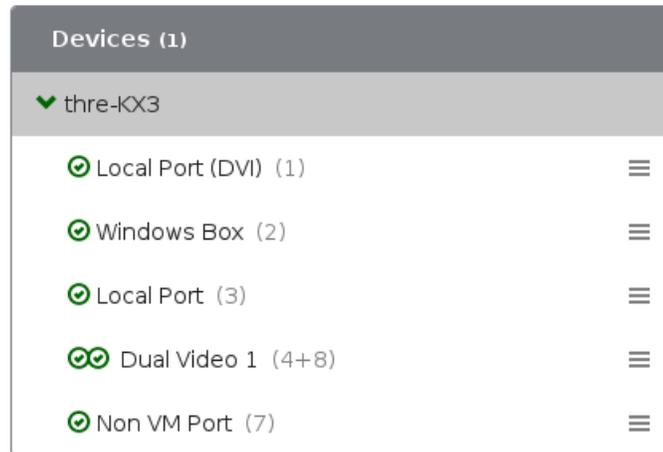

3. Click the desired KVM port's icon , and select one option below.
  - *Open in new KVM client:* A new KVM Client window is opened.
  - *Open in current KVM client:* The port is launched into the current KVM Client window.

Another alternative to access the KVM port is to click the port's name, using any method below.

- A "single" click opens it in the current KVM Client window.
- A "double" click or a single middle button click opens it in a new KVM Client window.
- A "right" click shows the KVM Client options.


---

*Note: The behaviors of the left-mouse single and double clicks and middle button clicks can be customized. See **KVM Client Settings** (on page 93).*

---

► **To directly access a KVM port:**

1. Click the Ports panel, and all "up" KVM ports are displayed by default. For dual port video, only the primary port must be "up" to be displayed.

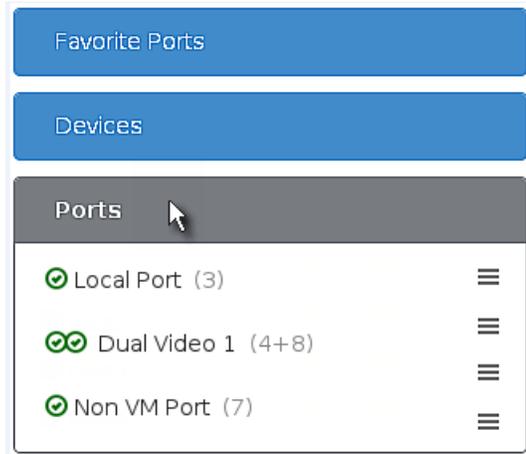


2. Click the desired port's name, or click its icon .

---

### Step 5: Use the KVM Client

The User Station's KVM Client window opens after accessing a KVM port. The video of the target server that is connected to the KVM port is displayed in the KVM Client. You can use the attached keyboard and mouse to control the target server.

A toolbar is available on the top of the KVM Client window for helpful user operations and settings.

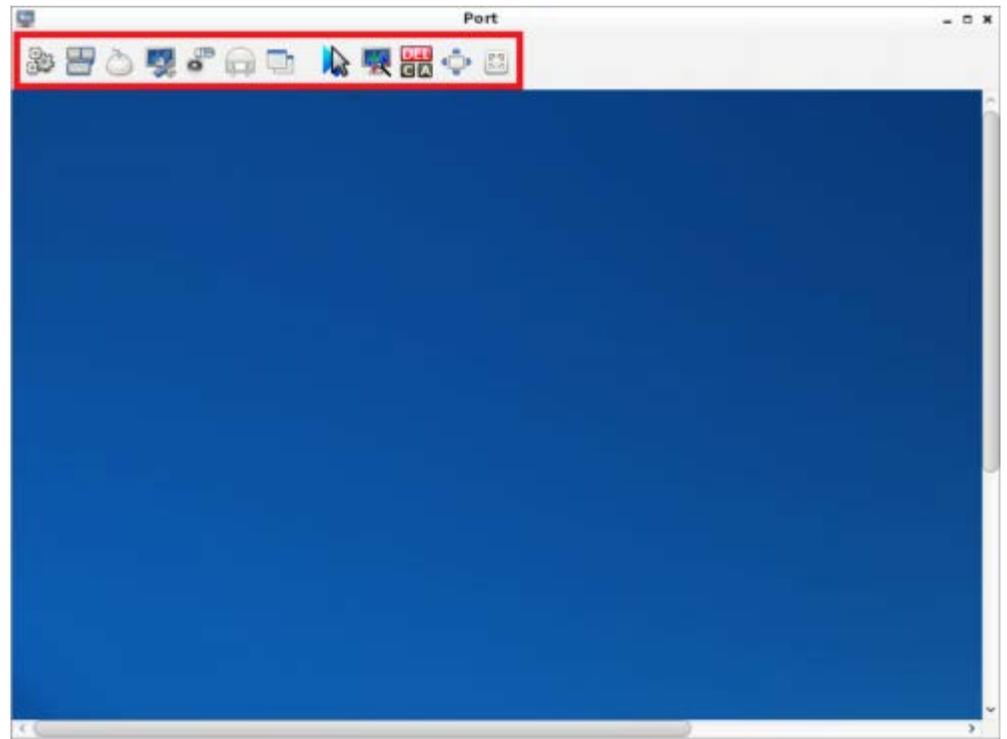

The toolbar is split into two groups.

The left group comprises the following buttons that you can use to change settings and properties.

Button	Function
	<p><b>Connection Properties:</b></p> <p>This button manages streaming video performance over <i>your</i> connection to the target server. The settings are stored persistently for the accessed KVM port.</p> <p>In addition, this button can show information like FPS and video resolution.</p> <p>The factory default settings are ideal for most connections so it is not recommended to change the settings unless required.</p>
	<p><b>Keyboard:</b></p> <p>This button shows a list of available hot key macros and sends the selected macro to the target server.</p>
	<p><b>Mouse:</b></p> <p>This button switches between single mouse and various dual mouse modes, or synchronizes two mouse pointers onscreen.</p>
	<p><b>Video Settings:</b></p> <p>This button adjusts video sensing and color calibration settings.</p>
	<p><b>Connect Audio, Mass Storage and SmartCard Devices:</b></p> <p>This button connects or disconnects a virtual media drive or a smart card reader from the target server, if the target supports virtual media.</p> <p>For example, you can mount a CD-ROM or USB flash drive onto the target server.</p> <p>In addition, you can configure the audio connection to the target server.</p>

Button	Function
	<p><b>Power Operations:</b></p> <p>This button turns on, off or power cycles the target server, if a Raritan PDU is connected to the same KVM switch.</p>
	<p><b>View:</b></p> <p>This button shows several display options, such as Scale Video and Full-Screen Mode.</p>


The right group comprises the following shortcut buttons for frequently-used functions. These functions are also available in the left group, but the shortcut buttons allow quick access with a click.

Button	Function
	<p><b>Synchronize Mouse:</b></p> <p>This button forces the target server's mouse pointer to align with the User Station's in the dual mouse modes.</p>
	<p><b>Auto-sense Video:</b></p> <p>This button forces the video re-sensing to adjust the video display.</p>
	<p><b>Send Ctrl+Alt+Del:</b></p> <p>This button sends the hot key <i>Ctrl+Alt+Del</i> to the target server to ensure it is interpreted by that server.</p>
	<p><b>Full-Screen Mode:</b></p> <p>This button displays the target server's video in full screen.</p> <p>Press <i>Ctrl+Alt+F</i> to quit the Full-Screen mode.</p>
	<p><b>Fit window to Target:</b></p> <p>This button resizes the KVM Client window to the target server's desktop video.</p>

For detailed information on the toolbar buttons, see *Using the KVM Client* (on page 53).

### Connection Error Message

If there are problems accessing a KVM port/target server, such as a network connectivity issue, an error message appears while the KVM Client opens.

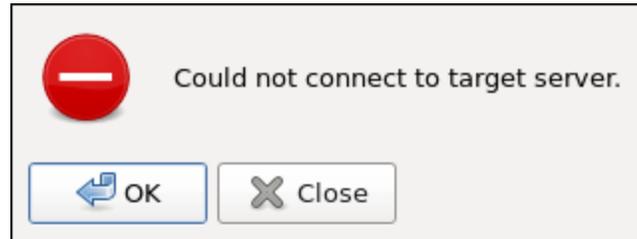

- To close the error message only, click OK. The KVM Client continues to display, with "Disconnected" shown on its title bar.
- To close both the error message and the KVM Client, click Close.

Note that switching to another KVM port automatically closes this error message.

---

*Note: In FIPS mode, a similar connection error message appears if the KVM switch's certificate is not installed on the User Station. See **Certificate Failure Messages** (on page 135). Also, the User Station **CANNOT** connect to any targets on a KX III KVM switch with Security setting TLS 1.2 only.*

---

## Basic Network Settings

The User Station's default network configuration is set to Automatic (DHCP) for both IPv4 and IPv6 settings.

This section describes basic network configuration only. For details, see **Network Connections** (on page 166).


### ► To configure basic network settings:

1. Choose Main Menu > System Settings > Network.




2. In the Network Connections dialog, two default network connections are available for two LAN ports. *Ethernet 1* is for LAN port 1, and *Ethernet 2* is for the other.

Select the desired one and click Edit.

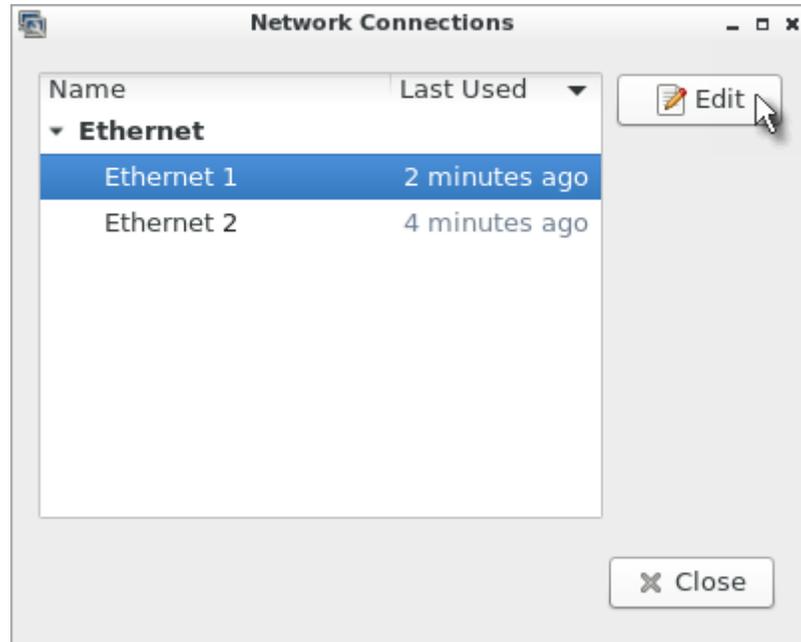

3. Click the IPv4 Settings tab.

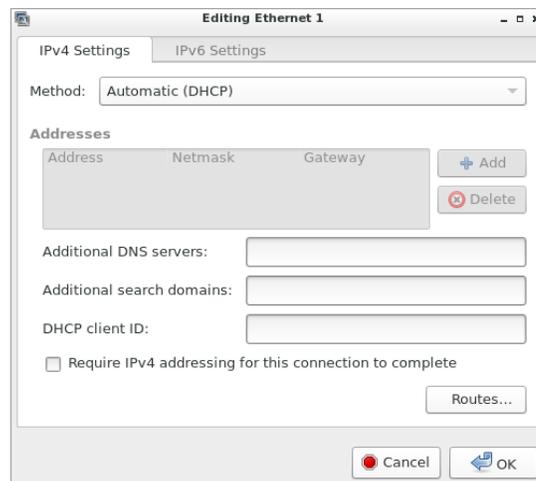

4. In the Method field, select one of the following options:

- *Automatic (DHCP)*: The DHCP server automatically assigns an IPv4 address. This is the default.
- *Automatic (DHCP) addresses only*: The DHCP server automatically assigns the IP address only. DNS comes from manual input.
- *Manual*: This option configures static addressing. Click Add to specify at least one IPv4 address, netmask and gateway.

- *Disabled:* IPv4 networking is disabled. For details, see **IPv4 Settings** (on page 169).
5. If your network supports IPv6, click the IPv6 Settings tab, and repeat the above step for configuring IPv6 settings. Note that IPv6 provides the "Ignore" option instead of the "Disabled" option to disable the IPv6 networking. See **IPv6 Settings** (on page 172).
  6. Click OK. The new network settings apply now.

---

## Logout or Shutdown

Both logout and shutdown commands are available under Leave in the Main Menu.

- *Log Out:* Logs the user out of the User Station.  
*Shut Down:* Provides the following options. Click the one you prefer, or the User Station will automatically shut down in one minute. Suspend is not available for CC-SG users. For detailed information, see **Device Resume or Screen Unlocking** (on page 182).

**Restart:** Restarts the User Station.

**Shut Down:** Powers off the User Station. You should always use the software command as the only method to power off your User Station.

---

*Tip: An alternative to trigger the shutdown options is to press Ctrl+Alt+Delete. See Desktop Settings.*

---

Warning: Do NOT turn the User Station off by holding down the Power button or unplugging the power cord because such operations may damage the User Station. A short press of the Power button initiates a graceful shutdown that does not save open KVM sessions.

---

## VESA Mount (Optional)


You can mount the Dominion User Station onto the back of a monitor with 75 or 100 mm VESA standards.

Below shows the VESA MOUNT kit:



► **VESA mount procedure:**


1. Turn OFF and disconnect all devices from the power sources, including the monitor.
2. Attach the VESA mount securely to the back of your monitor using four appropriate screws.

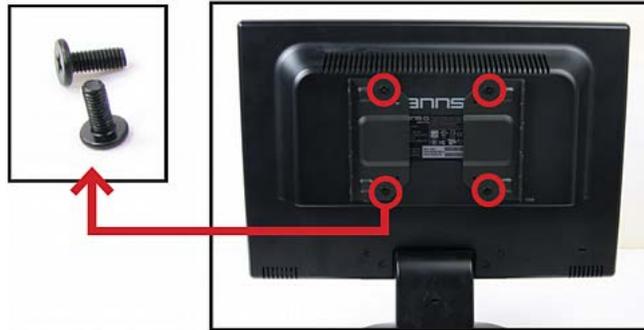

3. Align two screw holes on each side of the User Station with those on the VESA mount.



4. Tighten two sides securely using four appropriate screws.

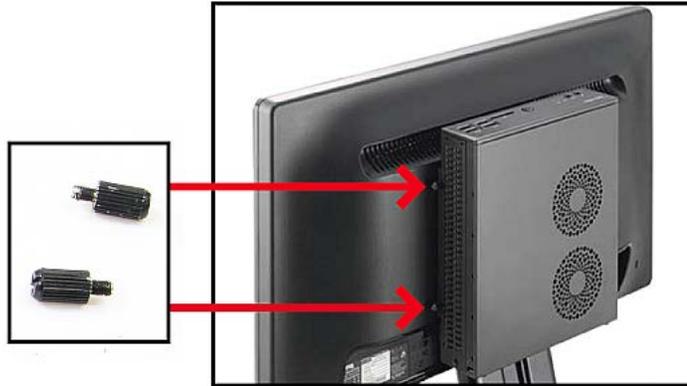

5. The Dominion User Station is now securely attached to the monitor.




---

### Rackmount Using L-type Brackets (Optional)


To mount the User Station in a 19-inch data center rack, you must purchase the L-type rackmount kit from Raritan. One rackmount kit contains two L-type brackets, the cable-support bar and a number of screws.

The following diagram shows the L-type bracket.

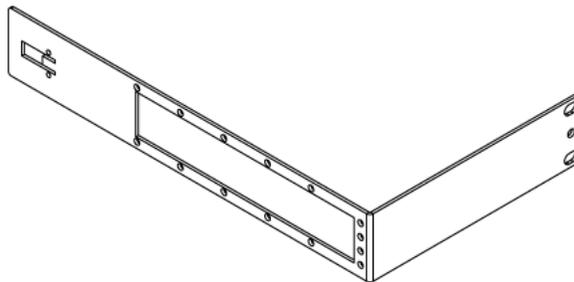

► **To rackmount the User Station using L-type brackets:**

1. Attach the L-type brackets to two sides of the User Station, using the included screws.
2. Secure the cable-support bar to the back end of the L-type brackets, using two of the included screws.

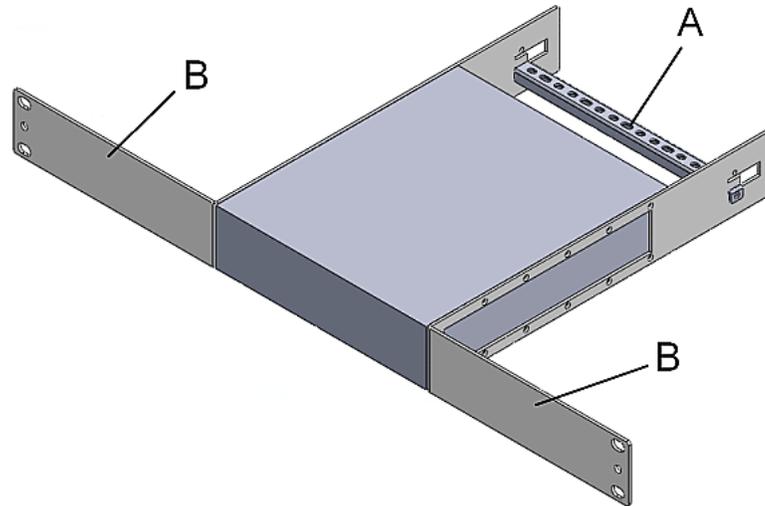

Letter	Item
A	Cable-support bar
B	Front arms of the L-type brackets

3. Attach the L-type brackets to the rack through the screw holes on the front arms, using your fasteners.

# Chapter 3 Managing KVM Switches and Ports

KVM switches and their KVM ports are added, configured and deleted in the User Station Configuration window.

Note: If you are using CC-SG integration, you do not need to add KVM switches in this way. See **CC-SG Integration** (see "**CommandCenter Secure Gateway (CC-SG) Integration**" on page 128).

## In This Chapter

User Station Configuration.....	26
Adding KVM Switches.....	28
Editing KVM Switches.....	29
Deleting KVM Switches .....	30
Importing KVM Switches .....	30
Configuring KVM Ports.....	33


---

## User Station Configuration


The User Station Configuration window is not displayed by default.

► **To launch this window:**

- Press *Ctrl+Alt+C*.
- OR choose Main Menu > User Station Configuration.

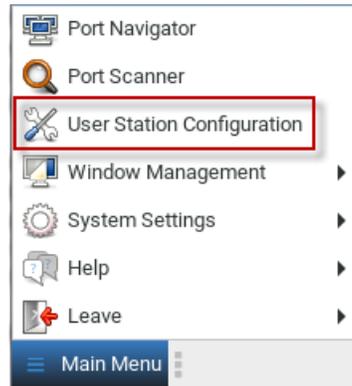

The User Station Configuration window opens.

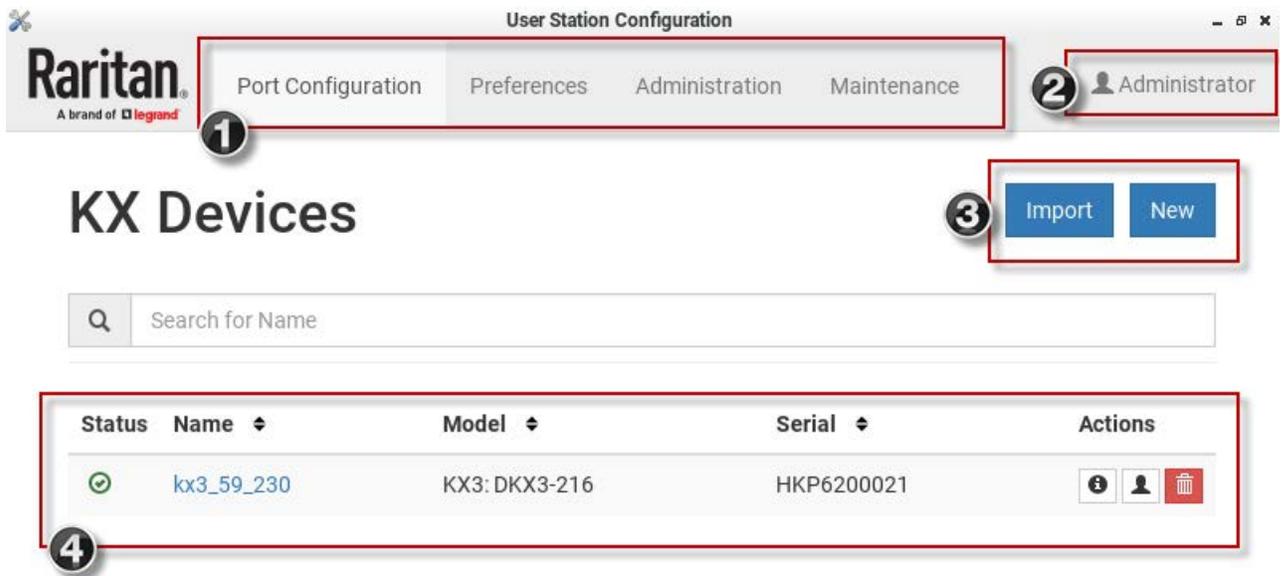

1. **Configuration tabs:**
  - *Port Configuration:* Manage KVM switches and KVM ports. See the other sections in this chapter.
  - *Preferences:* Set personal preferences, such as audio settings. See **Setting User Preferences** (on page 93).
  - *Administration:* Manage administration tasks. See **Administration Features** (on page 104).
  - *Maintenance:* Manage maintenance tasks. See **Maintenance Features** (on page 138).
2. **Your user account:**  
Click to view your user account settings.
3. **Import button and New button:**  
Add or import KVM switches. See **Adding KVM Switches** (on page 28) or **Step 3: Add KX III KVM Switches** (see "Step 3: Add KX III KVM Switches (without CC-SG integration)" on page 12). See **Importing KVM Switches** (on page 30).
4. **A list of added KVM switches:**  
Click the desired KVM switch to show all of its KVM ports.

## Adding KVM Switches

All KX III KVM switches added to this User Station can be seen by all users who log in to this User Station although they can only access those switches if they have provided proper user credentials. See *Editing KVM Switches* (on page 29).

*Note: To add a KX device under CC-SG management, make sure "Allow direct access" is checked for the device in CC-SG, then add the KX device to Dominion User Station using an admin-level account that is different from the one used to authenticate the device on CC-SG. Or, you can use CC-SG integration. See **CC-SG Integration** (see "CommandCenter Secure Gateway (CC-SG) Integration" on page 128)*

► **To add a KVM switch:**

1. Click New in the User Station Configuration window. See *User Station Configuration* (on page 26).
2. The following page opens, and the user must enter the required information. See *Step 3: Add KX III KVM Switches* (see "Step 3: Add KX III KVM Switches (without CC-SG integration)" on page 12).

## Add new KX Device

Network Address

\* IP Address / Hostname

The given device will be added to the system-wide database of devices and hence its record can be seen and used by other users.

User Credentials

\* Username

\* Password

These credentials are used to query for port information of the KX Device. The credentials are not shared with other users and hence must be provided by each user individually.

- After clicking Add KX Device to save the data, the new KVM switch's content is shown.

---

**Important: When CC-SG is not being used, user credentials for a KVM switch are saved on a per-user basis. Other users must enter and save their own user credentials again for the KVM switches you added. See *Editing KVM Switches* (on page 29).**

---

## Editing KVM Switches

Added KVM switches are listed in the User Station Configuration window.

Each KVM switch has three icons in the Actions column. You must have Device Administration privileges to delete, edit or add KVM switches.

If you are not the one who added new KVM switches to the User Station, you must follow the procedure below to enter user credentials for newly-added KVM switches.

---

*Note: For the difference between a KVM switch's and the User Station's user credentials, see **Authentication of User Stations and KVM Switches** (on page 186).*

---

Name	Model	Serial	Actions
KX3	KX3: DIX3-808	HKU5A00076	  



► **To change the KVM switch's IP address/host name:**

1. Click the desired KVM switch's  button.
2. Click Edit to open the Edit KX Device page.
3. Modify the IP address or host name.
4. Click Save.

► **To enter new user credentials for a KVM switch:**

1. Click the  button of the desired KVM switch.
2. Enter new user credentials.
3. Click Save.

---

*Note: If you enter incorrect user credentials for a KVM switch, you may be blocked if User Blocking has been enabled on that KVM switch and too many incorrect attempts are made. When this occurs, contact the KVM switch's system administrator for help.*

---

## Deleting KVM Switches

The final button in the Actions column is used to delete this KVM switch.

Name	Model	Serial	Actions
KX3	KX3: DKX3-808	HKU5A00076	  



► **To delete a KVM switch:**

1. Click the desired KVM switch's  button.
2. Click OK on the confirmation message.

## Importing KVM Switches

Bulk Import and Update allows you to add or update multiple KVM switches at once using a CSV file found in the root folder of a connected USB storage device.

When you import, Dominion User Station adds devices detected as new by their IP address/hostname. Dominion User Station uses the credentials given in the CSV file. If credentials are blank in the file, none are added. When Dominion User Station detects that a device identified in the CSV file already exists in the system, the import updates the credentials as given in the CSV.

► **CSV file format:**


The CSV file contains 3 columns: <ip address or hostname>,<username>,<password>

See ***Bulk Import Examples*** (on page 33) for more details and limitations.

► **To import KVM switches:**

1. Click Import in the User Station Configuration window. See ***User Station Configuration*** (on page 26). The Bulk Import/Update KX Devices page opens.

- The Storage list displays all CSV files found in the root folder of connected USB storage devices. Click Rescan USB to refresh the list.

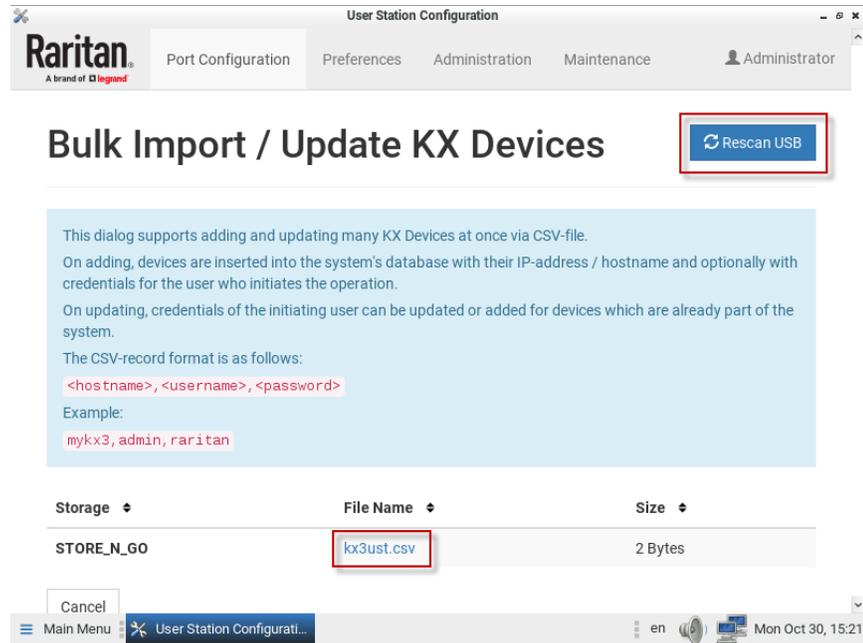

**Bulk Import / Update KX Devices** Rescan USB

This dialog supports adding and updating many KX Devices at once via CSV-file.  
 On adding, devices are inserted into the system's database with their IP-address / hostname and optionally with credentials for the user who initiates the operation.  
 On updating, credentials of the initiating user can be updated or added for devices which are already part of the system.  
 The CSV-record format is as follows:  
 <hostname>, <username>, <password>  
 Example:  
 mykx3, admin, raritan

Storage	File Name	Size
STORE_N_GO	kx3ust.csv	2 Bytes

Cancel  
 Main Menu User Station Configurati... en Mon Oct 30, 15:21

- Click the file you want to import. The Bulk Import page opens to display the file details:
  - File name and size
  - Errors, if any, with line number if appropriate
  - Total number of KX Devices to be added
  - Number of KX Devices to be added without credentials
  - Number of KX Devices to be updated with new credentials
  - Number of KX Devices to be updated by overwriting existing credentials

---

*Note: If errors are listed, the import button is disabled. Correct the file, click Rescan USB, and try again.*

---

**Attention**

This operation cannot be undone easily. Before starting the Import / Update, double check the shown statistics. The meanings are as follows:

- New KX Devices to be added:
  - *total*: total number of new devices to be inserted.
  - *without credentials*: number of devices that will be inserted without credentials, hence access won't be possible.
- Existing KX Devices to be updated:
  - *by adding new credentials*: number of devices for which credentials will be set for the first time.
  - *by overwriting existing credentials*: number of devices whose credentials will be overwritten, hence access might be lost in case of a faulty records in CSV-file.

<b>File:</b>	import.csv
<b>Size:</b>	46 Bytes
<b>Syntax and Format Check:</b>	✓ OK
<b>New KX Devices to be added:</b>	2 total ✓ OK 1 without credentials

 Start the Import / Update	<input type="button" value="Cancel"/>
-------------------------------------------------------------------------------------------------------------	---------------------------------------

4. Click Start the Import/Update in the details dialog. Import progress shows in the dialog. When complete, a success message appears in the main page.

---

## Bulk Import Examples

### ▶ Import / update listed KX switches:

```
192.168.2.104,admin,raritan
192.168.2.103,thomas,thomas
192.168.3.30,admin,raritan
192.168.5.52,user,password
```

### ▶ Special characters and escaping

Line 1 is an example of using comma in a value.

Line 2 is an example for escaping ", the resulting password string is "password"

```
192.168.2.104,admin,"rar,itan"
192.168.5.52,user,"""password"""
```

---

*Note: If you create the CSV file using Microsoft Excel or similar tools, you do not need to escape special characters. These tools handle the special characters automatically when creating the CSV file. Check the resulting CSV file if you are not sure.*

---

### ▶ Commenting out

Use the hashtag character (#) in the first position of a line to comment out the line. Hostnames are not allowed to contain #.

```
192.168.2.104,admin,raritan
#192.168.2.103,thomas,thomas
#192.168.3.30,admin,raritan
192.168.5.52,user,password
```

---

## Configuring KVM Ports

A KVM switch's ports are shown only after a KVM switch is selected.

### ▶ To configure a KVM port:

1. Click the desired KVM switch, and all of its KVM ports are listed on the screen. Note, to return to the devices view, click the Back to all KX Devices link
  -  indicates that the KVM port has been configured as a favorite port.
  -  indicates that the port is included in Port Scanner.
  -  indicates that the port is configured to automatically connect to audio when the KVM connection launches.

- The icon shown in the top-right corner of the Ports section indicates the KVM port information retrieval status. In this example, there is a green checkmark. See *Port Data Retrieval Status* (on page 36).

**Ports of thre-KX3** New KX Device 

Name	No.	Type	Status	Availability	Hotkey	Action
Local Port (DVI)		1	DVM-DVI	up	idle	Ctrl+ Alt+ A 
Windows Box	 Q	2	Dual-VM	down	idle	
Windows Box 2		5	VM	down	idle	
Non VM Port	Q	6	DCIM	up	idle	
thre-KXUST	  Q	7	DVM-DP	up	idle	
PX2 on PowerPort	8	PowerStrip	up			
Windows Box Dual		Dual Monitor				
Windows Box Dual 1	3	VM	down	idle		
Windows Box Dual 2	4	VM	down	idle		

[Back to all KX Devices](#)

2. Click  in the Action column of the KVM port that you want to configure. A page similar to the following appears.

## Edit Settings for Dual Monitor Port

You can assign a Hotkey for quickly accessing this KVM port.  
**Note:** Keypad keys are not recognized. Please use regular number keys only.

**Note:** Audio is only supported for Dual-VM targets (including DVM-DVI, DVM-HDMI and DVM-DP variants).

Hotkey Ctrl+Alt + A

Favorite

Automatically connect Audio

Include in Port Scanner

Save Cancel

3. Configure the port as needed.

Checkbox	Function
Hotkey	<p>Assign a hotkey combination for quickly accessing this KVM port. Available options include:</p> <ul style="list-style-type: none"> <li>▪ <i>Ctrl + Shift + &lt;character&gt;</i></li> <li>▪ <i>Ctrl + Alt + &lt;character&gt;</i></li> <li>▪ <i>Shift + Alt + &lt;character&gt;</i></li> <li>▪ <i>Ctrl + Shift + Alt + &lt;character&gt;</i></li> </ul> <p>&lt;character&gt; is an alphanumeric character or function key.</p> <p>Some hotkey combinations cannot be used for port access and thus are not available. See <b><i>Unavailable Hotkeys for Port Access</i></b> (on page 35).</p>
Favorite	If this checkbox is selected, this KVM port is shown in the Favorite Ports panel. See <b><i>Port Navigator</i></b> (on page 39).
Automatically connect Audio	Audio playback device will automatically be connected to this port at target launch.
Include in Port Scanner	Add the port to the port scanner. See <b><i>Port Scanner</i></b> (on page 48).

4. Click Save.

---

### Unavailable Hotkeys for Port Access

The following hotkey combinations are not available for accessing KVM ports.

Unavailable hot keys	Notes
Ctrl + Shift + <number>	<number> = 0 to 9
Ctrl + Shift + Alt + <number>	
Shift + Alt + <number>	
Ctrl + Alt + <function_key>	<function_key> = F1 to F12

Unavailable hot keys	Notes
Ctrl + Alt + C Ctrl + Alt + F Ctrl + Alt + L Ctrl + Alt + M Ctrl + Alt + N	These hotkeys can be used if you first disable them as User Station hotkeys. See Hotkeys for Controlling the User Station.

Besides, you must NOT use the hotkeys specified in the Desktop Settings for port access. See Desktop Settings.

### Port Data Retrieval Status

An icon is displayed in the top-right corner of the Ports section in the User Station Configuration window. This icon indicates the data retrieval status of the KVM ports on the selected KVM switch.

## Ports of kx3\_59\_230

New KX Device

Back to all KX Devices



Name	No.	Type	Status	Availability	Hotkey	Action
Dominion_KX3_Port3	3		down	idle		
Dominion_KX3_Port4	4		down	idle		


You can click this icon to view additional information.

The icon changes depending on the current retrieval status of KVM port information.

Icon	Port data retrieval state
	Port information on the selected KVM switch is accessible.
	Port information on the selected KVM switch is NOT accessible. Possible causes may include: <ul style="list-style-type: none"> <li>▪ Incorrect user credentials are entered for the KVM switch.</li> <li>▪ The presented certificate of the device cannot be verified, when certificate checking is enabled</li> <li>▪ Network connectivity issues. For example, the selected KVM switch is not connected to the network.</li> </ul>
	Port information on the selected KVM switch is NOT accessible because NO user credentials have been entered for this KVM switch. See <i>Editing KVM Switches</i> (on page 29).

The port data retrieval status will affect the device and port status shown in the Port Navigator window. See *Identifying States of KVM Switches and Ports* (on page 41).

## Chapter 4 Navigation and Access to KVM Ports

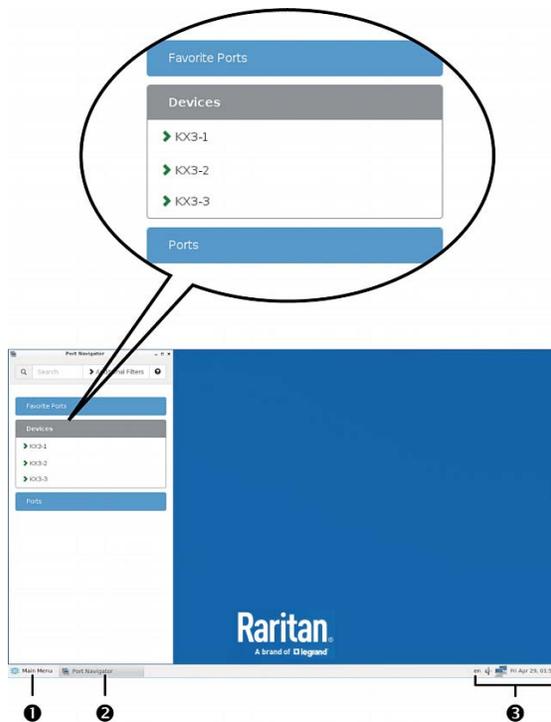

Port access is performed in the Port Navigator window, which contains three panels for accessing KVM ports: *Favorite Ports*, *Devices* and *Ports*.

The Navigator remembers the last-opened panel and returns to it when Navigator is opened again.

---

*Note: When you are logged in as a CC-SG user, the Ports panel is labeled CC-SG Ports. See **Navigator with CC-SG Integration** (on page 132).*

---

► **To access a KVM port:**

1. Click a panel.  
Once opened, the panel color turns gray.
2. Click a KVM switch if the panel you opened is the Devices panel.
3. Click a KVM port.

For details, see **Step 4: Access KVM Switches and KVM Ports** (see "**Step 4: Access KVM Switches and KVM Ports (without CC-SG integration)**" on page 14).

*Note: The User Station CANNOT access a KVM port that is connected to a tiered KVM switch or a blade chassis server. Therefore, such KVM ports are not shown in the Port Navigator window.*

## In This Chapter

Port Navigator .....	39
Identifying States of KVM Switches and Ports .....	41
Identifying External Media .....	44
Dual Video Port Status .....	44
Using Search .....	45
Using Filters .....	45


---

## Port Navigator


The Port Navigator window is displayed by default.

► **To launch Port Navigator:**

- Press *Ctrl+Alt+N*.
- OR choose Main Menu > Port Navigator.

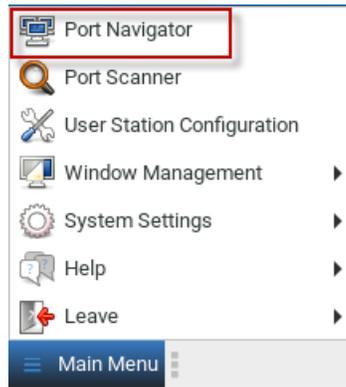

The Port Navigator window opens.

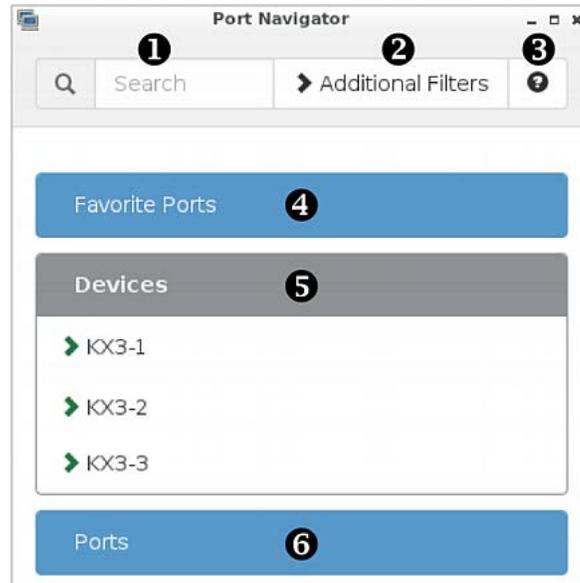

1. **Search:**  
Searches for KVM ports or switches containing the search word(s). See *Using Search* (on page 45).
2. **Additional Filters:**  
Determines which KVM switches and ports are displayed in this window based on KVM switch and port states. See *Using Filters* (on page 45).
3. **Help ?:**  
Shows the colors and icons denoting KVM switch and port states. See *Identifying States of KVM Switches and Ports* (on page 41).
4. **Favorite Ports panel:**  
Shows a list of the favorite KVM ports you have configured. See *Configuring KVM Ports* (on page 33).
5. **Devices panel:**
  - Shows a list of KVM switches. To view any switch's KVM ports, click the KVM switch.
  - The default is to show KVM switches whose status is Normal or Unknown. See *Using Filters* (on page 45).
6. **Ports panel:**
  - Shows a list of KVM ports by name.
  - The default is to show KVM ports whose status is Up. See *Using Filters* (on page 45).

- For dual port video, the name of the dual port video group is displayed instead of the port names. Dual port video groups whose primary port is Up will show in the list.
- When you are logged in as a CC-SG users, this panel is labeled CC-SG Ports. See *Navigator with CC-SG Integration* (on page 132).

---

## Identifying States of KVM Switches and Ports

In the Port Navigator window, different icons and colors are applied to indicate current states of the added KVM switches and ports.

Icon and color information similar to the following is available by clicking



Doubled icons indicate a Dual Video Port.

### ► Port icons:

Icon	Port state
	Up - no KVM sessions are active
	Down
	Up - Dual Video Port
	Up - at least one KVM session is active
	Up - dual KVM sessions are active
	Busy - an exclusive KVM session is active

### ► Port icon colors:

The following table explains the color changes only. Please ignore the icon shapes.

Color	Port state
	Accessible
	Busy
	Down
	Status unknown
	Status being updated

▶ **KVM switch's icon and colors:**

Icon in color	KVM switch state
	Normal (accessible)
	Error while communicating with the KVM switch
	Status unknown
	Status being updated

▶ **Examples of KVM port states:**

Icon in color	Port state
	Up, accessible, but no KVM session is active
	Up, accessible, dual video, but no KVM session is active
	Down
	Up, accessible, and at least one active KVM session
	Up, accessible, dual video port, active KVM session
	Up and busy



---

*Note: The KVM port data retrieval status will impact the device and port status shown in the Port Navigator window. See **Port Data Retrieval Status** (on page 36).*

---

## Identifying External Media

When external media are connected to a port via virtual media, the media icons display after the port name/number.

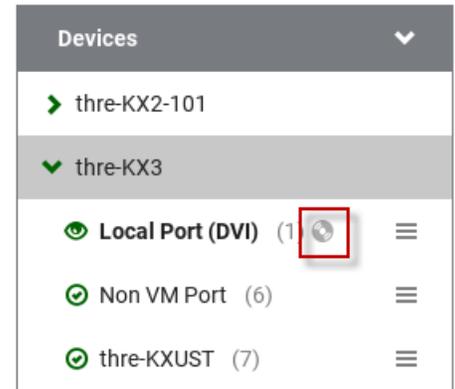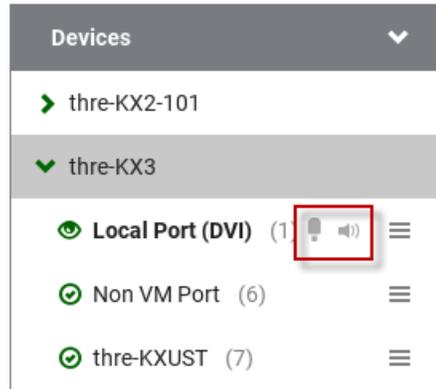

Icon	Port state
	Mass Storage
	ISO/CD device
	Microphone
	Speaker
	Smart Card Reader

## Dual Video Port Status

The primary port must have Status=Up to make a connection to both ports. The secondary port cannot be connected to directly, so its status is not reflected in the Navigator.

If the secondary port has Status=Down, there is still a dual monitor connection to both ports. There is either a "No Video" message or an error message such as "Cannot switch to port" on the secondary client. In this case, User Station acts differently from KX3, because User Station allows the user to connect to any target, independent of the status, using Filters. See *Using Filters* (on page 45).

---

## Using Search

The search box allows you to search for the KVM ports or switches that match the user's search words.



► **To search for KVM ports or switches:**

1. Open the panel where you want to perform the search function.
  - To search for a KVM switch, click the Devices panel.
    - To search KVM ports of a specific KVM switch in addition to KVM switches, you can click the desired KVM switch to have its KVM ports displayed prior to using the Search function.

---

*Note: The User Station will NOT search the KVM ports of those unselected KVM switches in the Devices panel.*

---

- To search for a KVM port only, click the Ports panel.
  - To search for a "favorite" KVM port, click the Favorite Ports panel.
2. Type the search word(s) in the Search box. Words are not case sensitive.
  3. The currently opened panel immediately shows the search result.
    - If no KVM ports are found, the panel displays this message -- *No port found.*
    - If no KVM devices are found, the panel displays this message -- *No device found.*

---

## Using Filters

Per default, the Port Navigator window only shows KVM switches that can be communicated properly, and the KVM ports that are up. You can change the display criteria by using filters.



► **To change the filter:**

1. Click Additional Filters, and the following checkboxes will appear.

**Device Connectivity**

- Normal
- Error
- Unknown

**Port State and Availability**

- Up and Idle
- Up and Connected
- Up and Busy
- Down

2. Select or deselect any checkboxes to determine what kinds of KVM switches and KVM ports are shown.

Checkbox	KVM switch's state
Normal	The KVM switch can communicate with the User Station, and the device state is normal.
Error	The KVM switch cannot communicate with the User Station.
Unknown	The KVM switch can communicate with the User Station but cannot determine its device state.


Checkbox	KVM port's state
Up and Idle	The port is up, accessible and no KVM sessions are active.
Up and Connected	The port is up, and at least one KVM session is active.
Up and Busy	The port is up, but busy because an exclusive KVM session is active.
Down	The port is down.

3. When completed, click Additional Filters again to hide the options.

## Chapter 5 Port Scanner

The Port Scanner displays an assortment of ports that you select, by scanning through each connection for a specified period of time. You can launch a KVM connection to any port shown in the scanner.

- Launch the Port Scanner from the Main Menu.

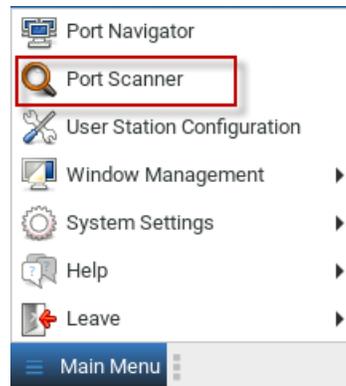

- Ports are included by selecting the setting "Include in Port Scanner" when configuring the port. Go to User Station Configuration > Port Configuration settings. See *Configuring KVM Ports* (on page 33) for detailed instructions.

Hotkey  +

Favorite

Automatically connect Audio

Include in Port Scanner

- The scanner allows you to pause and restart the scanning, open KVM sessions, show and hide thumbnails of each port, and set the scan options. See *Operating the Port Scanner* (on page 49).
- Audit log entries are created for each individual scanned port when you scan KX2-101 ports. When scanning KX3 ports, an audit log entry is created at the start and end of the scan session.
- CC-SG ports do not support scanning. When logged in as a CC-SG user, the Port Scanner option is hidden.
- Window Management functions do not apply to the Port Scanner window.


## In This Chapter

Operating the Port Scanner.....	49
Scanner Options.....	51

---

## Operating the Port Scanner

-  The main toolbar at the top of the Port Scanner has 4 buttons:
-  Resume the scanner.
  -  Pause the scanner.
  -  Show or hide the thumbnails.
  -  Configure the scanner options. See *Scanner Options* (on page 51).

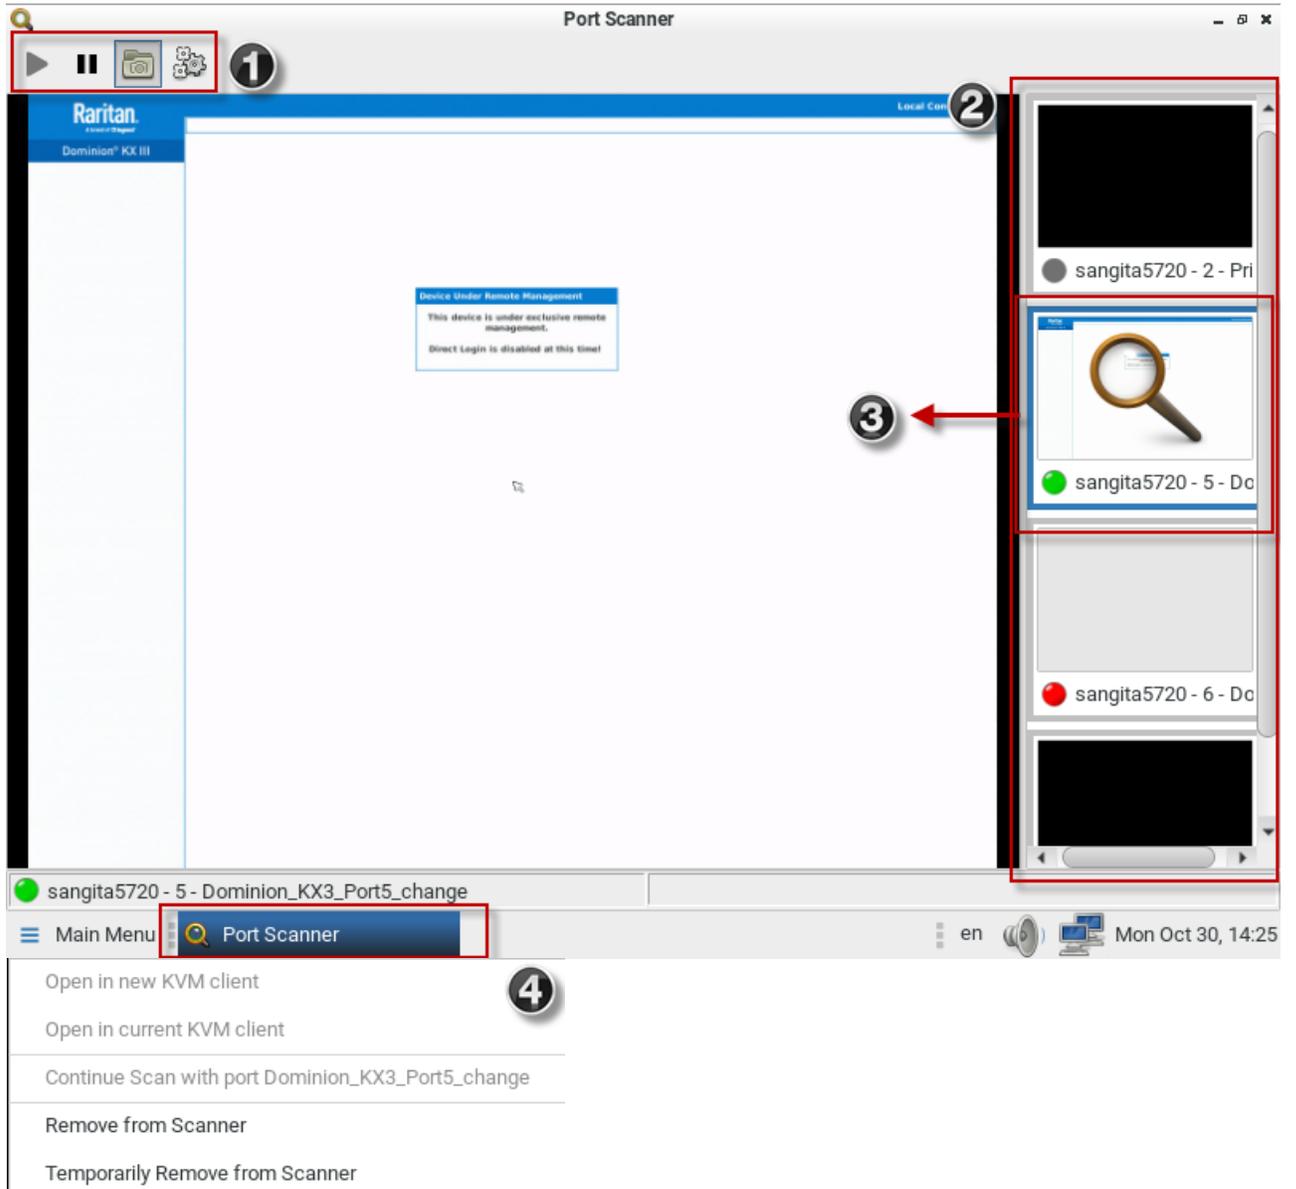

**2** The thumbnail preview shows all included ports. Choose vertical or horizontal placement in the scanner options.

**3** The currently displayed port is highlighted in the thumbnails preview. Click the thumbnail once to view the port in the scanner. Double-click the thumbnail to open a KVM session to the port. Note that the default action of a double-click can be configured in Launch Settings. See *KVM Client Settings* (on page 93)

**4** Right-click a thumbnail to open a pop-up menu with more options:

- Open in new KVM client: launch a KVM session to the port in a new window.
- Open in current KVM client: launch a KVM session to the port in the current window.
- Continue Scan with port "port name": Start scanning the selected port.
- Remove from scanner: Turns off the "Include in Port Scanner" setting for the port.
- Temporarily Remove from Scanner: The port is removed from this scanner session, but it is included the next time the scanner is started.

---


## Scanner Options

The port scanner can be configured to set intervals and delays, thumbnail orientation, and pause behavior.

### ► To set scanner options:

1. In the Main Menu, click Port Scanner to open the port scanning window.
2. Click the Scan Settings icon to open the options.
3. Configure intervals and delays:
  - a. Port Display Interval: Select the number of seconds to display each port before switching to next
  - b. Interval between Ports: Select the number of seconds to pause after Port Display Interval ends.
4. Configure settings:
  - a. Thumbnails orientation: Select Vertical or Horizontal to position thumbnails in relation to scan window.
  - b. Select the Pause Scanner when opening KVM Sessions checkbox if the scanning should stop when you open a port into a full KVM session.

5. Click OK.

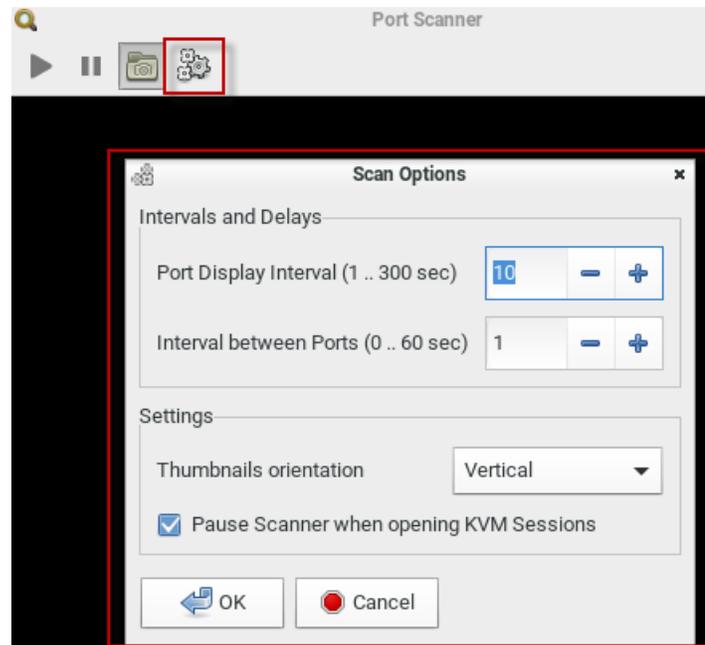


## Chapter 6 Using the KVM Client

A KVM Client window opens after launching a KX III KVM port where a server is physically connected. When dual video ports are configured on a KX III device, connecting to the dual video port group opens two KVM client windows that are bound together. See ***Dual Video Port Connections*** (on page 92).

The server or PC connected to a KVM port is called the *target server*.

The Dominion User Station's KVM Client settings are configured through the toolbar only. No menu bar is available.

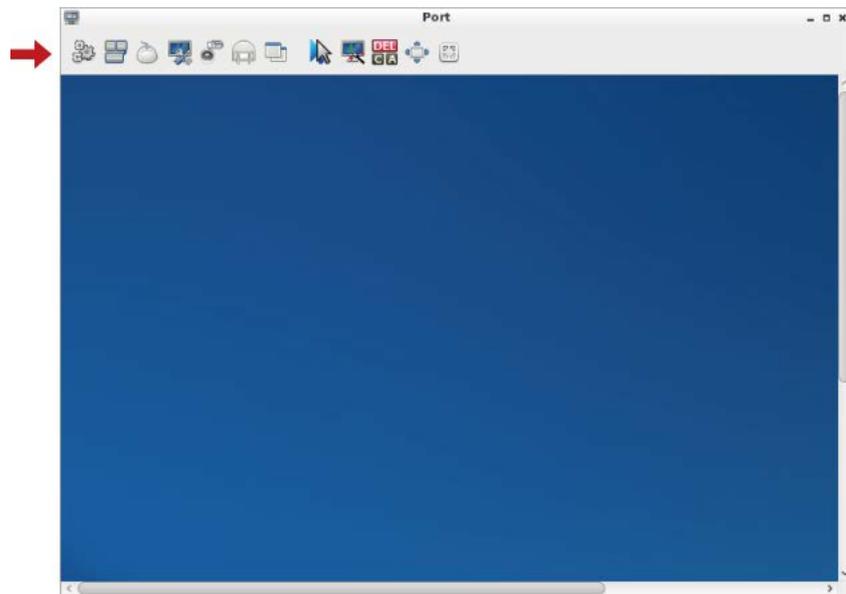

### In This Chapter


Connection Properties .....	54
Keyboard Macros.....	58
Mouse Settings .....	59
Video Settings .....	64
Peripheral Devices and USB Settings.....	69
Power Control.....	87
View Settings .....	88
Window Management.....	90
Dual Video Port Connections.....	92

## Connection Properties

Connection properties manage streaming video performance over connections to target servers. The properties are applied only to your connection, not the connection of other users accessing the same target server.

► **To configure connection properties:**

1. Click  to open the Connection Properties dialog.

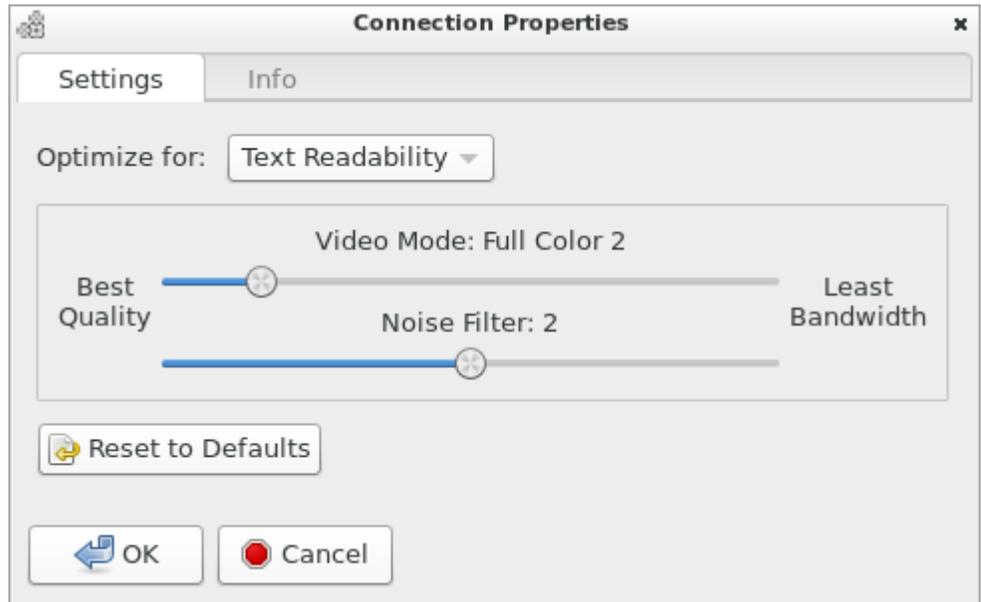

2. The default connection settings are the optimal settings for video performance most of the time. Do NOT make changes unless required. See *Default Connection Properties* (on page 56).


Setting	Description
Optimize for	Determine which aspect of video data is optimized for. There are two options: <ul style="list-style-type: none"> <li>▪ <i>Text Readability</i> (on page 57)</li> <li>▪ <i>Color Accuracy</i> (on page 57)</li> </ul>

Setting	Description
Video Mode	<p>This slider controls the video quality as well as the bandwidth.</p> <ul style="list-style-type: none"> <li>▪ Left: higher quality with higher bandwidth consumed.</li> <li>▪ Right: lower quality with less bandwidth consumed. This is useful for low-bandwidth connections.</li> </ul> <p>See <b>Video Mode</b> (on page 57).</p>
Noise Filter	<p>This slider controls the noise filter threshold.</p> <ul style="list-style-type: none"> <li>▪ Left: higher threshold.</li> <li>▪ Right: lower threshold.</li> </ul> <p>See <b>Noise Filter</b> (on page 58).</p>
Reset to Defaults	<p>Reset connection properties to the factory defaults.</p>

3. Click OK to save any changes made. The settings are stored persistently for the accessed KVM port.

► **To view connection information:**

- Click the Info tab in the same dialog.

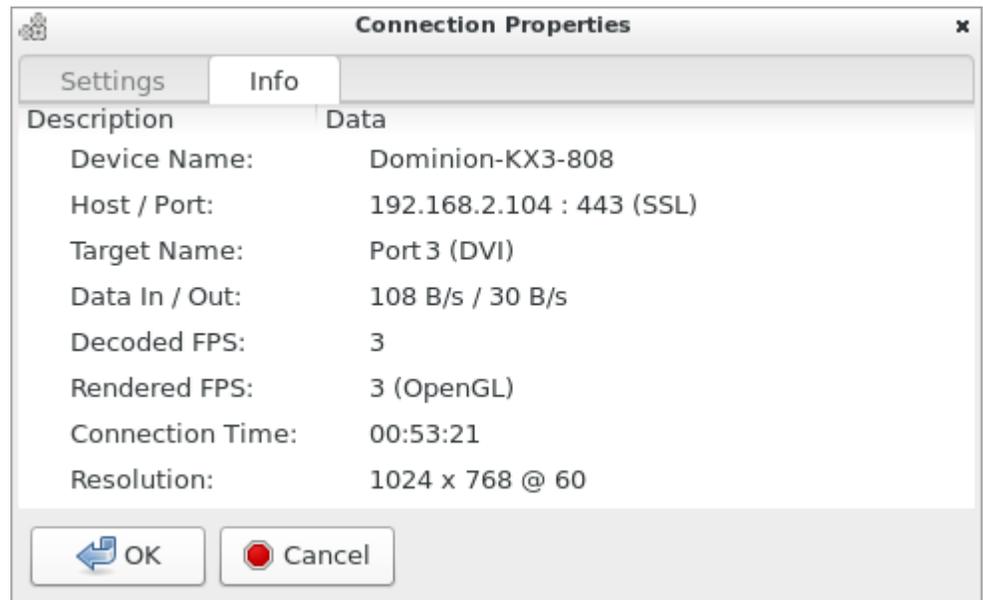

Item	Description
Device Name	The KVM switch's name.
Host / Port	The KVM switch's IP address, and the TCP/IP port used to access the KVM switch.
Target Name	The accessed KVM port's name.
Data In / Out	Rate of data received and sent out to the KVM switch in bytes per second.
Decoded FPS	Number of frames per second that were received and decoded by the KVM Client.
Rendered FPS	Number of frames per second that were displayed onscreen. Usually this number is similar to "Decoded FPS", but it may be lower on high graphics demand.
Connection Time	Duration of the current connection.
Resolution	Video resolution of the target server connected to this KVM port.

---

### Default Connection Properties

The Dominion User Station comes configured to provide optimal performance for the majority of video streaming conditions.

Default connection settings are:

- **Optimized for: Text Readability** - video modes are designed to maximize text readability.  
This setting is ideal for general IT and computer applications, such as performing server administration.
- **Video Mode** - defaults to Full Color 2.  
Video frames transmit in high-quality, 24-bit color. This setting is suitable where a high-speed LAN is used.
- **Noise Filter** - defaults to 2.  
The noise filter setting does not often need to be changed.

---

### Text Readability

Text Readability is designed to provide video modes with lower color depth but text remains readable. Greyscale modes are even available when applying lower bandwidth settings.

This setting is ideal when working with computer GUIs, such as server administration.

When working in full color video modes, a slight contrast boost is provided, and text is sharper.

In lower quality video modes, bandwidth is decreased at the expense of accuracy.

---

### Color Accuracy

When Color Accuracy is selected, all video modes are rendered in full 24-bit color with more compression artifacts.

This setting applies to viewing video streams such as movies or other broadcast streams.

In lower quality video modes, sharpness of fine detail, such as text, is sacrificed.

---

### Video Mode

The Video Mode slider controls each video frame's encoding, affecting video quality, frame rate and bandwidth.

In general, moving the slider to the left results in higher quality at the cost of higher bandwidth and, in some cases, lower frame rate.

Moving the slider to the right enables stronger compression, reducing the bandwidth per frame, but video quality is reduced.

In situations where system bandwidth is a limiting factor, moving the video mode slider to the right can result in higher frame rates.

When Text Readability is selected as the Optimized setting, the four rightmost modes provide reduced color resolution or no color at all.

These modes are appropriate for administration work where text and GUI elements take priority, and bandwidth is at a premium.

---

## Noise Filter

Unless there is a specific need to do so, do not change the noise filter setting. The default setting is designed to work well in most situations.

The Noise Filter controls how much interframe noise is absorbed by the Dominion User Station.

Moving the Noise Filter slider to the left lowers the filter threshold, resulting in higher dynamic video quality. However, more noise is likely to come through, resulting in higher bandwidth and lower frame rates.

Moving the slider to the right raises the threshold, allows less noise and less bandwidth is used. Video artifacts may be increased.

Moving the noise filter to the right may be useful when accessing a computer GUI over severely bandwidth-limited connections.

---

## Keyboard Macros

Click  to select one of the pre-programmed hotkey macros.



Send Ctrl+Alt+Del  
Send LeftAlt+Tab

---

*Note: If you have manually created any hotkey macros and have them enabled, these macros are displayed below "Send LeftAlt+Tab." See **Managing Keyboard Macros** (on page 96).*

---

▶ **Send Ctrl+Alt+Del:**

To send this key sequence to the target server you are accessing:

- Click  > Send Ctrl+Alt+Del.
- OR click   .

▶ **Send LeftAlt+Tab:**

This hotkey macro switches between open windows on the target server you are accessing.

Warning: If you physically press *Ctrl+Alt+Del* or *Left Alt+Tab* using the KEYBOARD, these key sequences are processed on the User Station by default, instead of being transferred to the target server. To change the default behaviors so that they are processed on the target servers after being pressed on the keyboard, see Desktop Settings.

---


## Mouse Settings

You can operate in either single mouse mode or dual mouse mode.

Single mouse mode displays only one mouse pointer while dual mouse mode displays two.

In any mouse mode, when the mouse pointer lies within the KVM Client's target server window, mouse movements and clicks are directly transmitted to the target server.

Click  to select one mouse command or mode.

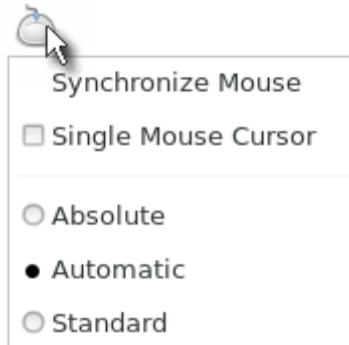

Single Mouse Cursor is for single mouse mode. Absolute, Automatic and Standard are the dual mouse modes.

---

**Important:** Make sure you have configured mouse settings on the target servers properly. For information on configuring mouse settings of target servers, refer to the KX III KVM switch's user documentation from its application or the Dominion KX III section of the Raritan website's *Support page* (<http://www.raritan.com/support>).

---

### Synchronize Mouse

In the dual mouse mode, the Synchronize Mouse command forces realignment of the target server's mouse cursor with the User Station's. See *Dual Mouse Modes* (on page 61).

► **To synchronize the mouse cursors:**

- Click  > Synchronize Mouse.
- OR click .

---

*Note: This option is available in Automatic and Standard mouse modes only. However, mouse synchronization may not always be successful with this option. When this occurs, first check **Mouse Synchronization Tips** (on page 63). If the mouse synchronization issue still cannot be resolved, enter the Absolute or single mouse mode. See **Single Mouse Cursor** (on page 60) and **Absolute Mouse Mode** (on page 61).*

---

---


### Single Mouse Cursor

In the single mouse mode, you only use the target server's mouse cursor, and the User Station's mouse cursor no longer appears on the screen.

On fast LAN connections, you can use single mouse mode, and view only the target server's pointer.

► **To enter the single mouse mode:**

1. Click  > Single Mouse Cursor.
2. Click OK on the confirmation message.

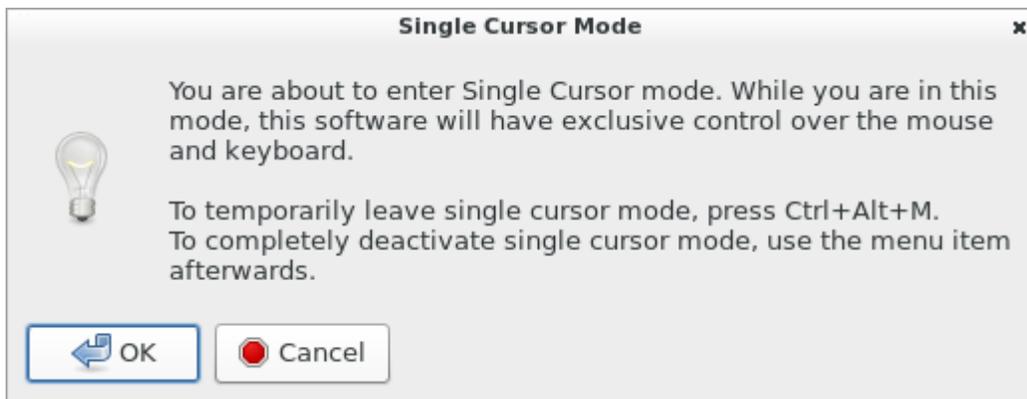

► **To temporarily exit the single mouse mode and then return to this mode:**

1. Press Ctrl+Alt+M on your keyboard. A message appears, indicating that the single mouse mode is temporarily suspended.  
Now you can use the mouse to control the User Station.
2. To return to the single mouse mode, click anywhere on the target server's image in the KVM Client.

---

### Dual Mouse Modes

In the dual mouse modes, two cursors appear onscreen. They are:

- The mouse cursor of the User Station.
- The mouse cursor of the target server connected to the KVM port you are accessing.

Two mouse cursors align if properly configured.

While in motion, the User Station's mouse pointer slightly leads the target server's mouse pointer.

### Absolute Mouse Mode

In this mode, absolute coordinates are used to keep the User Station's and target server's cursors in synch, even when the target server's mouse is set to a different acceleration or speed.

This mode is supported on target servers with USB ports and is the default mode for virtual media CIMs.

Use of virtual media CIMs on target servers is required for this mouse mode. See *Virtual Media CIMs* (on page 78).

Most modern operating systems on the target servers shall support the Absolute mouse mode.

---

*Note: Some Linux, UNIX, Solaris or very "unusual" operating systems as well as some USB profiles may not support the Absolute mouse mode. In this case, use other mouse modes. For detailed information of each USB profile, see the section titled "Available USB Profiles" in the KX III KVM switch's user documentation, which is accessible from the KVM switch application or the Raritan website's **Support page** <http://www.raritan.com/support/>.*

---

► **To enter the Absolute mouse mode:**

- Click  > Absolute.

### Automatic Mouse Mode

In this mode, the User Station can detect the target server's mouse settings and synchronize the mouse cursors accordingly, allowing mouse acceleration on the target server.

This mode is the default for non-VM target servers.

---

*Note: A non-VM target server is the target server using a CIM that does not support virtual media.*

---

▶ **To enter the Automatic mouse mode:**

- Click  > Automatic.

▶ **Automatic mouse synchronization requirements:**

The Synchronize Mouse command automatically synchronizes mouse cursors during moments of inactivity in the Automatic mouse mode. See **Synchronize Mouse** (on page 60).

For this to work properly, the following conditions must be met:

- The active desktop should be disabled on the target server.
- No windows should appear in the top-left corner of the target server's page.
- There should not be an animated background in the top-left corner of the target server's page.
- The target server's mouse cursor shape should be normal and not animated.
- The target server's mouse speeds should not be set to very slow or very high values.
- Advanced mouse properties such as "Enhanced pointer precision" or "Snap mouse to default button in dialogs" should be disabled on the target servers.
- Choose "Best Possible Video Mode" in the Video Settings dialog of the KVM Client.
- The edges of the target server's video should be clearly visible (that is, a black border should be visible between the target server's desktop and the KVM Client window when you scroll to an edge of the target video image).

After autosensing the target server's video, manually perform the Synchronize Mouse command. This also applies when the resolution of the target server changes if the mouse cursors start to desync from each other.

If automatic mouse synchronization fails, this mode will revert to standard mouse synchronization behavior. See **Standard Mouse Mode** (on page 63).

Note that mouse configurations will vary on different target servers' operating systems. Consult your OS guidelines for further details.

---

*Note: Automatic mouse synchronization does not work with UNIX target servers.*

---

### Standard Mouse Mode

Standard mouse mode uses a standard mouse synchronization algorithm. The algorithm determines relative mouse positions on the User Station and target server.

In order for the User Station's and target server's mouse cursors to stay in synch, mouse acceleration must be disabled. Additionally, specific mouse parameters must be set correctly.

#### ► To enter the Standard mouse mode:

- Click  > Standard.

---

### Mouse Synchronization Tips

If you have an issue with mouse synchronization:

1. Verify that the selected video resolution and refresh rate are among those supported by your User Station.

The KVM Client's Connection Properties dialog displays the actual values the User Station is seeing.

2. Force a video auto-sense by clicking the KVM Client's Auto-sense

Video button .

3. If that does not improve the mouse synchronization (for Linux, UNIX, and Solaris target servers):

- a. Open a terminal window.
- b. Enter this command: `xset mouse 1 1`
- c. Close the terminal window.

4. Click the KVM Client's mouse synchronization button .


---

*Note: If the mouse synchronization issue still cannot be resolved, enter the Absolute or single mouse mode. See **Single Mouse Cursor** (on page 60) and **Absolute Mouse Mode** (on page 61).*

---

## Video Settings

Click  to open the Video Settings dialog.

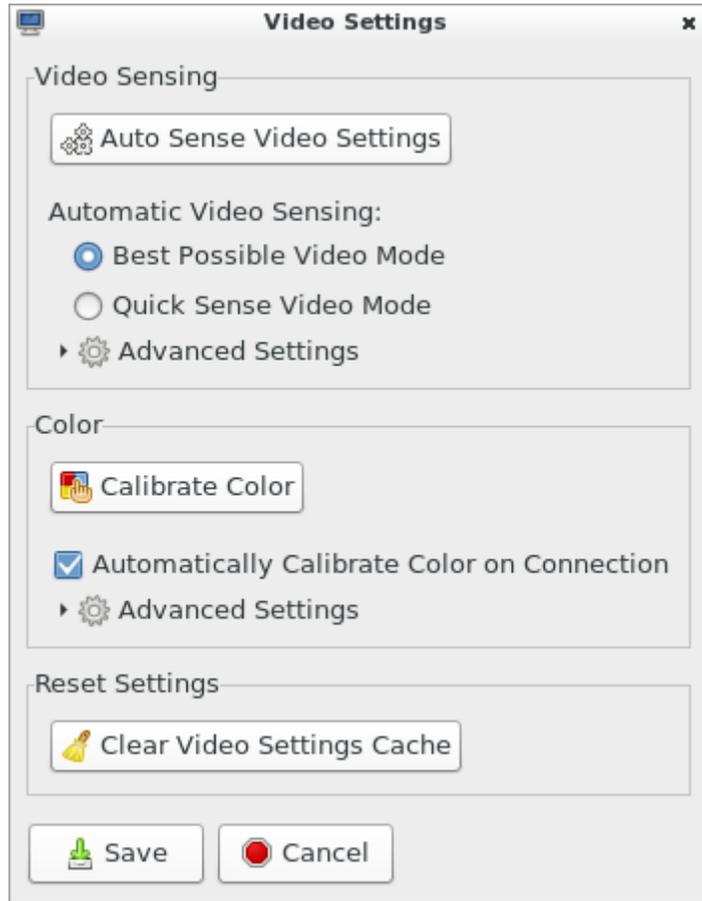

► **Video Sensing settings:**

Setting	Description
Auto Sense Video Settings	<p>This command automatically detects the target server's video settings (resolution, refresh rate) and redraws the video screen.</p> <p>Clicking  in the toolbar results in the same video re-sensing function.</p>

Setting	Description
Best Possible Video Mode	The User Station will perform the full Auto Sense process when switching target servers or target resolutions. Selecting this option calibrates the video for the best image quality.
Quick Sense Video Mode	The User Station will use a quick video Auto Sense in order to show the target server's video sooner.  This option is especially useful for entering a target server's BIOS configuration right after a reboot.
Advanced Settings	Adjusts the clock, phase, horizontal and vertical offset. See <b>Advanced Video Settings</b> (on page 66).

---

*Note: Some background screens, such as screens with very dark borders, may not center precisely. Use a different background or place a lighter colored icon in the upper-left corner of the screen.*

---

► **Color settings:**

Setting	Description
Calibrate Color	This command optimizes the color levels (hue, brightness, saturation) of the transmitted video images. The color settings are on a target server-basis.  Note that this command applies to the current connection only.
Automatically Calibrate Color on Connection	Selecting this checkbox causes the User Station to automatically update the color calibration once connected to a target server.
Advanced Settings	Adjusts brightness and contrast levels of red, green and blue colors. See <b>Advanced Color Settings</b> (on page 68).

► **Reset Settings:**

The Clear Video Settings Cache button resets the cache where video settings are stored, which is useful when old video settings no longer apply, such as when a target server is replaced.

After calibrating the colors for a target server, color values are cached and reused whenever accessing that server. Changing resolutions resets the video to the cached values again.


Note that changes to the brightness and contrast levels are NOT cached.

When resetting the video settings cache, the User Station automatically does a video auto-sense and color calibration. New values are cached and reused for accessing that target server next time.

---

**Advanced Video Settings**

In the Video Settings dialog, click Advanced Settings in the Video Sensing section to show additional settings.

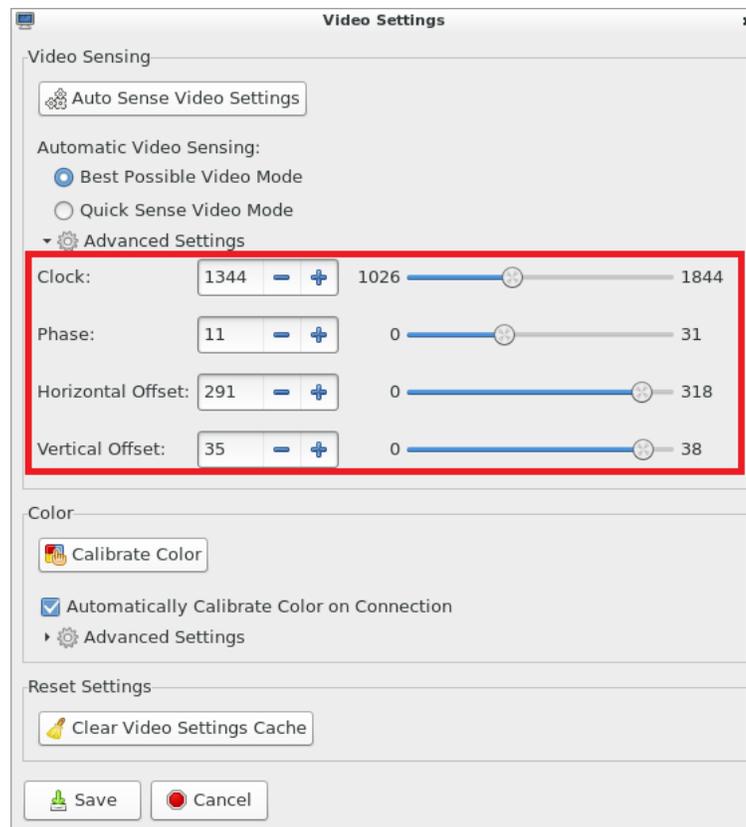


Click  or , drag sliders, or type a new numeric value in the text box to adjust corresponding settings.

Setting	Description
Clock	Controls how quickly video pixels are displayed across the video screen. Changes made to clock settings cause the video image to stretch or shrink horizontally.  Under most circumstances, this setting should not be changed because the autodetect is usually quite accurate.  Odd number settings are recommended.
Phase	Phase values range from 0 to 31 and will wrap around. Stop at the phase value that produces the best video image for the active target server.
Horizontal Offset	Controls the horizontal positioning of the target server display on your monitor.
Vertical Offset	Controls the vertical positioning of the target server display on your monitor.

### Advanced Color Settings

In the Video Settings dialog, click Advanced Settings in the Color section to show additional color settings.

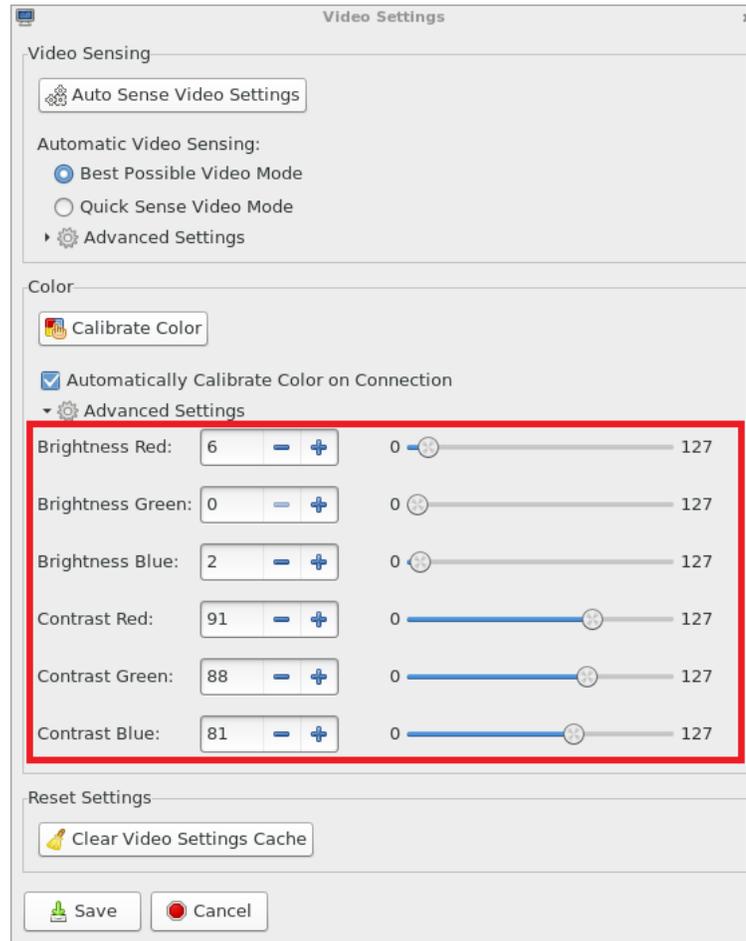

Click  or , drag sliders, or type a new numeric value in the text box to adjust corresponding settings.

Setting	Description
Brightness Red	Controls the brightness of the target server's display for the red signal.
Brightness Green	Controls the brightness of the green signal.
Brightness Blue	Controls the brightness of the blue signal.

Setting	Description
Contrast Red	Controls the red signal contrast.
Contrast Green	Controls the green signal contrast.
Contrast Blue	Controls the blue signal contrast.

---

## Peripheral Devices and USB Settings

Click  to open the "Audio, Mass Storage and SmartCard Devices" dialog, where you can virtually connect up to two devices of different types to a target server.




---

**Important:** It is strongly recommended to mount virtual media or audio devices onto the target server prior to the smart card reader. If the sequence is reversed, you will be logged out of the target's operating system as the card reader will be temporarily disconnected while connecting the audio or virtual media device.

---

Section	Description
Connect New Device	<ul style="list-style-type: none"> <li>• <i>Audio Device ...</i></li> </ul> <p>Click this button to virtually connect an audio device to the target server. See <b>Audio Device</b> (on page 71).</p>
	<ul style="list-style-type: none"> <li>• <i>Mass Storage Device ...</i></li> </ul> <p>Click this button to mount a USB drive onto the target server.</p> <ul style="list-style-type: none"> <li>• <i>CD-ROM Device / ISO File ...</i></li> </ul> <p>This button mounts a DVD drive, CD-ROM drive, or an ISO image onto the target server. See <b>Virtual Media</b> (on page 72).</p>
	<ul style="list-style-type: none"> <li>• <i>SmartCard Reader...</i></li> </ul> <p>This button connects a smart card reader to the target server. See <b>SmartCard Reader</b> (on page 79).</p>
Connected Devices	<p>This section lists all devices which have been "virtually" connected to the target server. See <b>Disconnecting a Virtual Device</b> (on page 83).</p>
USB Profiles	<p>Click it to select a USB configuration profile that best applies to the target server. See <b>USB Profiles</b> (on page 84).</p>

---

*Note: For detailed information of each USB profile, see the section titled "Available USB Profiles" in the KX III KVM switch's user documentation, which is accessible from the KVM switch application or the Raritan website's **Support page** (<http://www.raritan.com/support/>).*

---

## Audio Device

The User Station supports end-to-end, bidirectional, digital audio connections with a target server for digital audio playback and capture devices.

One of the following CIMs must be used:

- D2CIM-DVUSB
- D2CIM-DVUSB-DVI
- D2CIM-DVUSB-HDMI
- D2CIM-DVUSB-DP


## Connecting Audio Devices

If an audio device is physically connected to the User Station, you can virtually connect it to one or multiple target servers simultaneously.

*Note: Prior to connecting the audio devices to the target server, you may have to specify the audio devices you want to use. Per default, the front-panel analog speakers and microphone are used. See **Audio Settings** (on page 99).*

### ► To connect an audio device to the target server:

1. Click  to open the "Audio, Mass Storage and SmartCard Devices" dialog.
2. Click the "Audio Device ..." button. The Connect Audio Device dialog appears.

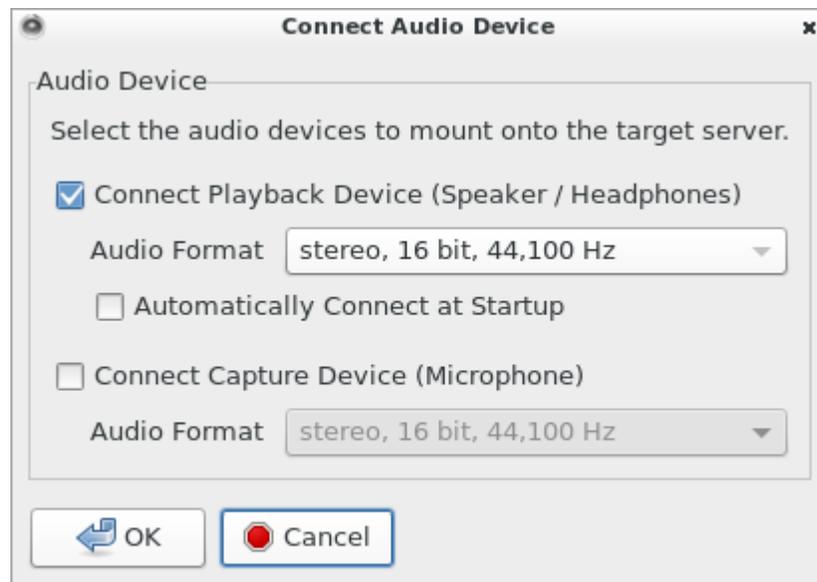

Checkbox	Description
Connect Playback Device (Speaker / Headphones)	To manually connect an available audio playback device to the target server, select this checkbox. <ul style="list-style-type: none"> <li>Set the playback audio format in the Audio Format field.</li> </ul>
Automatically Connect at Startup	If enabling this checkbox, the selected playback device is automatically connected to the current target server whenever that target is accessed.
Connect Capture Device (Microphone)	To manually connect an available audio recording device to the target server, select this checkbox. <ul style="list-style-type: none"> <li>Set the recorded audio format in the Audio Format field.</li> </ul>

3. Click OK.

- ▶ **To disconnect the audio device from the target server:**
  - See *Disconnecting a Virtual Device* (on page 83).

---

### Virtual Media

The Dominion User Station supports virtual media (VM). Virtual media extends KVM capabilities by enabling target servers to remotely access media from the User Station and network file servers.

With this feature, media mounted onto the User Station and network file servers are essentially "mounted virtually" by the target server. The target server can then read from and write to that media as if it were physically connected to the target server itself.

Virtual media sessions are secured using 128 or 256 bit AES encryption.

Virtual media provides the ability to perform tasks remotely, such as:

- Transferring files
- Running diagnostics
- Installing or patching applications
- Complete installation of the operating system
- Record and playback of digital audio

---

**Important:** Once you are connected to a virtual media drive, do not change mouse modes in the KVM client if you are performing file transfers, upgrades, installations or other similar actions. Doing so may cause errors on the virtual media drive or cause the virtual

---

**media drive to fail.**

---

For the VM types supported by the Dominion User Station, see *Supported Virtual Media Types* (on page 73).

**Prerequisites for Using Virtual Media****▶ KVM switch requirements:**

- If you want to access virtual media, your "KVM switch" permissions must be set to allow access to the relevant KVM ports, as well as virtual media access (VM Access port permission) for those ports. KVM switch permissions are determined according to the user credentials you entered for the KVM switches. See *Editing KVM Switches* (on page 29).
- A USB connection through the virtual media CIM must exist between the KVM switch and the target server.

**▶ Target server requirements:**

- You must choose the correct USB profile for the target server. See *Peripheral Devices and USB Settings* (on page 69).
- KVM target servers must support USB connected drives.
- USB 2.0 ports are faster and preferred.

**▶ CIM requirements:**

- A virtual media CIM is required on the target server. See *Virtual Media CIMs* (on page 78).

**Supported Virtual Media Types**

- External hard drives
- USB-mounted CD/DVD drives
- USB mass storage devices
- ISO images (disk images)  
ISO9660 is the standard supported by Raritan. However, other ISO standards can be used.

---

*Note: Connecting digital audio devices onto the target server is also supported. See **Audio Device** (on page 71).*

---

### Mounting Local Drives

This option mounts an entire disk drive virtually onto the target server. Use this option for external drives only. It does not include CD-ROM, or DVD-ROM drives.

► **To mount a local drive:**

1. Click  to open the "Audio, Mass Storage and SmartCard Devices" dialog.
2. Click the "Mass Storage Device ..." button. The Connect Mass Storage Device dialog appears.



3. Choose the drive from the Local Drive drop-down list.
4. If you want Read and Write capabilities, select the Read-Write checkbox.
  - This option is not configurable in some scenarios. See *Scenarios When Read/Write is Unavailable* (on page 75).
  - When selected, you will be able to read or write to the connected USB drive.

---

*Note: Improper unmounting of the USB drive from the target server may result in data corruption. See **Disconnecting a Virtual Device** (on page 83). Therefore, if you do not require Write access, leave this option unselected.*

---

5. Click OK.

The media will be mounted on the target server virtually. You can access the media just like any other drive.

► **To disconnect the local drive from the target server:**

- See *Disconnecting a Virtual Device* (on page 83).

### ***Scenarios When Read/Write is Unavailable***

Virtual media Read/Write is not available in the following situations:

- The drive is write-protected.
- The user credentials you entered for the KVM switch does not allow Read/Write permission on the KVM port you are accessing.

For information on how to enter user credentials for KVM switches, see ***Editing KVM Switches*** (on page 29).

### **Mounting CD-ROM/DVD-ROM/ISO Images**

ISO9660 format is the standard supported by Raritan. However, other CD-ROM extensions may also work.

---


*Note: Audio CDs are not supported by virtual media so they do not work with the virtual media feature.*

---

#### **► To mount a CD-ROM , DVD-ROM or ISO image:**

1. Click  to open the "Audio, Mass Storage and SmartCard Devices" dialog.

2. Click the "CD-ROM Device / ISO File ..." button. The Connect CD-ROM Drive / ISO Image dialog appears.

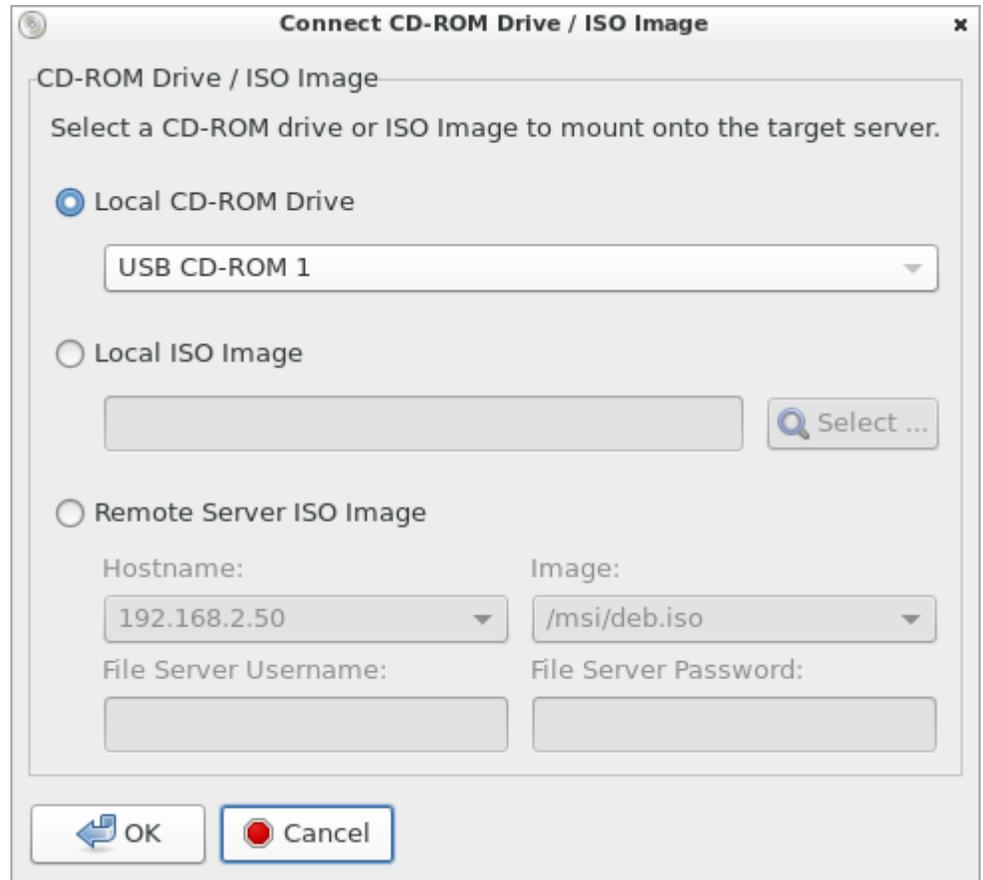

3. For USB CD-ROM/DVD-ROM drives:
  - a. Select the Local CD-ROM Drive option.
  - b. Choose the drive from the Local CD-ROM Drive drop-down list, which shows all available CD-ROM/DVD-ROM drive names.
4. For Local ISO Images: The ISO images must be on the root-folder of USB storage device.
  - a. Connect the USB-storage to the User Station.
  - b. Select the Local ISO Image option. The Select button opens a dialog with a list of all ISO images found. Select the one you want to use and close the dialog with OK.
5. For remote ISO images on a file server:

Remote ISO images must be setup in KX3 to be available for selection by the KVM-Client. See Virtual Media File Server Setup in KX3's online help.  
 (<http://help.raritan.com/kx-iii/v3.4.0/en/#33617.htm> has instructions for KX3 v3.4)

- a. Select the Remote Server ISO Image option.
  - b. Select Hostname and Image from the drop-down list.  
 The hostnames (file servers) and image paths available in the list are those that you configured using the KX III KVM switch's File Server Setup page. See the KVM switch's user documentation for further information.
  - c. File Server Username - User name required for access to the file server. The name can include the domain name such as mydomain/username.
  - d. File Server Password - Password required for access to the file server (field is masked as you type).
6. Click OK.

The media will be mounted on the target server virtually. You can access the media just like any other drive.

---

*Note: If you are working with files on a Linux® target server, use the Linux Sync command after the files are copied using virtual media in order to view the copied files. Files may not appear until a sync is performed.*

---

- ▶ **To disconnect the CD-ROM , DVD-ROM or ISO image from the target server:**
  - See *Disconnecting a Virtual Device* (on page 83).

### Virtual Media CIMs

It requires the use of the following virtual media (VM) CIMs on the target servers you are accessing.

- D2CIM-VUSB
- D2CIM-DVUSB
- D2CIM-DVUSB-DVI
- D2CIM-DVUSB-HDMI
- D2CIM-DVUSB-DP

The black USB connector on the DVUSB CIMs are used for the keyboard and mouse. The gray connector is used for virtual media.

**Keep both USB plugs of the CIM connected to the device.**

The device may not operate properly if both plugs are not connected to the target server.

### Number of Supported Virtual Media Drives

With the virtual media feature, you can mount up to two drives (of different types) that are supported by the USB profile currently applied to the target server. These drives are accessible for the duration of the KVM session.

For example, you can mount a specific CD-ROM, use it, and then physically disconnect it when you are done. The CD-ROM virtual media “channel” will remain open, however, so that you can virtually mount another CD-ROM. These virtual media “channels” remain open until the KVM session is closed as long as the USB profile supports it.

To use virtual media, connect/attach the media to the User Station or network file server that you want to access from the target server.

This needs not be the first step, but it must be done prior to attempting to access this media.

---

## SmartCard Reader

If any target server requires a smart card for authentication, then mount a smart card reader onto it.

If other virtual devices than the card reader are also required, *it is strongly recommended to connect them prior to the card reader.* Otherwise, a USB reconfiguration is triggered, forcing a user logout of the target's operating system, which requires the user to log in again.

Make sure you meet the following requirements for mounting a card reader to a target server.

▶ **CIMs required for mounting a smart card reader:**

- D2CIM-DVUSB
- D2CIM-DVUSB-DVI
- D2CIM-DVUSB-HDMI
- D2CIM-DVUSB-DP

▶ **Supported card readers:**

- Refer to the topic titled "Supported and Unsupported Smart Card Readers" in the KX III KVM switch's user documentation, which is accessible from its application or the Dominion KX III section of the Raritan website's *Support page* (<http://www.raritan.com/support/>).

▶ **Target server requirements:**

- Refer to the topic titled "Target Server Requirements" in the KX III KVM switch's user documentation.


## Mounting a Card Reader

You can physically connect multiple smart card readers to the User Station, but only one smart card reader can be virtually mounted onto a target server at a time.

▶ **To mount a smart card reader:**


1. Make sure a *supported* smart card reader has been physically connected to the User Station.
2. Click  to open the "Audio, Mass Storage and SmartCard Devices" dialog.
3. Click the "SmartCard Reader ..." button. The Connect SmartCard Reader dialog appears.

- If this button is disabled, it may be impacted by the KX III KVM switch's settings. See *Card Reader Restriction Caused by KX III KVM Switch Settings* (on page 191).

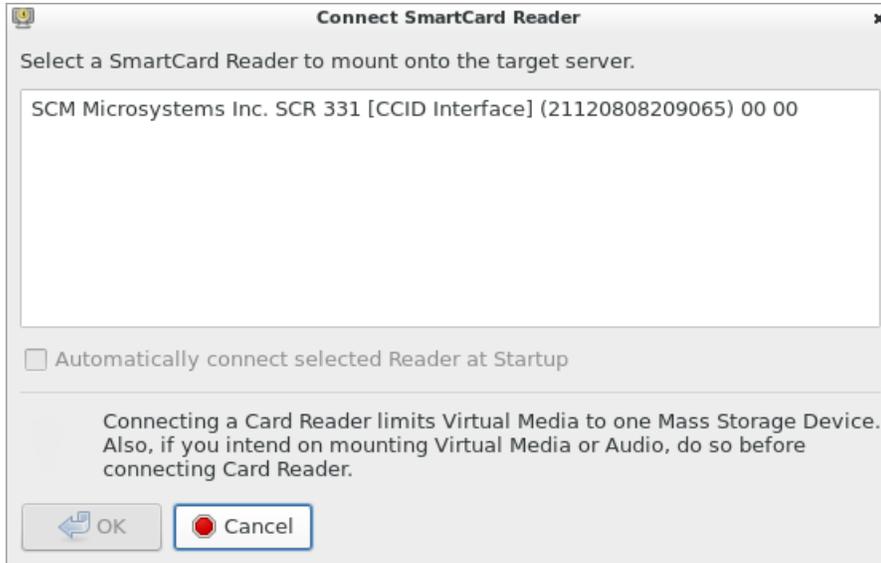

4. Select the desired card reader from the list shown in the dialog.
  - To automatically connect the selected card reader to the current target server whenever that target server is accessed, select the "Automatically connect selected Reader at Startup" checkbox.
5. Click OK to connect it.

- When the card reader is listed as a virtual device in the "Audio, Mass Storage and SmartCard Devices" dialog, you can insert the card.

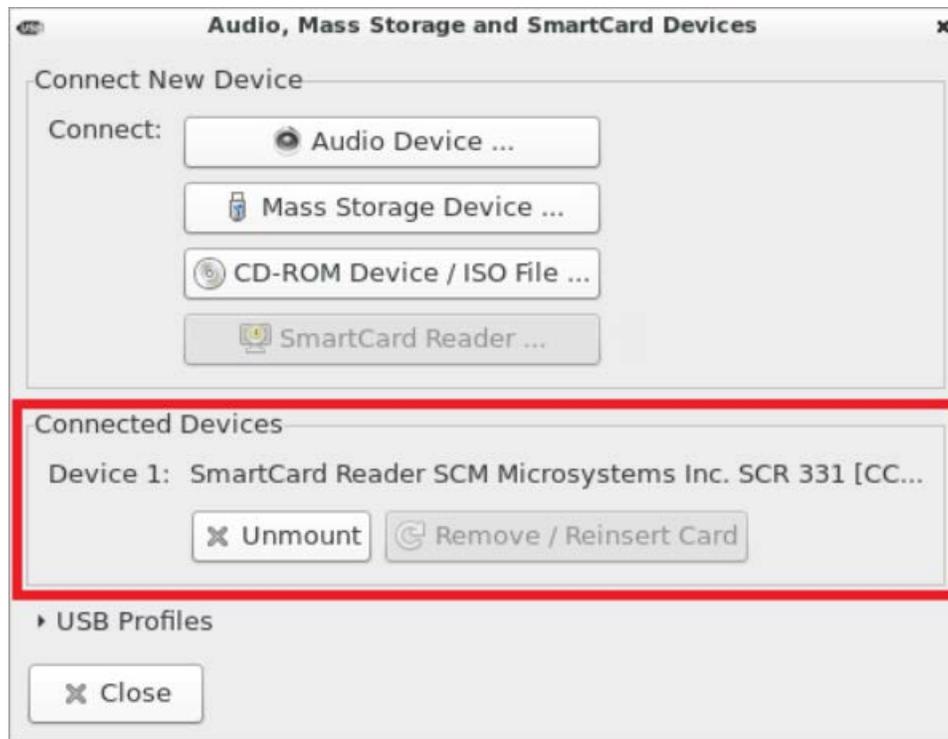

- ▶ **To disconnect the card reader from the target server:**
  - Click the Unmount button in the "Audio, Mass Storage and SmartCard Devices" dialog. For details, see *Disconnecting a Virtual Device* (on page 83).


### Emulating the Card Reinsertion

If the authentication on the target server fails while the card is being properly inserted into the card reader, you can attempt to solve the issue by removing and reinserting the card.

The User Station is able to emulate the card reinsertion without physically removing and reinserting the card.

► **To emulate the card removal and reinsertion:**

1. Click  to open the "Audio, Mass Storage and SmartCard Devices" dialog.

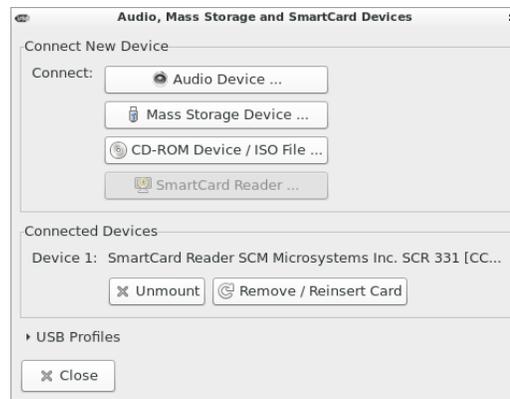

2. Click .

### Card Reinsertion Scenarios

The card is not detected in one of the following scenarios, you must reinsert the card or emulate the card reinsertion to solve the issue.

► **The scenario where you must physically remove and reinsert the card:**

- a. The smart card reader with a card inserted is physically connected to the User Station and is configured to automatically connected to a specific target server at startup.
- b. You establish and close the connections to that target server for several times.
- c. When the card is no longer detected, PHYSICALLY remove and reinsert the card.

► **The scenario where you need to emulate the card reinsertion:**

- a. Both the smart card reader and audio device are configured to automatically connected to a specific target server at startup.

- b. You establish a connection to that target server, and the audio device and card reader with a card inserted are automatically connected to the target.
- c. The card is not detected. You can emulate the card reinsertion to re-detect it. See *Emulating the Card Reinsertion* (on page 82).

---

### Disconnecting a Virtual Device

When the KVM Client is closed, the virtual media connection to the target server is closed. Devices are also disconnected when switching the KVM Client to a different port or KX.

You can also use the Disconnect or Unmount button without closing the current KVM Client.

► **To disconnect the virtual peripheral device(s):**

1. It is highly recommended to first "safely remove" or "eject" the virtual media drive that you want to disconnect from the target server. If you have enabled the read/write mode, it may result in data loss when you do not perform this operation.
  - Refer to the user documentation of the target server's operating system for how to "safely remove" or "eject" a drive.
2. Click  to open the "Audio, Mass Storage and SmartCard Devices" dialog.

Existing virtual devices are listed in the Connected Devices section.



The devices that you can no longer mount onto the target server are disabled. Hover your mouse for a tooltip showing reasons.

3. Click the Disconnect button for the device you want to disconnect.
  - Click the Unmount button if you are disconnecting the smart card reader.
4. Click Yes on the confirmation message.

---


### USB Profiles

Usually the "Generic" USB profile works fine for most target servers. In case any of your target servers requires a special USB profile to have the remote audio devices, virtual media and card reader work properly, select a different USB profile for it.

► **To apply an appropriate USB profile to the target server:**

1. Click  to open the "Audio, Mass Storage and SmartCard Devices" dialog.

- Click USB Profiles to expand it.

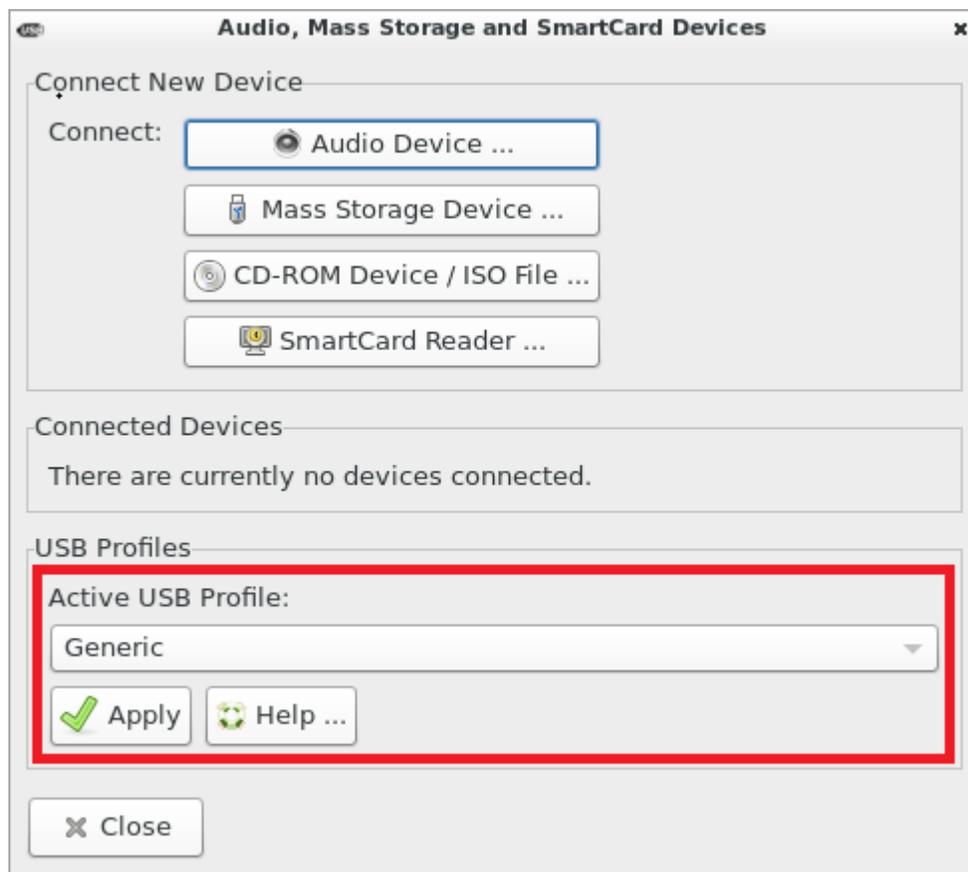

- Select the desired USB profile from the Active USB Profile drop-down list, and click Apply.
  - If intended, click the Help button to view information similar to *USB Profile Overview* (on page 86).
  - For detailed information of each USB profile, see the section titled "Available USB Profiles" in the KX III KVM switch's user documentation, which is accessible from the KVM switch application or the Raritan website's *Support page* (<http://www.raritan.com/support/>).

### USB Profile Overview

Audio and mass storage devices are connected to the target server via USB ports of the CIM. Most of the time, this works without any problems. However, if you encounter any compatibility issues, you may have to change the USB configuration of the CIM.

Raritan provides a standard selection of USB configuration profiles for a wide range of operating system and BIOS-level server implementations. These are intended to provide an optimal match between remote USB device and target server configurations.

The 'Generic' profile meets the needs of most commonly deployed target server configurations.

Additional profiles are made available to meet the specific needs of other commonly deployed server configurations (for example, Linux® and Mac OS X®).

There are also a number of profiles (designated by platform name and BIOS revision) to enhance virtual media function compatibility with the target server, for example, when operating at the BIOS level.

Administrators configure the KVM port with the USB profiles that best meet the needs of the user, and the target server configuration.

A user connecting to a target server chooses among these preselected profiles in the KVM Client, depending on the operational state of the target server.

For example, if the server is running Windows® operating system, it would be best to use the Generic profile.

To change settings in the BIOS menu or boot from a virtual media drive, depending on the target server model, a BIOS profile may be more appropriate.

If none of the standard USB profiles provided by Raritan work with a provided target server, contact Raritan Technical Support for assistance.

For detailed information of available USB profiles, refer to the user documentation of the Dominion KX III KVM switch.

---

## Power Control

You can power on, power off, and power cycle a target server through the outlet(s) it is connected to.

This power control button is enabled only when the power control requirements are met.

▶ **Power control requirements:**

- On the KX III KVM switch, a PDU's outlet(s) must be associated with the selected KVM port.
- The user credentials you entered for the KVM switch grant you the power control permission.


See the KVM switch's user documentation for more information.

▶ **To power on, off or power cycle the target server:**

1. Click  to select a power control option.
  - Power On: Turns ON the server.
  - Power Off: Turns OFF the server.
  - Power Cycle: Turns OFF and then turns ON the server.




2. Click Yes on the confirmation message.

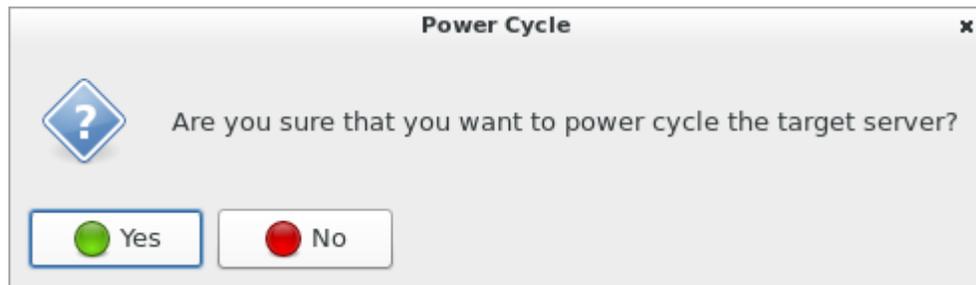

---

## View Settings

Click  to show available view options.

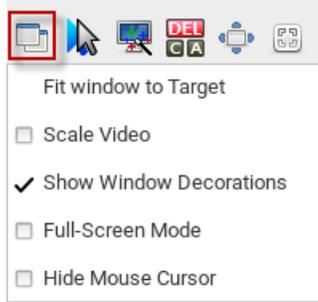

---

### Fit window to Target

The "Fit window to Target" command enlarges or shrinks the size of the KVM Client window to the target server's video resolution.

The KVM Client's scroll bars may or may not appear, depending on whether the target server's resolution is small enough for the KVM Client window to show the target server's entire desktop video.

► **To fit the KVM Client window to the target server:**

- Click  > Fit window to Target.
- OR click .

---

### Scale Video

Selecting the Scale Video checkbox increases or reduces the size of the target server's video to fit the KVM Client window size.

This feature maintains the aspect ratio so that you see the entire target server's desktop without using the scroll bars.

---

*Tip: You can have this display option automatically enabled or disabled by setting your preferences on the KVM Client Settings page. See **KVM Client Settings** (on page 93).*

---

► **To toggle video scaling:**

- Click  > Scale Video.

---

### Show Window Decorations

You can use the KVM Client with or without the window decorations, including the window title and scroll bars.

*Tip: You can have this display option automatically enabled or disabled by setting your preferences on the KVM Client Settings page. See **KVM Client Settings** (on page 93).*

---

#### ▶ To toggle the display of the window decorations:

- Click  > Show Window Decorations.

---

### Full-Screen Mode

When you enter full screen mode, the target server's video displays in the full screen and acquires the same resolution as the target server.

In full screen mode, the KVM Client's scroll bars are invisible, and its toolbar displays for several seconds only before disappearing from the screen.

#### ▶ To enter full screen mode:

1. Click  > Full-Screen Mode, or click .
2. A message indicating that the toolbar will be hidden and the key combination to trigger it temporarily displays on the screen and then disappears.

#### ▶ To display the toolbar in this mode:

- Move your mouse to the top of the screen.

#### ▶ To exit full screen mode:

- Press Ctrl+Alt+F on your keyboard.
- OR click  in the toolbar.
- OR click  > Full-Screen Mode.

---

### Hide Mouse Cursor


Enable the Hide Mouse Cursor setting to hide the Dominion User Station's mouse cursor in the video area of the screen. The mouse cursor is still visible in the toolbar area of the screen.

- Click  > Hide Mouse Cursor.


---

## Window Management

Window Management helps you organize open KVM sessions. Other User Station windows, such as Port Navigator and the Port Scanner, are not included in window management. If two monitors are connected to the User Station, the feature works separately on each monitor. KVM windows are not moved from one monitor to another. Windows crossing the edges of the monitor are restored so that the windows are fully within the monitor.

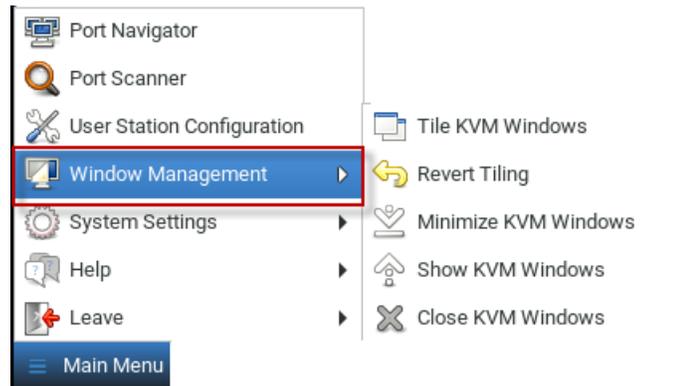

- Tile KVM Windows: arranges all KVM windows in a tiled layout on desktop. Minimized windows will be unminimized.
- Revert Tiling: Undo last tiling operation and restore previous window sizes. Previously minimized windows will be minimized again.
- Minimize KVM Windows: Minimizes all KVM windows from desktop to task bar.
- Show KVM windows: Restores all KVM windows from task bar and to desktop
- Close KVM Windows: Closes all KVM windows.

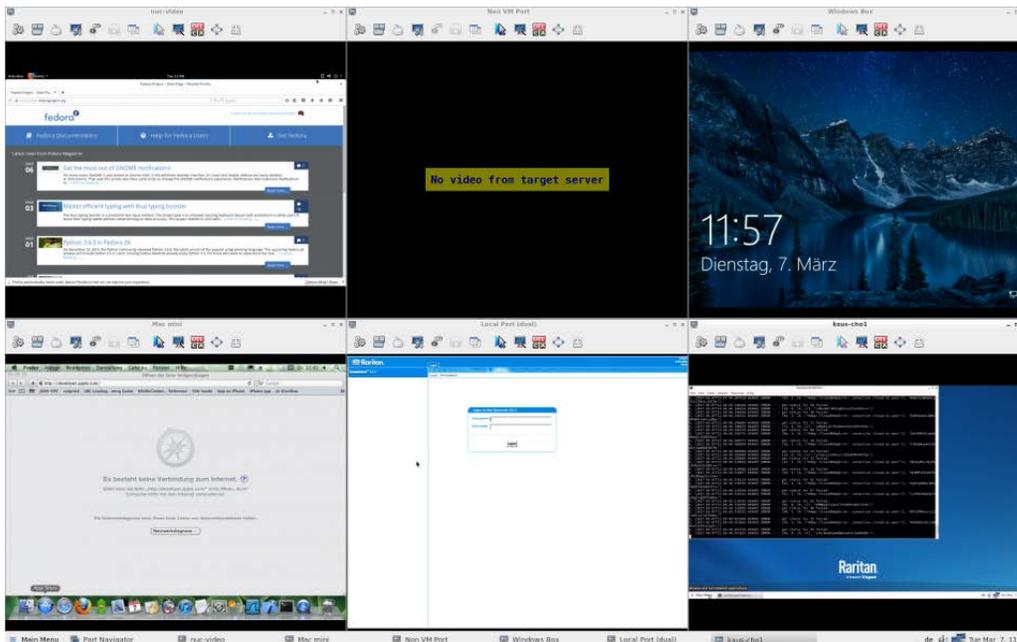

#### ► Session handling on logout:

By default, all KVM windows will be closed on logout and after next login, you start with an only Port Navigator shown.

If the "Save Sessions on Logout" feature is enabled, the User Station will save all open KVM window sizes and positions and will open them again on the next user login.

See *KVM Client Settings* (on page 93).

---


## Dual Video Port Connections

When connecting to a Dual Video port, two KVM client windows are opened. The two client windows are bound to each other.

Window title: [<group\_name>] port\_name.


When one window is closed, the other one is closed automatically

Switching to and from Dual Video ports is not possible. When switching from a single port to a Dual Video port, the old connection is closed prior to connecting. When switching from a Dual Video port to another port, the connections are closed prior to connecting to the new port.

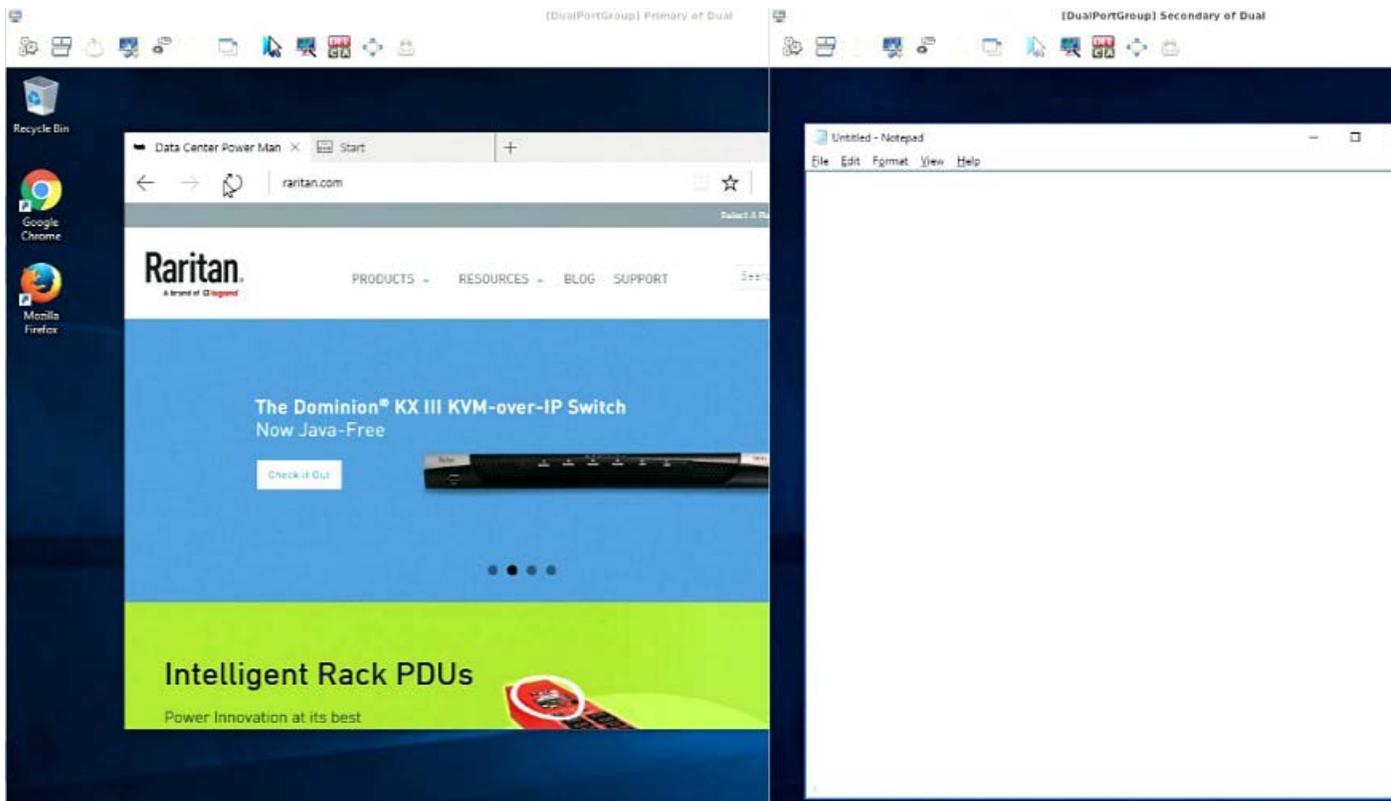

# Chapter 7 Setting User Preferences

In the User Station Configuration window, click Preferences to customize the following user settings.

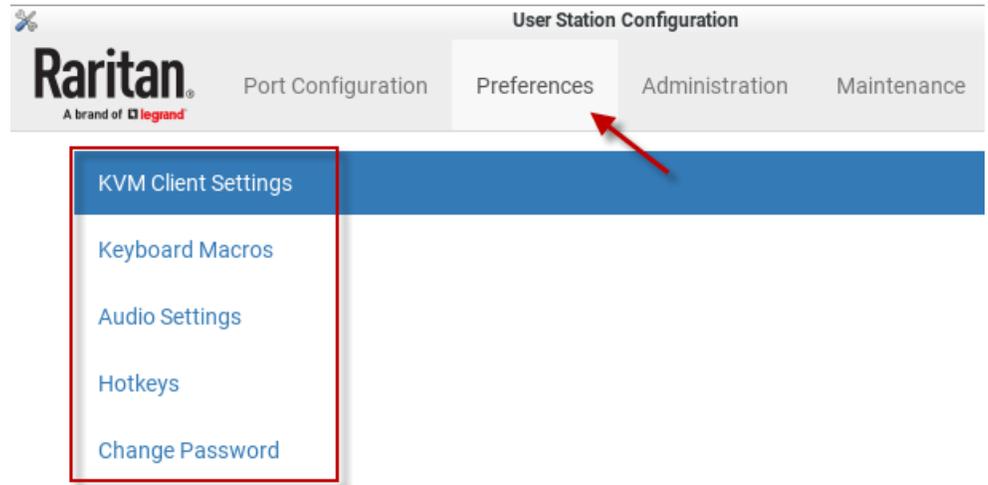

## In This Chapter

KVM Client Settings.....	93
Managing Keyboard Macros.....	96
Audio Settings.....	99
Hotkeys.....	100
Change Password.....	102

---

## KVM Client Settings

You can configure the following settings for the KVM Client window:

- Mouse button behaviors for the user to launch the KVM Client
- Preferred positioning, display and mouse mode settings that apply when the KVM Client opens

► **To set your KVM Client preferences:**

1. If not displayed, launch the User Station Configuration window. See *User Station Configuration* (on page 26).
2. Click Preferences > KVM Client Settings. The KVM Client Settings page opens, showing the current preferences.
  -  indicates the setting is enabled.

- indicates the setting is disabled.

## KVM Client Settings

Target Window Settings

**Scale Video:**

**Positioning:** Automatic

**Window Decorations:**

**Full-Screen Mode:**

**Single Mouse Cursor Mode:**

Launch Settings

**Left Mouse Button Click:** Switch existing KVM client

**Left Button Double Click:** Open a new KVM client

**Middle Button Click:** Open a new KVM client

**Port Hotkey Action:** Switch existing KVM client

Session Settings

**Save Sessions on Logout:**

3. Click Edit to make changes.
4. The Target Window Settings section determines the initial settings applied to the KVM Client.
  - Display- and mouse-related settings:

Checkbox	Description
Scale Video	Enable or disable the Scale Video function.  For details on Scale Video, see <b><i>Scale Video</i></b> (on page 88).
Window Decorations	Show or hide the window decorations.  For details on window decorations, see <b><i>Show Window Decorations</i></b> (on page 89).
Full-Screen Mode	Enable or disable full-screen mode for KVM sessions.  To exit full-screen mode, press Ctrl + Alt + F in the KVM Client.

Checkbox	Description
Start in Single Mouse Cursor Mode	Enable or disable the single mouse mode. For details on this mouse mode, see <b>Single Mouse Cursor</b> (on page 60). Note: Does not apply to Dual Video Port targets.

- Positioning setting that configures where the KVM Client shows up on the screen. Note: Does not apply to Dual Video Port targets.

Positioning	Description
Automatic	The positioning of the KVM Client is not restricted. For example, the first KVM Client that appears may align with the top-left corner of the screen, but the second KVM Client may align with the bottom-right corner of the screen.
Left Upper Corner	Every KVM Client aligns with the top-left corner of the screen.
Right Upper Corner	Every KVM Client aligns with the top-right corner of the screen.

- In the Launch Settings section, you determine how to launch the selected target server with a single left-mouse click. Then the system automatically swaps the settings of both the double left-mouse click and single middle-mouse click for the other option. You can also select how the port hotkey will launch the target.

Option	Description
Switch existing KVM client	The target server opens in the current KVM Client window.
Open a new KVM client	The target server opens in a new KVM Client window.

- In the Session Settings section, select Save Session on Logout to save the position of open KVM sessions and re-open them upon next login. See **Window Management** (on page 90).
- Click Save.

## Managing Keyboard Macros

Keyboard macros can be created to use instead of physical keystroke combinations, so that the actions intended for the target server are sent to and interpreted only by the target server. Otherwise, they might be interpreted by the User Station itself.

Keyboard macros are stored on the User Station, and only the user who created them can see and use these macros.

► **To create a keyboard/hotkey macro:**

1. If not displayed, launch the User Station Configuration window. See *User Station Configuration* (on page 26).
2. Click Preferences > Keyboard Macros > New Keyboard Macro. The New Keyboard Macro page opens.

### New Keyboard Macro

3. Enter information for the new keyboard macro. The fields marked with the symbol \* are mandatory.

Field/option	Description
Enabled	Select this checkbox so that the new macro can appear in the KVM Client of this User Station. See <i>Executing Macros</i> (on page 97).
Name	Type a name for the new macro.

Field/option	Description
Key Sets	Select the key set containing the desired keys. See <i>Available Key Sets</i> (on page 188). All keys that the selected key set contains are listed in the Keys box.
Keys	Select each desired key from the list and click ► to add it to the right box. Double-click also adds. <ul style="list-style-type: none"> <li>▪ Select the keys in the order by which they are to be pressed.</li> <li>▪ A Release key command is automatically added for each key added to the right box. See <i>Keyboard Macro Example</i> (on page 98).</li> </ul>


- If needed, make changes to the keys shown in the right box.
  - To resort the key commands, select a key command and click ▲ or ▼ to move it up or down.
  - To remove a key command, select it and click ◀.
- Click Save, and the new macro's content is shown.
- Click one of these buttons according to your needs.
  - Back: Return to the Keyboard Macro page.
  - Edit: Modify this macro.
  - Delete: Remove this macro.

---

### Executing Macros

Manually-created keyboard macros, if they are enabled, appear following the pre-programmed keyboard macros in the keyboard pull-down list of the KVM Client. See *Using the KVM Client* (on page 53).

Click  to show the keyboard macro list, and select the desired macro to send it to the target server.

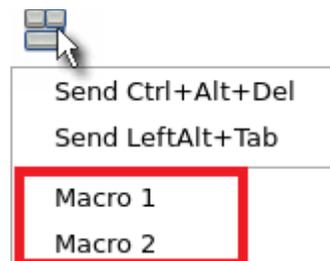

## Editing or Deleting Macros

To view all manually-created keyboard macros in the User Station Configuration window, click Preferences > Keyboard Macros.

# Keyboard Macros

New Macro

Enabled	Name	
<input checked="" type="checkbox"/>	Macro 1	<input type="checkbox"/> Edit <input type="checkbox"/> Delete
<input checked="" type="checkbox"/>	Macro 2	<input type="checkbox"/> Edit <input type="checkbox"/> Delete
<input type="checkbox"/>	Macro 3	<input type="checkbox"/> Edit <input type="checkbox"/> Delete

In the Enabled column:

- An enabled macro shows .
- A disabled macro shows .

### ▶ To edit a keyboard macro:

1. Click the desired macro's  Edit button.
2. Make necessary changes to the information shown. See *Keyboard Macros* (see "*Managing Keyboard Macros*" on page 96).

### ▶ To delete a keyboard macro:

1. Click the desired macro's  Delete button.
2. Click OK on the confirmation message.

## Keyboard Macro Example

For example, you can create a keyboard macro to close a window by selecting Left Alt+F4.

The macro's content looks like the following.

```
Press Left Alt
Press F4
Release F4
Release Left Alt
```

## Audio Settings

The default audio playback/capture devices used by the User Station are the front-panel analog speakers and microphone.

You can change this by setting other audio devices you prefer as the audio playback and/or capture devices. Note that the audio configuration changes made by any user apply on a User Station basis so the changes impact all users of this User Station.

► **To determine the audio appliances used by the User Station:**

1. If not displayed, launch the User Station Configuration window. See *User Station Configuration* (on page 26).
2. Click Preferences > Audio Settings. The Audio Settings page opens, indicating the current audio playback and capture devices being used.

## Audio Settings

Speaker and Microphone Defaults



**Speaker:** Speaker / Headphones (*Built-in Audio*)

**Microphone:** Microphone (*Built-in Audio*)

Edit

3. Click Edit, if intending to make changes.
4. In the Speaker section, select the audio playback device you prefer.
  - The audio playback devices which are not available are marked with .
5. In the Microphone section, select the audio capture device you prefer.
6. Click Save.
7. (Optional) To test whether the currently selected speaker works, click the Test Speaker buttons.

Test Speaker

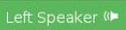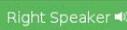Play Audio:  

---


## Hotkeys

You can enable, disable and customize hotkeys to control the User Station, manage windows, or control KVM Client functions. These hotkeys, when pressed, are executed on the User Station rather than being transmitted to any target servers you are operating. To use any of these hotkeys to control the target servers instead of the User Station, you must disable or change these hotkey settings on the User Station. Many hotkey functions are programmed and enabled by default.

There are three categories of hotkeys:

- **User Station Functions Hotkeys:** Configure hotkeys that are always processed locally by the User Station desktop. They are not sent to a target server if you use them from within a KVM session. If you want to use any of these key combinations, such as Alt+Tab or Ctrl+Alt+Delete, in KVM sessions, you should make sure that key combination is not assigned in this category, or disable that function it is assigned to.
  - **Window Management Hotkeys:** Configure hotkeys to close windows, switch between windows, or move them around on your desktop.
    - When Switch Keys is enabled, you can use Shift + Windows + Arrow to switch between open windows.
    - Move Keys are key combinations that move the foreground window around on the desktop. You can disable this function. See *Move Keys* (on page 101).
  - **KVM Client Hotkeys:** Configure hotkeys for functions within the KVM Client. Note that if you disable the hotkey for single mouse mode, this function is disabled.
- **To view, enable or disable, and customize hotkeys:**
1. If not displayed, launch the User Station Configuration window. See User Station Configuration.
  2. Click Preferences > Hotkeys. The Hotkeys page opens, showing the current settings for all hotkey categories.
  3. Scroll down and click Edit to change the hotkeys:
    - To enable, select a key combination for the function from its drop-down list.
    - To disable a hot key, select Disabled from its drop-down list.

4. Click Save.

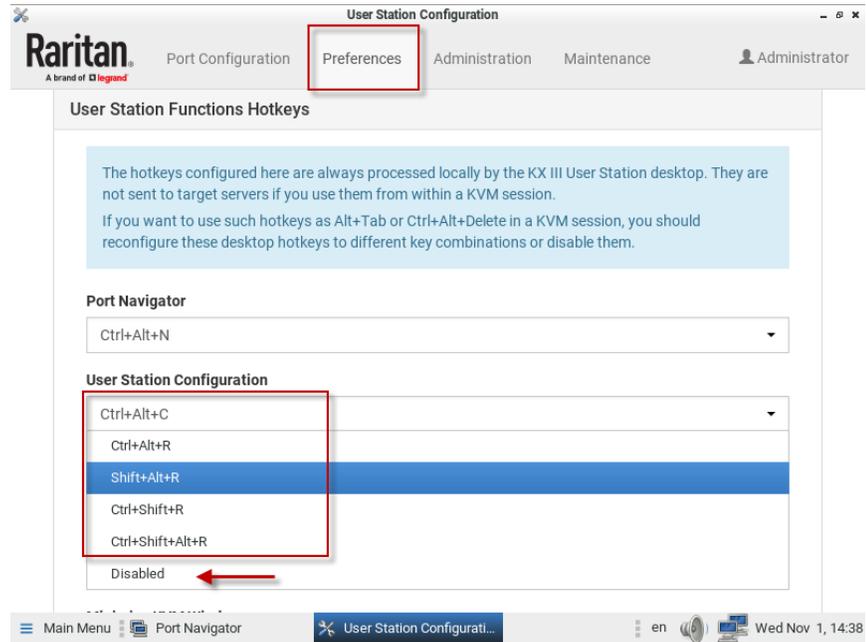

### Move Keys

Move Keys are key combinations that move the foreground window around on the desktop. You can enable or disable these hotkeys using the "Move Keys" setting. See *Hotkeys* (on page 100).

Hotkey	Function
Ctrl + Alt + Shift + ←	When there are two monitors connected, move the window to the other monitor.
Ctrl + Alt + Shift + →	
Ctrl + Alt + ↑	Move the window to the screen edge in the specified direction on the monitor.
Ctrl + Alt + ↓	
Ctrl + Alt + ←	
Ctrl + Alt + →	
Ctrl + Alt + 1 (on the keypad)	Move the window to the screen corner in the specified direction on the monitor.
Ctrl + Alt + 3 (on the keypad)	
Ctrl + Alt + 7 (on the keypad)	
Ctrl + Alt + 9 (on the keypad)	

Hotkey	Function
Ctrl + Shift + ↑	Move the window, in the specified direction, to the nearest edge, which is one of the following: <ul style="list-style-type: none"> <li>▪ Borders of another window</li> <li>▪ Monitor edges in the dual-monitor configuration</li> <li>▪ Desktop boundaries</li> </ul>
Ctrl + Shift + ↓	
Ctrl + Shift + ←	
Ctrl + Shift + →	
Ctrl + Windows + ↑	Enlarge the window in the specified direction until its border touches the nearest edge, which is one of the following: <ul style="list-style-type: none"> <li>▪ Borders of another window</li> <li>▪ Monitor edges in the dual-monitor configuration</li> <li>▪ Desktop boundaries</li> </ul> <hr/> <i>Note: If the window border already aligns with the screen edge, the window size shrinks instead.</i>
Ctrl + Windows + ↓	
Ctrl + Windows + ←	
Ctrl + Windows + →	
Alt + Windows + ↑	Shrink the window in the specified direction until its border touches the nearest edge, which is one of the following: <ul style="list-style-type: none"> <li>▪ Borders of another window</li> <li>▪ Monitor edges in the dual-monitor configuration</li> <li>▪ Desktop boundaries</li> </ul> <hr/> <i>Note: If no nearest edges are found in the specified direction, the window size is halved instead.</i>
Alt + Windows + ↓	
Alt + Windows + ←	
Alt + Windows + →	

## Change Password

You can change your own password. If you have never changed your initial or default password, a password change reminder message as shown below is displayed across various pages in the User Station Configuration and Navigator windows.




► **To change your password:**

1. If not displayed, launch the User Station Configuration window. See *User Station Configuration* (on page 26).
2. Click Preferences > Change Password. The Change Password page opens, and you can enter new password.
3. Click Save.

## Chapter 8 Administration Features

In the User Station Configuration window, click Administration to perform the following User Station administration tasks.

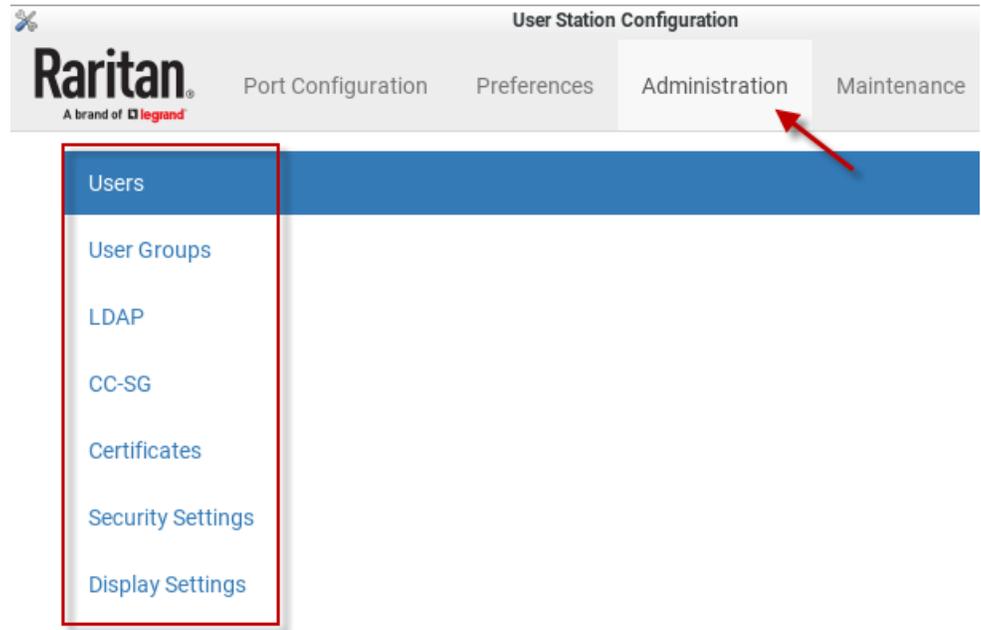

### In This Chapter

Users .....	105
User Groups.....	109
LDAP .....	113
CommandCenter Secure Gateway (CC-SG) Integration .....	128
Certificates .....	132
Security Settings .....	135
Display Settings.....	137

---

## Users

The Dominion User Station provides a built-in administrator account, which is ideal for initial login and system administration.

User name	Privileges
admin	<ul style="list-style-type: none"> <li>▪ System Administration</li> <li>▪ Device Administration</li> <li>▪ Device Access</li> <li>▪ Take Screenshots</li> </ul> See <i>Privileges</i> (on page 110).

You can add user profiles with configurable privileges for other users to operate and administer the User Station.

Note that the Dominion User Station's user profiles determine the permissions users are granted to have on the User Station instead of the KVM switches. See *Authentication of User Stations and KVM Switches* (on page 186).

► **To create a user profile:**

1. If not displayed, launch the User Station Configuration window. See *User Station Configuration* (on page 26).

2. Click Administration > Users > . The New User page opens.

## New User

**\* Login**

Authenticate via LDAP

**Email**

**Name**

**\* Password**

**\* Password confirmation**

**\* Selected User Groups**

<<  
<  
>  
>>

**Available User Groups**

System Administrators  
Devices Administrators  
Devices Users

3. Enter information for the new user. The fields marked with \* are mandatory.

Field	Description
Login	User name for logging in to the User Station. <ul style="list-style-type: none"> <li>2 to 255 characters</li> <li>Restricted character: colon (:) :</li> </ul>

Field	Description
Authenticate via LDAP	Select this checkbox if this user will be authenticated via LDAP. See <b>LDAP</b> (on page 113).  If deselected, this user is authenticated via the local database of the User Station and you must store user passwords on the User Station.
Email	The email address to reach the user.
Name	Real name or nickname of the user.
Password, Password confirmation	Password for logging in to the User Station.  A minimum of five characters are required.
Selected User Groups	Assigning user groups determines the permissions granted to this user. See <b>User Groups</b> (on page 109). <ul style="list-style-type: none"> <li>▪ To select all available user groups, click .</li> <li>▪ &lt;&lt;To select one user group, select it in the Available User Groups box, and click &lt;.</li> <li>▪ To remove one user group from the Selected User Groups box, select it, and click &gt;.</li> <li>▪ To remove all user groups in the Selected User Groups box, click &gt;&gt;.</li> </ul>

4. Click Save, and the new user profile's content is shown.
5. Click one of these buttons according to your needs.
  - Back: Return to the Users page.
  - Edit: Modify this user profile.
  - Delete: Remove this user profile.

### Editing or Deleting Users

To view existing user profiles in the User Station Configuration window, click Administration > Users.

Select an option in the Type field to show the desired user types. Note that this field is configurable only for users with the "System Administration" permission.

- **Local:** Shows local users only, who are authenticated via the User Station's local database. This is the default when the LDAP authentication is disabled.
- **LDAP:** Shows the users who are authenticated via LDAP. This is the default when the LDAP authentication is enabled.
- **CC-SG:** Shows the users who are authenticated using CC-SG.
- **All:** Shows all users, including Local, LDAP, and CC-SG. You must be the admin user to view all users.

**Users** New User



Login	Name	Email	Type	Privileges	User Groups	Actions
admin	Administrator		Local	System Administration Device Administration Device Access		<a href="#">Edit</a>
User-1	John	john@rarity.com	LDAP Authenticated	Device Access	Devices Users	<a href="#">Edit</a> <a href="#">Delete</a>
User-2	Mary	mary@rarity.com	LDAP Authenticated	Device Administration Device Access	Devices Administrators Devices Users	<a href="#">Edit</a> <a href="#">Delete</a>
User-3	Tom	tom@rarity.com	Local	Device Administration Device Access	Devices Administrators	<a href="#">Edit</a> <a href="#">Delete</a>

The Privileges column indicates the permissions granted to each user. Privileges are determined based on the user groups assigned to each user. See **User Groups** (on page 109).

Each user profile shows a maximum of five user groups. If there are more than five user groups for a user profile, it shows a message below the fifth user group -- "... and <n> more", where <n> is the number of additional user groups.

You can click each user's login name to view its details.

Note that you cannot delete the built-in *admin* user, but you can modify its data other than the privileges (user groups).

► **To modify a user profile:**

1. If you are a user with the "System Administration" permission, make sure you have selected the appropriate option in the Type field.

2. Click the desired user's  button. The Edit User page opens.
  3. Make necessary changes to the information shown. See *Users* (on page 105).
    - You cannot change the login name.
    - To change the user's password, type the new password in the "Password" and "Password confirmation" fields. A minimum of five characters are required.
  4. Click Save.
- ▶ **To delete a user profile:**
1. If you are a user with the "System Administration" permission, make sure you have selected the appropriate option in the Type field.
  2. Click the desired user's  button.
  3. Click OK on the confirmation message.

---

## User Groups

A user group determines the privileges its members can have. There are three factory default user groups.

User groups	Default privileges
System Administrators	System Administration. See <i>Privileges</i> (on page 110).
Device Administrators	Device Administration. Device Access.
Device Users	Device Access.

You can create a new user group if the default user groups do not satisfy your needs.

- ▶ **To create a new user group:**
1. If not displayed, launch the User Station Configuration window. See *User Station Configuration* (on page 26).

- Click Administration > User Groups > New User Group. The New User Group page opens.

## New User Group

**Device Access** includes the permission to:

- Login
- Alter personal settings
- Open KVM sessions

**Device Administration** includes (in addition to Device Access):

- KX Device addition and removal

**Take Screenshots** includes:

- Take a screenshot and export it to a USB drive

**System Administration** permits everything

---

**\* Name**



---

**\* Privileges**

Device Access

Device Administration

Take Screenshots

System Administration

- Enter information for the new user group.

Field	Description
Name	Type a name for the new user group.
Privileges	Assign one or multiple privileges to the new user group. See <i>Privileges</i> (on page 110).

- Click Save, and the new user group's data is shown.
- Click one of these buttons according to your needs.
  - Back: Return to the User Groups page.
  - Edit: Modify this user group.
  - Delete: Remove this user group.

---

### Privileges

Privilege	Operations permitted
System Administration	All operations on the User Station are permitted.

Privilege	Operations permitted
Device Administration	<ul style="list-style-type: none"> <li>Log in to the User Station.</li> <li>Modify personal settings.</li> <li>Access a KVM port.</li> <li>Add, delete and modify the data of KX III KVM switches.</li> <li>Configure KVM ports.</li> </ul>
Device Access	<ul style="list-style-type: none"> <li>Log in to the User Station.</li> <li>Modify personal settings.</li> <li>Access a KVM port.</li> <li>Configure KVM ports.</li> </ul>
Take Screenshots	<ul style="list-style-type: none"> <li>Take a screenshot and export it to a USB drive using the hotkey.</li> <li>This permission alone does not grant login privileges. User must also be a member of a group with System Administration, Device Administration or Device Access privileges.</li> </ul>

---

### Editing or Deleting User Groups

To view all user groups in the User Station Configuration window, click Administration > User Groups.

## User Groups

[New User Group](#)

Name	Privileges	Users	Actions
<a href="#">System Administrators</a>	System Administration	Alan	<a href="#">Edit</a> <a href="#">Delete</a>
<a href="#">Devices Administrators</a>	Device Administration Device Access	Mary Summer	<a href="#">Edit</a> <a href="#">Delete</a>
<a href="#">Devices Users</a>	Device Access	John Mary Daniel	<a href="#">Edit</a> <a href="#">Delete</a>


The Users column lists the names of all users who belong to this user group. The priority is to show the real names of these users. If the real name is not available in the user profile, the user's login name is shown. See **Users** (on page 105).

Each user group shows a maximum of five users. If a user group contains more than five users, it shows a message below the fifth user -- "... and <n> more", where <n> is the number of additional users.

You can click each user group's name to view its details.


You can delete any user group no matter it contains users or not.

► **To modify a user group:**

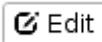1. Click the desired user group's  button.
2. Make necessary changes to the information shown. See **User Groups** (on page 109).
3. Click Save.

► **To delete a user group:**

1. Click the desired user group's  button.
2. A confirmation message appears.
  - If any user will not be able to log in after losing this user group, the confirmation message shows a warning similar to the following diagram. This is because the selected user group is the only user group that one or some of the group members have.

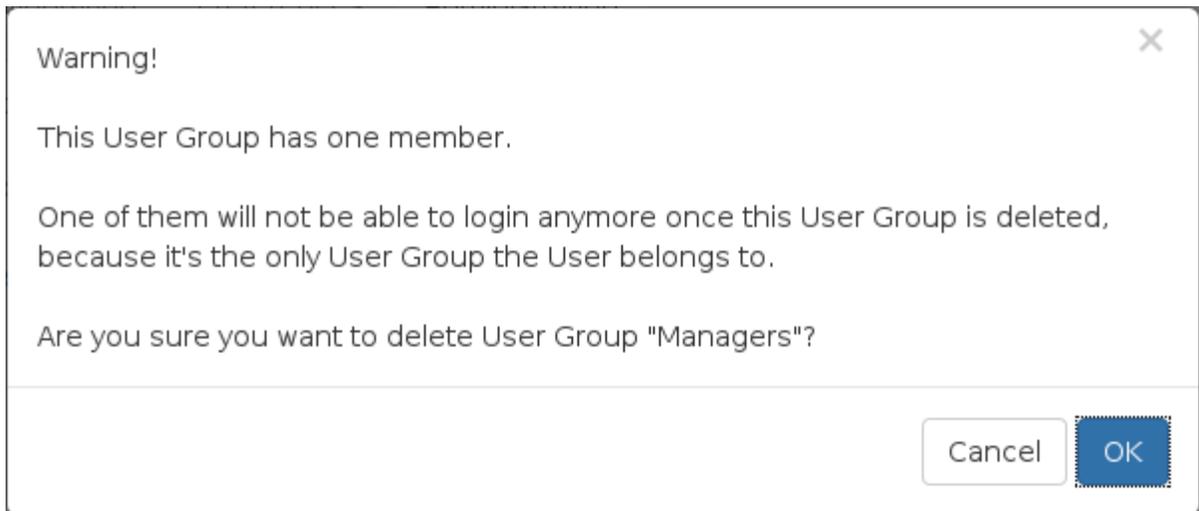

3. Click OK to confirm the deletion or Cancel to abort it.

---

## LDAP

The external LDAP authentication has the following two modes:

- Authentication and authorization via LDAP
- Only authentication via LDAP

---

*Note: For information on enabling or disabling the LDAP authorization, see **Adding LDAP Servers** (on page 114).*

---

LDAP cannot be used when CC-SG Integration is enabled.

▶ **Authentication and authorization via LDAP:**

- a. On the LDAP server(s), create both USERS AND USER GROUPS for the User Station.
- b. On the User Station, create user groups whose group names are the same as those on the LDAP server(s). See **User Groups** (on page 109).
  - You can also import desired user groups from the LDAP server into the User Station after performing an LDAP search for user group objects. See **Searching for LDAP Users and Groups** (on page 123).
  - User names for this LDAP authentication mode are NOT needed on the User Station.

LDAP alias, which allows one user to have multiple logins, such as multiple common names, does NOT work in the LDAP authentication and authorization mode.

▶ **Only authentication via LDAP:**

- a. On the LDAP server(s), create users for the User Station.
  - User groups are NOT needed on the LDAP server(s).
- b. On the User Station, create both USERS AND USER GROUPS. The user names must be the same as those on the LDAP server(s), but the user passwords are not stored on the User Station. See **Users** (on page 105) and **User Groups** (on page 109).
  - You can also import desired user names from the LDAP server into the User Station after performing an LDAP search for user objects. See **Searching for LDAP Users and Groups** (on page 123).

LDAP alias works fine in the LDAP authentication only mode.

► **User Station configuration required for either LDAP authentication mode:**

- Add the LDAP server(s). See **Adding LDAP Servers** (on page 114).
- Enable the LDAP authentication. See **Enabling or Disabling the LDAP Authentication** (on page 122) or **Setting the Maximum Search Results** (on page 126).

---

*TIP: When "admin" is entered as the username and LDAP is enabled, an additional checkbox "Authenticate Locally" appears on the login page. You can select Authenticate Locally to authenticate using User Station's local database instead of the LDAP server(s) regardless of the LDAP authentication mode.*

---

### Adding LDAP Servers

To apply external LDAP authentication, at least one LDAP server must be added to the User Station. If you are not familiar with the LDAP settings, consult your LDAP administrator for help.

If there are multiple LDAP servers added, the order of the LDAP servers determines the authentication priority. The User Station first connects to the first LDAP server for user authentication, then the second if the first LDAP server fails, and so on until it successfully authenticates the user. If all LDAP servers fail the authentication, the user's access is denied.

► **To add LDAP servers:**

1. If not displayed, launch the User Station Configuration window. See **User Station Configuration** (on page 26).
2. Click Administration > LDAP > . The New LDAP Server page opens, with 5 groups of settings displayed.
3. The General section determines general LDAP settings.



General

**Type**

Active Directory Server

**Order**

1

Active

Setting	Description
<b>Type</b>	The type of the new LDAP server: <ul style="list-style-type: none"> <li>Active Directory Server: Microsoft Active Directory</li> <li>LDAP server: OpenLDAP</li> </ul>
<b>Order</b>	The order of this LDAP server, which determines the authentication priority when there are multiple LDAP servers.  If adding more than one LDAP server, you can change the priority by selecting the sequential number of any existing LDAP server. That existing LDAP server and all servers that follow it will move down one position in the order.
<b>Active</b>	Leave this checkbox enabled unless you want to disable this LDAP server temporarily.

- Enter the LDAP server's data in the Connection section.

Connection

**Domain**

Use Host

**Hostname/IP-Address**

Use TLS/SSL

**Port**

*Default: 389*

Check Server Certificate

[Manage certificates](#)

Setting	Description
<b>Domain</b>	<p><b>Configurable when "Type" is set to "Active Directory Server."</b></p> <p>The Active Directory server's domain name. Usually the User Station can determine the Active Directory server's host name via its domain name and DNS. If you select the following Use Host checkbox, this behavior is replaced.</p>
<b>Use Host</b>	<p><b>Configurable when "Type" is set to "Active Directory Server."</b></p> <p>Enable this checkbox when intending to manually specify the host name or IP address of the Active Directory server.</p>
<b>Hostname/ IP-Address</b>	<p>The LDAP server's host name or IP address.</p>
<b>Use TLS/SSL</b>	<p>Select this checkbox if the security connection is required for the LDAP server.</p>
<b>Port</b>	<p>TCP port for the LDAP authentication, whose default is either of the following:</p> <ul style="list-style-type: none"> <li>▪ 389 (standard)</li> <li>▪ 636 (TLS/SSL)</li> </ul>
<b>Check Server Certificates</b>	<p><b>Configurable when the Use TLS/SSL checkbox is selected.</b></p> <p>Select this checkbox if it is required to validate the LDAP server's certificate by the list of accepted certificates on the User Station prior to the connection. If the certificate validation fails, the connection is refused.</p>
<b>Manage certificates</b>	<p>Click this link for installing a CA certificate as needed. See <b>Certificates</b> (on page 132).</p>

---

*Note: The LDAPS connections, which have the encrypted LDAP enabled, are NOT using the FIPS accredited cryptographic code.*

---

5. Enter the bind credentials in the Bind section.

Bind
<b>Base DN</b> <input type="text"/>
<b>Login Name Attribute</b> <input type="text" value="sAMAccountName"/> <i>Default: sAMAccountName</i>
<b>Search Filter</b> <input type="text" value="(objectClass=user)"/> <i>Default: (objectClass=user)</i>
<b>Search Scope</b> <input type="text" value="Subtree"/>
<b>Search Credentials</b> <input type="text" value="no search"/>
<b>Admin DN</b> <input type="text"/>
<b>Admin Password</b> <input type="password" value="...."/>
<input checked="" type="checkbox"/> Bind After Search

Setting	Description
<b>Base DN</b>	Distinguished Name (DN) of the search base, which is the starting point of the LDAP search. <ul style="list-style-type: none"> <li>Example: ou=dev,dc=example,dc=com</li> </ul>
<b>Login Name Attribute</b>	The attribute of the LDAP user class which denotes the login name. Note that only relative distinguished names (RDNs) can be specified in this field. <ul style="list-style-type: none"> <li>Example: cn</li> </ul>
<b>Search Filter</b>	Search criteria for finding LDAP user objects within the directory tree.
<b>Search Scope</b>	The depth to search for LDAP user objects, which starts at the directory level denoted by the "Base DN." <ul style="list-style-type: none"> <li>One: Searches one level below the base DN, with the base excluded.</li> <li>Subtree: Searches all levels below the base DN, including the base.</li> </ul>
<b>Search Credentials</b>	If the authentication of a user requires the LDAP search, specify the search credentials for it: <ul style="list-style-type: none"> <li>no search: No LDAP search is performed.</li> <li>anonymous: Enables the LDAP search without dedicated search credentials.</li> <li>use admin credentials: Enables the LDAP search by entering the dedicated search credentials - a DN and password.</li> </ul>
<b>Admin DN, Admin Password</b>	<b>Configurable when "Search Credentials" is set to "use admin credentials."</b> Distinguished Name and password of the administrator user who is permitted to perform the LDAP search.

Setting	Description
Bind After Search	<p>Configurable when "Search Credentials" is NOT set to "no search."</p> <p>Select this checkbox if the LDAP bind operation shall be performed with a DN derived from a search operation for the user who's trying to log in.</p> <p>Usually this checkbox is:</p> <ul style="list-style-type: none"> <li>▪ Deselected for the "Active Directory Server."</li> <li>▪ Selected for the "LDAP server."</li> </ul>

6. To use LDAP groups for the authorization, configure the Groups section.

**Groups**

Use Groups For Authorization

Use Group Search DN

**Group Search DN**

**Group ID Attribute**

*Default: sAMAccountName*

**Group Member Attribute**

*Default: member*

**Group Search Filter**

*Default: (objectClass=group)*

**Group Search Scope**

▼

Setting	Description
<b>Use Groups For Authorization</b>	Select this checkbox if authorization via LDAP is intended. See <b>LDAP</b> (on page 113).  When disabled, authorization is managed by the User Station, and this LDAP server only manages authentication.
<b>Use Group Search DN</b>	Select this checkbox when intending to search a dedicated base DN instead of the "Base DN" for user groups.  When disabled, "Base DN" is used for group searches.
<b>Group Search DN</b>	<b>Configurable when "Use Group Search DN" is enabled.</b> The dedicated base DN for group searches.
<b>Group ID Attribute</b>	The attribute of the LDAP group class which denotes the ID of the group which is used to match local group names.
<b>Group Member Attribute</b>	The attribute of the LDAP group class which denotes the users who belong to a group. Its value must be either one below: <ul style="list-style-type: none"> <li>▪ A user's DN</li> <li>▪ Value of the "Login Name Attribute"</li> </ul> <hr/> <i>Note: If the value is not either one, the group member detection may not work as expected.</i>
<b>Group Search Filter</b>	Search criteria for finding LDAP group objects within the directory tree.
<b>Group Search Scope</b>	The depth to search for LDAP group objects, which starts at the directory level denoted by the "Base DN" or a group search base DN. <ul style="list-style-type: none"> <li>▪ One: Searches one level below the base DN, with the base excluded.</li> <li>▪ Subtree: Searches all levels below the base DN, including the base.</li> </ul>

- To test whether the connection to the new LDAP server can be successfully established, type the LDAP user name and password in the Test Connection section and click Test.

Test Connection

**Login**

**Password**

- Click Save.
- Repeat the same steps to add more LDAP servers as needed.

### Editing or Deleting LDAP Servers

To show a list of existing LDAP servers, click Administration > LDAP.

In the Active column:

- indicates that LDAP server is enabled.
- indicates that LDAP server is disabled.

## LDAP Servers





Order	Active	Host	Port	Type	
1	<input checked="" type="checkbox"/>	192.168.5.153	389	Active Directory Server	<input type="button" value="Edit"/> <input type="button" value="Delete"/>
2	<input checked="" type="checkbox"/>	192.168.5.93	389	LDAP Server	<input type="button" value="Edit"/> <input type="button" value="Delete"/>
3	<input type="checkbox"/>	re.raritan.com	389	Active Directory Server	<input type="button" value="Edit"/> <input type="button" value="Delete"/>
4	<input checked="" type="checkbox"/>	tw.oxtechadd.com	636	Active Directory Server	<input type="button" value="Edit"/> <input type="button" value="Delete"/>

### ► To modify an LDAP server setting:

- Click the desired LDAP server's  button. The Edit LDAP Server page opens.
- Make necessary changes to the information shown. For information on each field, see *Adding LDAP Servers* (on page 114).
- Click Save.


► **To delete an LDAP server:**

1. Click the desired server's  button.
2. Click OK on the confirmation message.


---

**Enabling or Disabling the LDAP Authentication**

Click Administration > LDAP to open the LDAP Servers page. The right-most button indicates the current LDAP authentication setting.

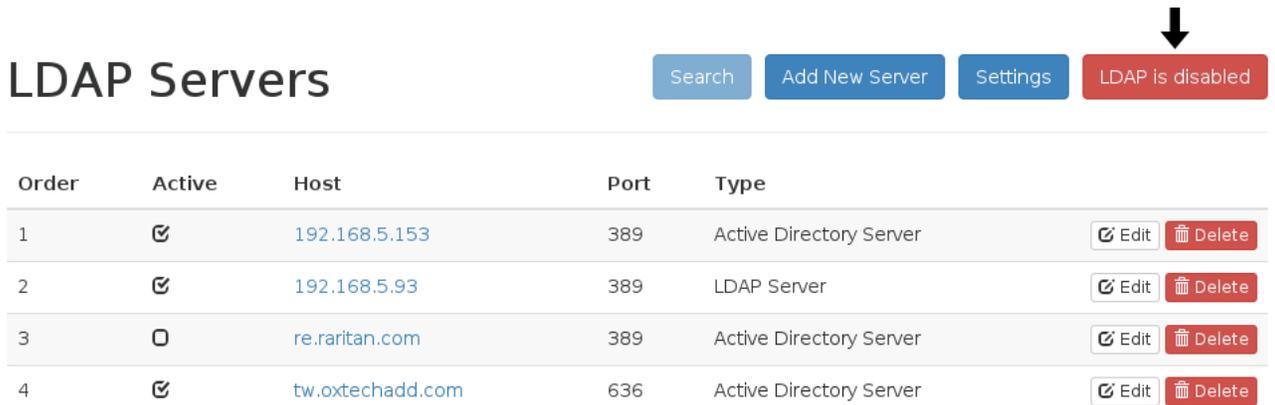

Order	Active	Host	Port	Type	Edit	Delete
1	<input checked="" type="checkbox"/>	192.168.5.153	389	Active Directory Server		
2	<input checked="" type="checkbox"/>	192.168.5.93	389	LDAP Server		
3	<input type="checkbox"/>	re.raritan.com	389	Active Directory Server		
4	<input checked="" type="checkbox"/>	tw.oxtechadd.com	636	Active Directory Server		

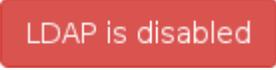When that page shows , the LDAP authentication is currently disabled, which is the default. While disabled, all users are authenticated via the local database of the User Station so their user credentials must be available on the User Station. Therefore, only local users can log in. See *Users* (on page 105).

When that page shows , the LDAP authentication is currently enabled. While enabled, all users are authenticated via the LDAP servers so only LDAP users can log in. The only local user that can log in is the *admin* user.

► **To enable/disable the LDAP authentication:**

- To enable it, click .
- To disable it, click .

---

*Tip 1: You can also enable or disable the LDAP authentication on the Edit LDAP Settings page. See **Setting the Maximum Search Results** (on page 126).*

---

---

*Tip 2: To enable or disable a specific LDAP server only, select or deselect the desired LDAP server's Active checkbox. See **Editing or Deleting LDAP Servers** (on page 121).*

---

### Searching for LDAP Users and Groups

When the LDAP authentication is being enabled, you can manually search for LDAP users or user groups as needed.



## LDAP Servers

Search
Add New Server
Settings
LDAP is enabled

---

Order	Active	Host	Port	Type	
1	<input checked="" type="checkbox"/>	192.168.5.153	389	Active Directory Server	<span style="border: 1px solid #ccc; padding: 2px 5px;"> Edit</span> <span style="border: 1px solid #ccc; padding: 2px 5px; background-color: #f44336; color: white;"> Delete</span>
2	<input checked="" type="checkbox"/>	192.168.5.93	389	LDAP Server	<span style="border: 1px solid #ccc; padding: 2px 5px;"> Edit</span> <span style="border: 1px solid #ccc; padding: 2px 5px; background-color: #f44336; color: white;"> Delete</span>

► **To search for LDAP user or group objects:**

1. Click Administration > LDAP > . The "Search for LDAP Users" page opens.

- If the Search button is disabled, enable the LDAP authentication first. See *Enabling or Disabling the LDAP Authentication* (on page 122).

## Search for LDAP Users

Authenticate	Search
<b>Server</b> <input type="text" value="192.168.5.153"/>	<b>Type</b> <input type="text" value="Users"/>
<b>* Search Credentials</b> <input type="text" value="specify below"/>	<b>Base DN</b> <input type="text" value="dc=testlab,dc=nix"/>
<b>Bind DN</b> <input type="text"/>	<b>Search Filter</b> <input type="text" value="(objectClass=user)"/>
<b>Password</b> <input type="text"/>	<b>Search Scope</b> <input type="text" value="Subtree"/>
<input type="button" value="Search"/> <input type="button" value="Cancel"/>	

2. In the Server field, select the desired LDAP server from the list of *active* LDAP servers.
3. The following settings on this page are pre-populated with the values of the selected LDAP server, but you can adjust them to match your search needs. If you are not familiar with the LDAP settings, consult your LDAP administrator for help.

Setting	Description
<b>Search Credentials</b>	One or two options are available, depending on the selected LDAP server's configuration. <ul style="list-style-type: none"> <li>stored admin credentials: Use the admin credentials stored in the LDAP server's configuration.</li> <li>specify below: Use the search credentials specified in the following two fields.</li> </ul>
<b>Bind DN, Password</b>	With "specify below" selected, you must specify the search credentials in the two fields.
<b>Type</b>	The type of user data to search - Users or Groups.
<b>Base DN</b>	Distinguished Name (DN) of the search base, which is the starting point of the LDAP search.
<b>Search Filter</b>	Search criteria for finding LDAP user objects within the directory tree.
<b>Search Scope</b>	The depth to search for LDAP user or group objects, which starts at the directory level denoted by the "Base DN." <ul style="list-style-type: none"> <li>Base: Searches the base DN only.</li> <li>One: Searches one level below the base DN, with the base excluded.</li> <li>Subtree: Searches all levels below the base DN, including the base.</li> </ul>

4. Click Search.
5. From the search result, you can select desired LDAP users or groups and add them to the User Station by clicking the buttons below.
  - *Add as local user:*

This button is displayed for those users who are not added to the User Station yet. Click this button to add the LDAP user as a local user who can also be authenticated via LDAP in the "LDAP authentication only" mode. Its authorization is managed by the User Station so ensure this user is a member of at least one user group in the local database. See *Editing or Deleting Users* (on page 108).

- *Add this group:*  
This button is displayed for those groups that are not available on the User Station yet. Click this button to add the LDAP group as a user group with the "Device Access" privilege assigned. To modify the privileges, see *Editing or Deleting User Groups* (on page 111).
- *Add selected:*  
To select multiple LDAP users or groups at a time, select their checkboxes and then click this button.

---

### Setting the Maximum Search Results

By default, the limitation for the LDAP search results is disabled.

When enabling the LDAP, this limitation is enabled. The default limitation is 1000. If the found result entries are more than the upper limit you set, those result entries exceeding the maximum are not displayed but a message shows up to remind you to specify a more accurate search filter.

#### ► To configure the maximum LDAP search results:

1. Click Administration > LDAP > . The Edit LDAP Settings page opens.

## Edit LDAP Settings

Enabled

### Max Search Results

1000

Save

Cancel

2. To enable the LDAP authentication and set the upper limit for the LDAP search results, select the Enabled checkbox.

---

*Tip: For the alternative to enable the LDAP authentication, see **Enabling or Disabling the LDAP Authentication** (on page 122).*

---

3. Select the desired value in the Max Search Results field: *10, 100, 1000 or 10000.*
4. Click Save.

---

### Logging in with LDAP

When LDAP is enabled, Dominion User Station presents a different login page. The login icon indicates the authentication type being used: Local, LDAP, or CC-SG.




---

### LDAP Login Failure Message

Certificate hostname verification added in release 1.3 may cause an error upon upgrade if LDAP servers were added using IP address instead of hostname.

LDAP user login attempt may fail with the event log message:

- Login of 'name' failed with hostname "IP Address" does not match the certificate at LDAPs://<IP address>

► **To resolve:**

- Update the LDAP server configuration. You may add the hostname, or disable TLS/SSL:
  1. Open the User Station Configuration page. Choose Administration > LDAP.
    - Click the LDAP server's Edit button. Enter the hostname in the Hostname/IP-Address field, instead of the IP address.
    - OR, if you prefer, disable Use TLS/SSL for LDAP server.
  2. Click Save.

---

## CommandCenter Secure Gateway (CC-SG) Integration

Raritan's CommandCenter® Secure Gateway (CC-SG) is an easy to deploy, plug-and-play appliance that provides IT administrators and lab managers with a secure, single point of remote access and control. Raritan's CC-SG consolidates multiple remote access technologies, including Dominion® KVM-over-IP switches and serial console servers, Raritan PX PDUs, service processors, and in-band methods such as RDP, SSH and VNC.

CC-SG integration allows you to access and control target servers connected to the KX3 and KX2-101-v2 switches managed by CC-SG without explicitly adding them directly to Dominion User Station. When CC-SG integration is setup, you can login to Dominion User Station with your CC-SG username and password. Dominion User Station uses your CC-SG authorization information to show the ports of your CC-SG-managed KX3 and KX2-101-v2 switches in the Dominion User Station Navigator. Your permissions to view, access, and control are the same as in CC-SG because the same authentication and authorization are used.

A local authentication option can be set to allow either CC-SG or local Dominion User Station access.

The login page and the Navigator show a CC-SG label when integration is in effect:

- See *Logging in with CC-SG Integration* (on page 131)
- See *Navigator with CC-SG Integration* (on page 132)

Launching KVM sessions for ports works exactly the same as your usual Dominion User Station experience, using the KVM Client. See *Using the KVM Client* (on page 53).

---

### CC-SG Integration Requirements

- CC-SG beta version 6.3
- Dominion User Station version 2.0.
- LDAP cannot be enabled on Dominion User Station when CC-SG integration is enabled.

## Enabling CC-SG Integration

Enable CC-SG integration in the Administration settings.


When the feature is enabled or disabled, you must log out of Dominion User Station, and then log back in so that the authentication can take effect.

If you have local users and CC-SG users, make sure "Allow access for local users" is checked. This setting adds a local users option to the login page, so that all of your users can access. Using a local login disables the CC-SG integration access for the current session. Local users will not see any CC-SG devices.

*Note: If the CC-SG is in cluster mode and the primary CC-SG goes down, the Dominion User Station will **not** try to connect to the backup CC-SG.*

### ► To enable CC-SG integration:

1. If not displayed, launch the User Station Configuration window. See *User Station Configuration* (on page 26).
2. Click Administration > CC-SG.

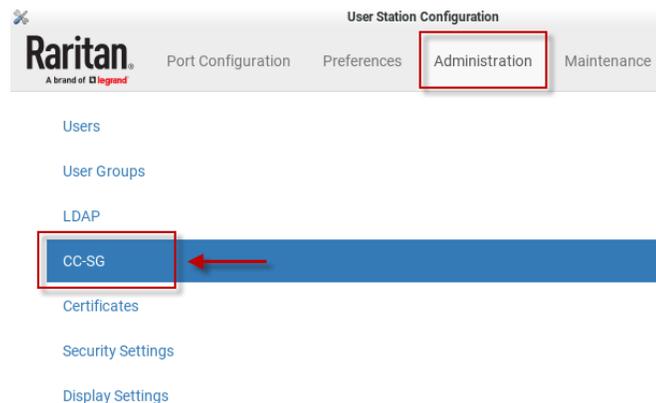

3. In the Edit CC-SG Settings page, select the options for your CC-SG integration:
  - a. Enable CC-SG Integration: select the checkbox, then add the CC-SG IP Address/Hostname.
  - b. Allow access for local users: select this option to allow local users to access even when CC-SG integration is enabled. When enabled, an additional checkbox appears on the Dominion User Station login page for local users to select when they need to login locally.

4. For the setting to take effect, you must log out of Dominion User Station, then login again with your CC-SG credentials. See *Logging in with CC-SG Integration* (on page 131).

The screenshot shows the 'User Station Configuration' web interface. At the top, there is a navigation bar with the Raritan logo and tabs for 'Port Configuration', 'Preferences', 'Administration', and 'Maintenance'. The user is logged in as 'Administrator'. Below the navigation bar, the main heading is 'Edit CC-SG Settings'. A light blue informational box contains the following text: 'CC-SG Integration allows the User Station to pull in nodes from the configured CC-SG and connect to their KVM interface. Once the feature has been enabled in this dialog you need to logout and re-login using a valid CC-SG user. Authentication of this user is performed by CC-SG. If **Allow access for local users** is enabled then users can choose to login as a user managed by the User Station what will temporarily disable CC-SG integration for that session. You are currently logged in as *local* user.'

The configuration form below the informational box includes:

- Enable CC-SG Integration
- \*CC-SG's IP Address / Hostname: 192.168.53.150
- Allow access for local users
- Buttons: Save, Cancel


The bottom of the screenshot shows a taskbar with 'Main Menu', 'User Station Configurati...', system icons, and the date/time 'Tue Oct 31, 11:40'.

## Logging in with CC-SG Integration

When CC-SG integration is enabled, the Dominion User Station presents a different login page.


Depending on your setting, you may see an extra checkbox for local users.

- **CC-SG icon:** The CC-SG icon indicates that CC-SG integration is enabled. Login with your CC-SG username and password to access the targets you have permissions for on CC-SG.
- **Authenticate locally checkbox:** This checkbox appears when your CC-SG integration setting "Allow access for local users" is enabled. Local users who do not have CC-SG credentials, or who need to use locally added KVM targets should select this checkbox, and enter local Dominion User Station login credentials. Authenticating locally means that CC-SG integration will be temporarily disabled for the current session. This checkbox also appears when the username "admin" is entered. The local "admin" user may always login.
- **LDAP cannot be enabled when CC-SG integration is enabled.**

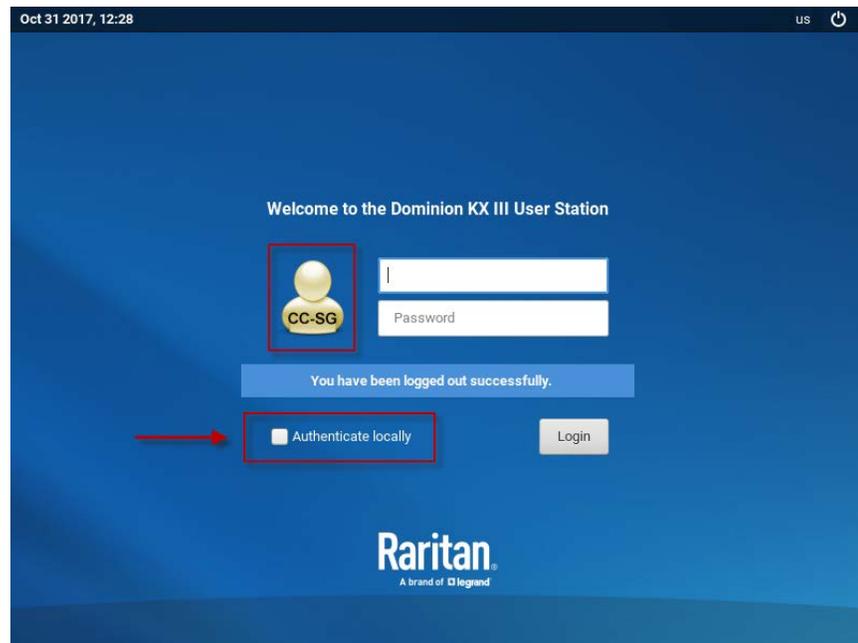

### Navigator with CC-SG Integration

When CC-SG integration is enabled, the Port Navigator's appearance changes. The title of the Ports section changes to "CC-SG Ports". CC-SG ports that the user is authorized for are shown in the navigator. Ports of KVM switches that are configured locally on the Dominion User Station do not appear when you are logged in with a CC-SG user account.

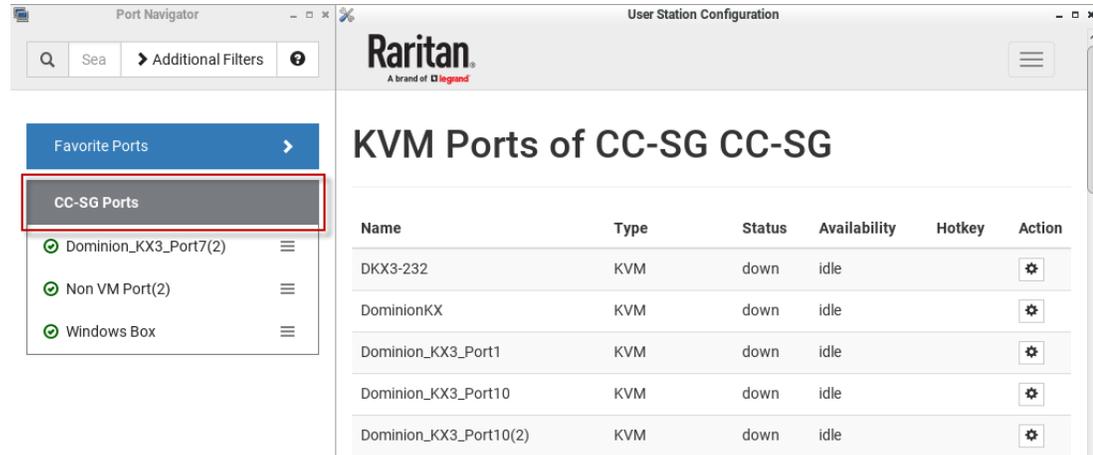

### CC-SG Authentication Fallback

CC-SG has a fall-back authentication mechanism. CC-SG maintains an ordered list of authentication methods and if one authentication method fails CC-SG tries authentication with the next mechanism in the list.

For the best results with CC-SG integration, make sure users have the same access privileges in each authentication server that may be used.

## Certificates

You must install certificates on the User Station in these scenarios:

- A valid CA certificate is required to establish the LDAP connection. Then you must:
  - a. Consult your LDAP server administrator to get the CA certificate file.
  - b. Install this CA certificate onto the User Station.

- When FIPS mode is enabled, all encrypted connections to KX III KVM switches are processed using the FIPS accredited cryptographic code and the authenticity of those KVM switches is checked via their certificate chain. When Check KX Device Certificate is enabled, authenticity of KVM switches is checked via their certificate chain. You must install the trusted device- or root-certificate of each KX III KVM switch on the User Station, or the connection to the KVM switches fails.
- When CC-SG integration is enabled, and FIPS mode or Check KX Device Certificate is enabled as well, you must install the CC-SG certificate. Also, if the CC-SG and the KX3s managed by the CC-SG have certificates signed by different CAs, then the certificates from both the CC-SG and the KX3 devices should be added to the KX User Station, or the connection fails. A connection error message appears. See **Certificate Failure Messages** (on page 135). Note that CC-SG supports 512 bit key size certificates, but certificates using RSA or DSA algorithm with key-sizes smaller than 1024 bit are not accepted by Dominion User Station.

For more details about creating certificates that are accepted, see **Certificate Requirements** (on page 192).

► **To install the CA or KX III certificate(s) on the User Station:**

1. Plug a USB drive containing the appropriate certificate file into the User Station.



2. Click Administration > Certificates > **Import Certificate**. The Import Trusted Certificate page opens with a list of detected certificates.
  - If the connected USB drive is not detected, click Rescan USB.

## Import Trusted Certificate



**Note**

In order to import a certificate insert a USB-Storage, such as a USB-Stick, containing the certificate file in its root directory.  
 The file must have a suffix of .pem, .der, .txt, .cer or .crt (case insensitive).  
 The file has to contain a PEM or DER encoded certificate.

USB Storage	Certificate Files
FAT-32	cacert.pem 

3. Click **Import** to install the desired certificate onto the User Station. Certificate files must be one of the following types: PEM, DER, TXT, CER, or CRT.

4. The content of the installed certificate is displayed.
  - To show a list of installed certificates, click Back to all Certificates.
  - To remove this certificate, click Remove and then OK.
5. If multiple certificates are needed, repeat the same steps to install more.

---


### Removing an Installed Certificate

If any installed certificate is outdated, invalid or no longer required, you can remove it.

► **To remove a certificate from the User Station:**

1. Click Administration > Certificates. A list of installed certificates is displayed.

## Trusted Certificates

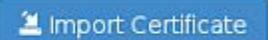 Import Certificate

### Title


\*.raritan.com (CN)

2. Click the certificate that you want to remove. The certificate's content displays. Skim through the content to make sure it is the correct one.
  - If incorrect, click Back to all Certificates to return to the certificates list.
3. Click Remove.
4. Click OK on the confirmation message.

---

### Certificate Failure Messages

In the FIPS mode and when Check KX Device Certificates is enabled, if the KVM connection failure is resulted from the absence of a valid KVM switch certificate on the User Station, an error message similar to the following appears.

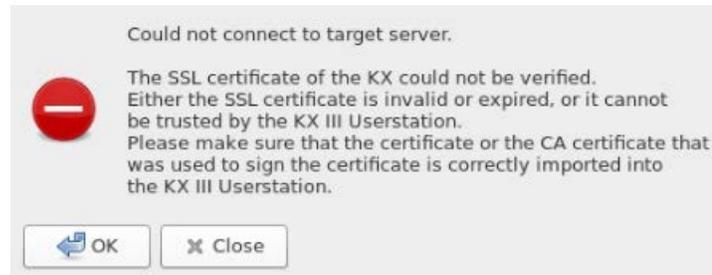


---

### Security Settings

The User Station optionally uses a FIPS 140-2 encryption module that supports the Security Requirements for Cryptographic Modules of the Federal Information Processing Standards (FIPS), which is defined in the *FIPS PUB 140-2* (<http://www.nist.gov/cmvp/>), *Annex A: Approved Security Functions*. These standards are used to protect the Federal government's sensitive information with the cryptographic-based security systems in the U.S. and Canada.

The Check KX Device Certificates option allows Dominion User Station to enforce SSL certificate checks in communication with the KX3 for both port information and KVM sessions.

When FIPS mode is enabled, all encrypted connections to KX III KVM switches are processed using the FIPS accredited cryptographic code and the authenticity of those KVM switches is checked via their certificate chain. When Check KX Device Certificate is enabled, authenticity of KVM switches is checked via their certificate chain. You must install the trusted device- or root-certificate of each KX III KVM switch on the User Station, or the connection to the KVM switches fails. See *Certificates* (on page 132).

---

**Important: In the FIPS mode, the User Station CANNOT connect to any targets on a KX III KVM switch with Security setting TLS 1.2 only.**

---

*Note: The LDAPS connections, which have the encrypted LDAP enabled, are NOT using the FIPS accredited cryptographic code.*

---

► **To enable or disable the FIPS mode:**

1. Click Administration > Security Settings. The Security Settings page opens.
  - indicates the setting is enabled.
  - indicates the setting is disabled.

## Security Settings

The screenshot shows the Security Settings page. It has two main sections: 'FIPS 140-2 Mode' and 'Certificate Settings'. The 'FIPS 140-2 Mode' section contains a text box explaining the FIPS standard and a checkbox labeled 'FIPS 140-2 Mode:' which is currently unchecked. The 'Certificate Settings' section contains a text box explaining certificate checking, a checkbox labeled 'Check KX Device Certificates:' which is also unchecked, and a blue button labeled 'Manage Certificates'. At the bottom left of the page, there is an 'Edit' button.

---

*Note: These options require certificates to be installed. Click Manage Certificates to check certificates or install more. See **Certificates** (on page 132).*

---

2. Click Edit, and then select or deselect the checkboxes for FIPS or Certificate Settings.

---

*Note: If certificates have not been installed yet, you will see a message. Click Manage Certificates to go to the import page. Certificate hostname verification is enforced.*

---

3. Click Save.
4. Click OK on the confirmation message.

- The User Station now reboots if FIPS mode was changed. Wait until the Login Screen appears.

---

## Display Settings

The User Station display can be configured to lock the screen or turn off the monitor in certain conditions.

Display settings configured are applied to all users.

You must have "System Administrators" privileges to configure display settings.

---

*Note: Port Scanning sessions and KVM sessions do not prevent monitor turn-off and/or screen locking when those options are configured.*

---

### ► To edit the display settings:

- Click Administration > Display Settings.
- Click Edit.
- To turn off the monitor after an idle timeout period, select the time period:
  - Select Never to keep monitor on.
  - Select 1, 2, 3, 5, 10, 15, 30 or 60 Minutes to enable the monitor turn off after the specified idle time period.
- To lock the screen when idle, check the Lock Screen when idle checkbox. Lock Screen can only be enabled with Turn off Monitor after idle timeout. The screen is locked during the idle time period.
- Click Save.

## Edit Display Settings

Screen Locking Settings

Turn off Monitor after idle timeout


60 Minutes

Lock Screen when idle

Save Cancel

# Chapter 9 Maintenance Features

In the User Station Configuration window, click Maintenance to perform the following User Station maintenance tasks.

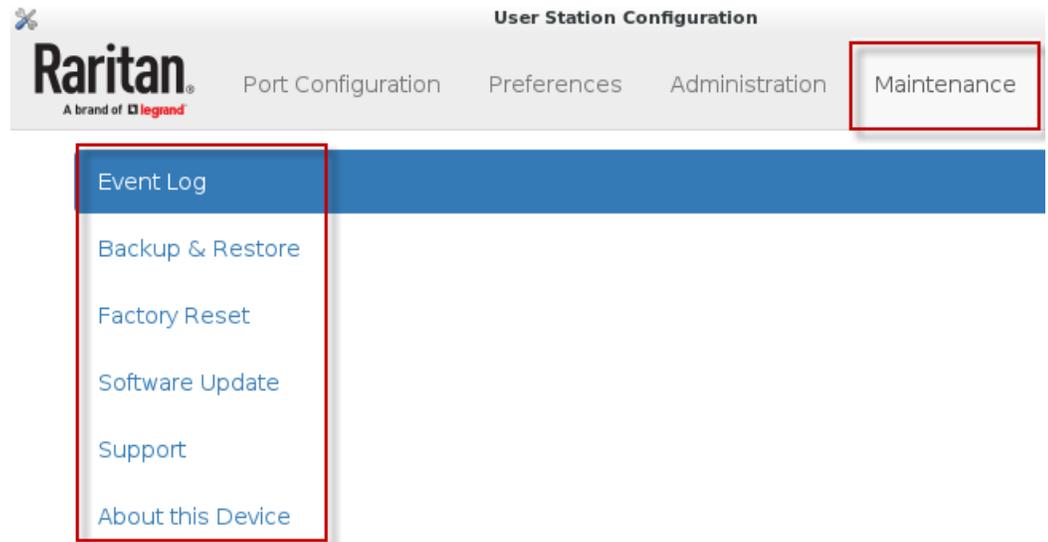

## In This Chapter

Event Log .....	139
Backup and Restore .....	147
Factory Reset.....	151
Software Update .....	153
Support .....	155
About this Device .....	158

## Event Log

The Event Log is an application level log of activity taking place in the User Station. It records who did a certain task and when it was done. For example, login and logout, open connection to a KVM-port, updating the software and so on. The Event Log also records system incidents that cannot be shown otherwise, such as LDAP authentication and authorization processing and decisions.

The Event Log is different from the Diagnostic Log File that can be downloaded from the User Station, which contains the raw system logs that cannot be conveniently read or filtered.

### Event Log Archives

---

**From**  
 📅

**To**  
 📅

**Event Type**

**Level**

**Items per page**

Search

Date (EST -0500)	Level	Type	Description
2017-03-03 15:04:10	Info	Auth Event	Local user admin logged in
2017-03-03 15:02:07	Info	Auth Event	Local user admin logged out

### ► To search and view the Event Log:

1. If not displayed, launch the User Station Configuration window. See *User Station Configuration* (on page 26).
2. Click Maintenance > Event Log. The Event Log page opens.
3. Search functions appear at the top of the screen. The most recent seven days of entries in the event log appear at the bottom of the screen.
  - Search by date: Select a date range in the From and To fields.
  - Search by Event Type: See *Event Type and Description* (on page 141). When Authentication is selected, you can select a user from the User field.
  - Search by Event Severity: Info, Warning, or Critical.
  - Items per Page: Select how many records to display per page of search results.

4. Click Search. The filtered list of events appears at the bottom of the search controls.

---

### **Event Type and Description**

The Event Log includes the following events.

#### **Authentication Events: Description includes user name and local, CC-SG, or LDAP category**

- login of user
- logout of user
- failed login attempt

#### **LDAP Events: Errors and information for LDAP authentication and authorization**

- errors and reasons for problems encountered during LDAP authentication / authorization sequence
- authentication success messages including the used bind DN

#### **KVM Events: Access of KVM ports. Description includes device, port and user name**

- KVM session started
- KVM session closed
- Scan session started
- Scan session closed

**System Events: Changes of the system such as adding users or KX devices. User is logged in description when applicable.**

- Device startup / shutdown
- LDAP enabled / disabled
- FIPS-mode enabled / disabled
- Certificate added / deleted
- Enforce Certificate Check enabled / disabled
- Support Login enabled / disabled
- KX added / modified / deleted
- User added / modified / deleted
- User Group added / modified / deleted
- Backup started / restored / deleted
- Event Log archive created / deleted
- Software Update started
- CC-SG mode enabled/disabled

#### CC-SG Events: Access of CC-SG

- Connection failures

---

#### Event Log Archives

Event Log records can be archived to clear the database. Event Log archives are always created and stored inside the User Station. The file created is a compressed CSV file containing one line per record and all attributes of the record. Each record has a timestamp in UTC.

All stored archives are listed with the following details:

- date of creation
- filename: kxust-event-log-archive-<year>-<month>-<day>-<time>.gz
  - example: kxust-event-log-archive-2016-11-18-140000.gz
- size

```
2016-11-15 16:08:57 UTC,System Event,Info,System started
2016-11-15 16:09:06 UTC,Auth Event,Info,Local user admin logged in
2016-11-15 16:09:59 UTC,System Event,Info,User admin was updated by User admin.
2016-11-15 16:15:40 UTC,System Event,Info,A firmware update to version 1.2.0.5.178 was started by user admin
```

You can create a manual archive at anytime. See *Create an Archive* (on page 143).

The Dominion User Station also automatically creates an archive if the total amount of event log records reaches a certain threshold. See *Automatic Archives* (on page 145).

#### Create an Archive

1. If not displayed, launch the User Station Configuration window. See *User Station Configuration* (on page 26).
2. Click Maintenance> Event Log. The Event Log page opens.
3. Click Archives. The Event Log Archives page opens.
4. Choose how records will be included in the archive: Age or Date
  - In the Age field: select a file age to include:
    - 1 week
    - 1 month
    - 2 months
    - 6 months
    - 1 year (default)
    - 2 years
    - 5 years
    - 10 years
  - Or, select "older than selected Date" to enable the Date field, and choose a specific Date in the calendar. To choose a specific time, use the clock icon on the calendar, as shown.
  - All events logged older than the selected Age, or older than the selected Date will be archived.
5. Click Archive.

6. Click OK in the confirmation dialog.

The screenshot displays the 'Event Log Archives' interface. At the top, it shows 'Oldest Record: 2017-02-20 15:01:32'. Below this, a text box states: 'Any record older than the selected Age or Date will be archived.' There are two input fields: 'Age' with the value 'older than selected Date' and 'Date' with the value '2017-02-21 00:00:00 -05:00'. A calendar for February 2017 is open, with the 21st highlighted. A red box around the 'OK' button in the calendar has a red arrow pointing to a confirmation dialog. The dialog shows a time selection of 20:59:00 with up and down arrows for each digit. An 'Archive' button is visible to the right of the dialog.

### Automatic Archives

Dominion User Station will automatically create archives in cases where the database has become full of too many records.

Automatic archives are implemented with two thresholds, Warning and Critical. The thresholds are checked once per day. If thresholds are met, an error message appears in the event log. The archive is created automatically when the Critical threshold is met.

▶ **Warning threshold:**

A warning message displays in the Event Log page when 2 million records has been reached:

**There are more than 2 Million entries in event log. Please archive event log entries or auto-archiving will be started once event log grows above 3 Million entries.**

▶ **Critical threshold:**

The critical threshold is 3 million records. An automatic archive is created, including all log entries above the warning threshold of 2 million records. Automatic archiving doesn't trigger immediately upon reaching 3 million entries, but will run once per day

The automatic archive creation is logged in the Event Log with username <system>

### Exporting Archive Files

To export an archive file, you must connect a USB flash drive to the User Station first. When the User Station detects the connected USB drive, the export button  appears.

1. Click the Export icon  of the file you want to export to USB.

Filename	Status	Size	Date (EST -0500)	
log-archive-20170221122350-6a0ed89e75ed.zip	Done	304 Bytes	2017-03-04 12:25:05	 


[Back](#)

2. The file is exported to the USB drive.


### Deleting Archive Files

You can delete an archive file. If you want to save the file off the Dominion User Station before deleting it, see *Exporting Archive Files* (on page 145).

1. If not displayed, launch the User Station Configuration window. See *User Station Configuration* (on page 26).
2. Click Maintenance > Event Log. The Event Log page opens.
3. Click Archives. The Event Log Archives page opens.
4. All archive files are listed at the bottom of the page. Click the Delete icon next to the file you want to delete.

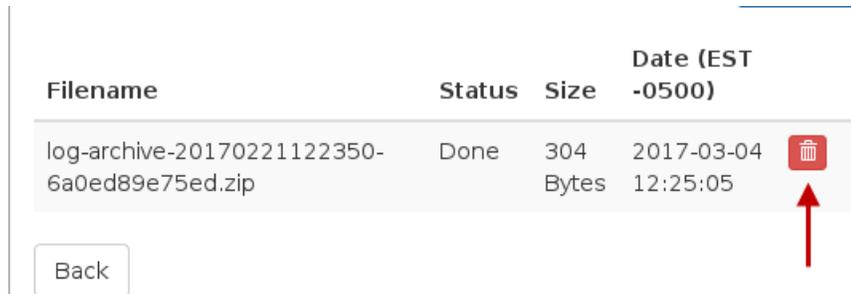

5. A confirmation message appears. Deleting cannot be undone. Click OK to delete the archive file.

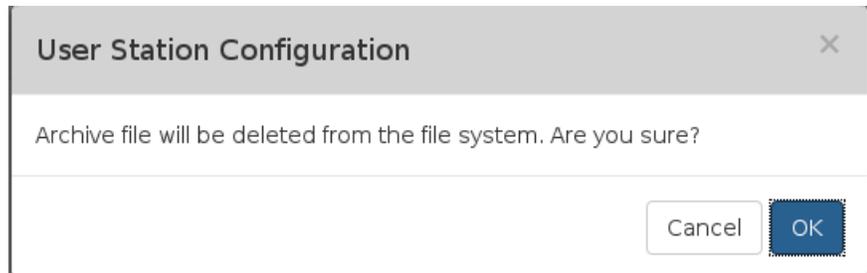

### Archive File Storage

The amount of storage to keep Event Log archives inside Dominion User Station is limited. If no more storage is available, you will see an error message upon attempting to create a new archive.

The error message prompts you to delete old archive files.

You can export files to external storage before deleting, if needed. See ***Exporting Archive Files*** (on page 145).

You must delete archive files before you can create the new archive. See ***Deleting Archive Files*** (on page 146).

If the storage is full when an automatic archive must be created, the oldest archives are automatically deleted until there is enough space to write the new archive.

Deletion of each archive is logged into the Event Log

---

## Backup and Restore

The User Station allows you to back up the latest settings and data with one click. By default, the backup files are stored in the User Station.

In case you have to restore to the previous settings and data, select the backup file you need and perform the restore command.

Note that the following system settings are NOT stored in the backup file so they CANNOT be restored.

- Audio, see ***Audio Settings*** (on page 99)
- Monitor, see ***Displays*** (see "***Monitor***" on page 165)
- Keyboard, see ***Keyboard*** (on page 162)
- Network, see ***Network Connections*** (on page 166)
- Date/Time, see ***Date/Time*** (on page 159)
- Event Log Archives
- Backup Files

---

*Tip: You can export or import backup files from a USB flash drive. See ***Exporting and Importing Backup Files*** (on page 149).*

---

### ► To back up the current settings and data:

1. If not displayed, launch the User Station Configuration window. See ***User Station Configuration*** (on page 26).

2. Click Maintenance > Backup & Restore. The Backup & Restore page opens.

## Backup & Restore

[Create Backup](#) [Import Backup](#)

Filename	Version	Size	Actions
No backup archives have been created yet.			

Notes:

- While a restore is running make sure your system is not powered off! After restore the system will reboot and you need to re-login to User Station to continue.
- Connect a USB Storage in order to export or import a backup.

3. Click Create Backup.

## Backup & Restore

[Create Backup](#) [Import Backup](#)

Filename	Version	Size	Actions
KX3UST_backup_1.2.0.5.364_20170325174009.dat	1.2.0.5.364	15.3 KB	 

4. Once completed, the Backup Archives page lists the backup file, with the filename, software version and file size shown on the screen.

► **To restore to the previous settings and data:**

1. If there are any existing backup files, the Backup Archives page lists all of them.

## Backup & Restore

[Create Backup](#) [Import Backup](#)

Filename	Version	Size	Actions
KX3UST_backup_1.2.0.5.364_20170325174401.dat	1.2.0.5.364	15.4 KB	 
KX3UST_backup_1.2.0.5.364_20170325174009.dat	1.2.0.5.364	15.3 KB	 



2. Determine the desired file and click the restore icon  button.

Or, click the filename link to view details, and click the Restore button in the details page.



3. Click OK on the confirmation message.
4. A text screen appears to show restore progress. When restore is completed, Dominion User Station restarts and opens the login page.

### Exporting and Importing Backup Files

To export or import a backup file, you must connect a USB flash drive to the User Station first.

#### ► To export backup files:

1. Connect a USB drive formatted with any of the following file system.
  - VFAT (FAT16, FAT32)
  - NTFS
  - EXT2, EXT3, EXT4
  - Btrfs
  - XFS
2. Click Maintenance > Backup & Restore. The Backup & Restore page opens. When the User Station detects the connected USB drive, the

export button  appears in the Actions column.

## Backup & Restore

 Create Backup  Import Backup

Filename	Version	Size	Actions
<a href="#">KX3UST_backup_1.2.0.5.364_20170325174401.dat</a>	1.2.0.5.364	15.4 KB	  
<a href="#">KX3UST_backup_1.2.0.5.364_20170325174009.dat</a>	1.2.0.5.364	15.3 KB	  

3. Click the  button of the desired backup file.  
The selected file is exported to the connected USB drive and therefore listed in the "Import Archive from USB Drive" section.

► **To import backup files:**

Make sure the connected USB drive contains backup files in its *root* directory.

1. Click Maintenance > Backup & Restore. The Backup & Restore page opens.
2. Click Import Backup. The Import Backup from USB Storage page opens. All backup files detected on the USB drive are listed.
3. Click the import button of the desired backup file.

The selected file is imported from the connected USB drive, and shown in the Backup & Restore page.

---

**Deleting Backup Files**

It is better to check the creation date of a backup file before removing it.

The creation date is the first 8 digits following the software version number in the filename. For example, if the filename is:

```
KX3UST_backup_1.0.0.5.284_20151014090046.dat
```

Its software version is 1.0.0.5.284, so its date is 20151014, which is October 14, 2015.

► **To remove a backup file:**

1. To show existing backup files, click Administration > Backup & Restore.
2. Click the  button of the desired file.
3. Click OK on the confirmation message.

---

## Factory Reset

The factory reset feature resets all of your User Station's settings to the factory defaults except for Network Settings and Date/Time Settings. All other customized data is removed simultaneously, including:

- All KVM switches added to the User Station
- User credentials entered for each KVM switch
- User profiles
- "admin" user profile is recreated with factory default settings
- User groups other than the built-in user groups
- Built-in user groups reset to factory default settings
- All user preferences settings, such as keyboard macros
- System settings
- Installed trusted certificates
- Backup files
- Event log
- Event log archives

---

*Note: To perform factory reset at startup instead of using the User Station Configuration window, see **Factory Reset at Startup** (on page 183).*

---

► **To perform the factory reset:**

1. If not displayed, launch the User Station Configuration window. See ***User Station Configuration*** (on page 26).

2. Click Maintenance > Factory Reset. The factory reset page opens. Read this page before proceeding to the next step.

## Reset to Factory Defaults

### Attention


This function will erase all data from your User Station's storage, including:

- Dominion KX Devices
- Credentials to access KX Devices
- Users and User Groups
- User Preferences
- System Settings
- Trusted Certificates
- Backup Files
- Log Files

You will be logged out and the system will reboot while the reset is executed. Afterwards you can login as user **admin**.

 Perform Factory Reset

3. Click .
4. Click OK to confirm the operation or Cancel to abort it.

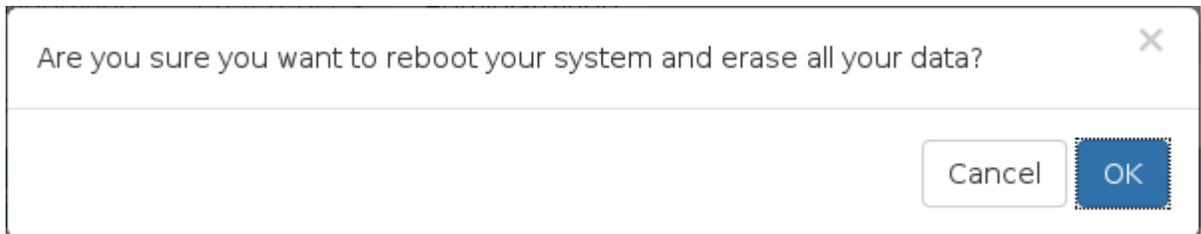

---

## Software Update

The software update feature only permits software UPGRADE, not downgrade.

---

*Note: To perform software downgrade, contact Raritan Technical Support for help.*

---

To perform the software update, you must meet the following requirements:

- Your User Station has been installed with the User Station software, and the software runs properly.

---

*Note: If your User Station cannot run the software properly, for example, the login screen is not shown after being powered on, contact Raritan Technical Support for software update.*

---

- You have a USB flash drive with one of the following formats, or a USB CD-ROM/DVD-ROM drive for inserting a CD/DVD disc containing the software file.
  - VFAT (FAT16, FAT32)
  - NTFS
  - EXT2, EXT3, EXT4
  - Btrfs
  - XFS
- The version of the software which you will install is equal to or higher than the software version currently running on your User Station. See ***About this Device*** (on page 158).

---

**Important: It is strongly recommended to back up all data and settings and export to a USB drive prior to the software update. See *Backup and Restore* (on page 147).**

---

► **To perform the software UPGRADE:**

1. Use a computer to download the User Station software file from the Dominion KX III User Station section of the Raritan website's ***Support page*** (<http://www.raritan.com/support/>).
2. Copy the file named "KX3UST\_<version>\_update.bin" to the **root directory** of your USB flash drive or CD/DVD disc. Make sure there is sufficient room in the USB flash drive or CD/DVD disc.
  - <version> in the filename refers to the software's version number.
3. On the User Station, log in as a user who has the System Administration privilege.

4. Connect the USB flash drive or a USB CD-ROM/DVD-ROM drive to the User Station.
  - If using the USB CD-ROM/DVD-ROM drive, make sure you insert the CD/DVD disc containing the software file.
5. Launch the User Station Configuration window. See **User Station Configuration** (on page 26).
6. Click Maintenance > Software Update. The Software Updates page opens, with a list of software files found in the root directory of the USB flash drive or CD/DVD disc.
  - If the desired software files are NOT detected, click Rescan USB to re-scan all connected USB drives.

## Software Updates

 Rescan USB

Storage	Update File	Size
ACE2-E4E4	<a href="#">KX3UST_1.n.0.5.100_update.bin</a>	466 MB
	<a href="#">KX3UST_1.n.0.5.150_update.bin</a>	466 MB
	<a href="#">KX3UST_1.n.0.5.200_update.bin</a>	466 MB

### Attention

In order to update the software of your system insert an USB-Storage, such as an USB-Stick, containing the Update File in its root directory. You can examine an

7. Click the desired file, and it will be analyzed. View the details carefully, including the minimum required version and validity check results.

 Start the Update

8. Click  to perform the software upgrade.

---

*Warning: Do NOT power off the User Station during the software upgrade.*

---

9. Click OK on the confirmation message.
10. When the upgrade completes, the User Station reboots, and then the login screen is shown.

---

*Note: In case the software upgrade fails, and the User Station is unable to operate, contact Raritan Technical Support.*

---

## Support

The Support page provides two features that help Raritan Technical Support to troubleshoot your User Station issues.

- **Support Login:** This feature allows the Technical Support to remotely access your User Station.
- **Log Level:** This feature allows you to set the log level of the Diagnostic Log file. Note, this file is different from the Event Log.
- **Diagnostic Log File:** This feature downloads a diagnostic log file from your User Station, which is helpful for troubleshooting.

### Support Login

The Support Login feature allows remote access from Raritan Technical Support.

By default, this feature is disabled for security.


You *MUST NOT* enable this feature unless you are instructed by Raritan Technical Support to do so.

#### ► To permit remote access from Raritan Technical Support:

1. If not displayed, launch the User Station Configuration window. See *User Station Configuration* (on page 26).
2. Click Maintenance > Support. The Support page opens.

In the Support Login section:

- indicates the setting is enabled.
- indicates the setting is disabled.

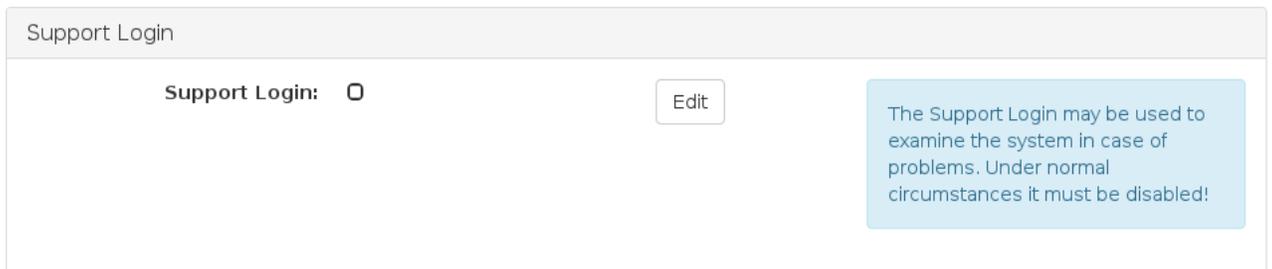

3. Click Edit.
4. Select the Support Login checkbox.
5. Click Save.
6. Provide your User Station's IP address to Raritan Technical Support.
  - To retrieve the IP address(es), right-click the network icon in the Main Toolbar to select Connection Information. See *Network Icon* (on page 176).


---

**Important: Disable this feature immediately after Raritan Technical Support finishes the troubleshooting task.**

---

### Log Level for Diagnostic Log Files

1. If not displayed, launch the User Station Configuration window. See *User Station Configuration* (on page 26).
2. Click Maintenance > Support. The Support page opens.
3. Click Edit.
4. In the Log Level section, select which logs to include in the diagnostic log file.

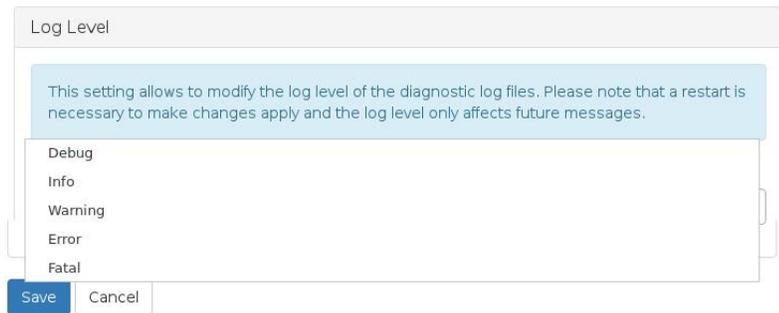

5. Click Save. Click OK in the confirmation message to set the level and restart the Dominion User Station.

---

### Diagnostic Log File

When the User Station does not work properly, you can export the User Station's diagnostic log file to a connected USB flash drive, and send the file to the Raritan Technical Support for troubleshooting.


You must have the System Administration permission to perform this operation.

Note: The Diagnostic Log File is different from the Event Log. See Event Log.

► **To download the diagnostic log from the User Station:**

1. Make sure your User Station has a USB drive connected, with one of the following supported file systems.
  - VFAT (FAT16, FAT32)
  - NTFS
  - EXT2, EXT3, EXT4
  - Btrfs
  - XFS

2. If not displayed, launch the User Station Configuration window. See **User Station Configuration** (on page 26).
3. Click Maintenance > Support. The Support page opens.
4. If the User Station does *not* detect any USB drive, the Diagnostic Log File section indicates there is no USB storage connected. Check your USB drive or plug an appropriate USB drive in.

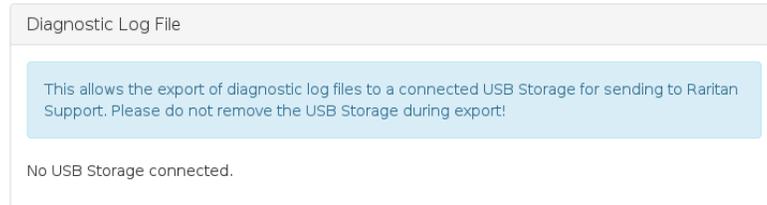

5. When the User Station detects any connected USB drive(s), the Diagnostic Log File section shows the name(s) of the detected one(s). If there are more than one USB drive connected, select the desired one from the drop-down list, and click "Export to" to export the diagnostic log.



6. Wait until the User Station finishes the export, displaying the "Successfully finished" message as well as the filename of the diagnostic log.



7. Remove the USB drive to copy and send the file to Raritan Technical Support.

---

## About this Device


The "About this Device" page shows the firmware version information. You can access this page from the Main Menu or the User Station Configuration window.

▶ **To show the version in the User Station Configuration window:**

1. If not displayed, launch the User Station Configuration window. See ***User Station Configuration*** (on page 26).
2. Click Maintenance > About this Device. The version information page opens.

▶ **To show the version via the Main Menu:**

- Choose Main Menu > Help > About this Device.

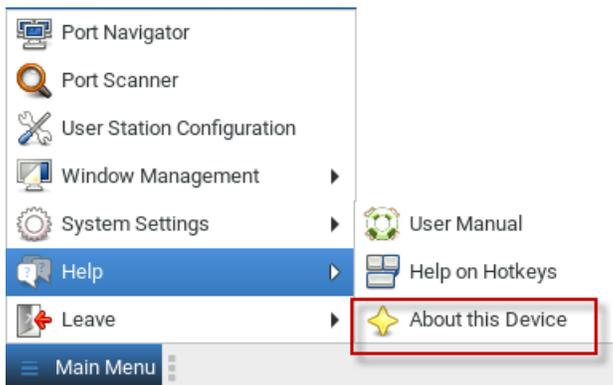

# Chapter 10 System Settings

Most of the system settings are available under System Settings in the Main Menu.




## In This Chapter

Date/Time .....	159
Keyboard.....	162
Monitor .....	165
Network Connections.....	166
Default Shortcut Icons in the Main Toolbar .....	175

---

## Date/Time

1. Choose Main Menu > System Settings > Date/Time. The date/time dialog appears.

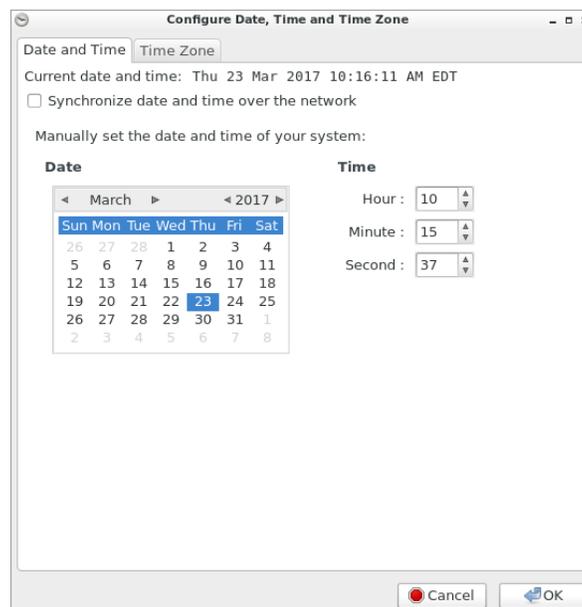

2. Click the desired tab to configure date/time settings for the User Station.

- Configure the date and time using the tab labeled **Date and Time** (on page 160).
- If the date and time synchronizes with an NTP server in the "Date and Time" tab, you must set the time zone correctly. See **Time Zone** (on page 161).

---

*Note: For "manually customized" date and time, the time zone setting does NOT affect the time displayed onscreen, but it does affect the internal UTC-based clock. Therefore, make sure the time zone setting is correct and do NOT change it unless required.*

---

---

### Date and Time

Follow one of the following procedures to set the date and time.

▶ **To manually customize the date and time:**

1. In the Date and Time tab, deselect the time synchronization checkbox.

Synchronize date and time over the network

2. Click a date in the calendar, and adjust the Hour, Minute and Second settings.


▶ **To synchronize with the NTP time server:**

1. Select the time synchronization checkbox.

Synchronize date and time over the network

2. NTP servers detected in your network are listed in the dialog.

#### NTP Servers

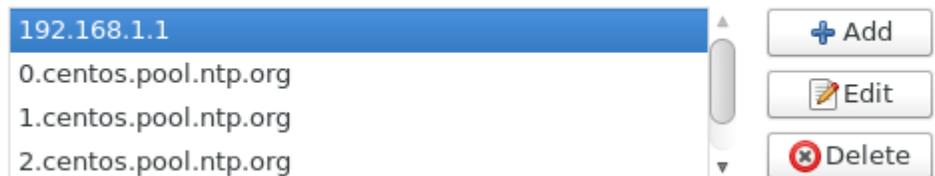

- If the desired NTP server is not listed, click Add and type its IP address/host name.
  - If any NTP server is incorrect, select it and click Edit to modify it.
  - If any NTP server is not needed, select it and click Delete.
3. Click Advanced Options to configure these checkboxes:
    - Speed up initial synchronization:


When selected, the initial time synchronization is faster while consuming more network bandwidth.

- Use Local Time Source:  
Select this only when you use a radio-controlled clock device to synchronize the User Station's clock with an authoritative time source.

## Time Zone

The time zone setting is important for both customized and NTP-synchronized time. If it is correct, do NOT change it unless required.

- For the time synchronized with an NTP server, time zone changes affect the time displayed onscreen, daylight savings time, and internal UTC-based clock of the User Station.
- For the "customized" date and time, time zone changes do NOT affect the time displayed onscreen, but they affect the internal UTC-based clock.

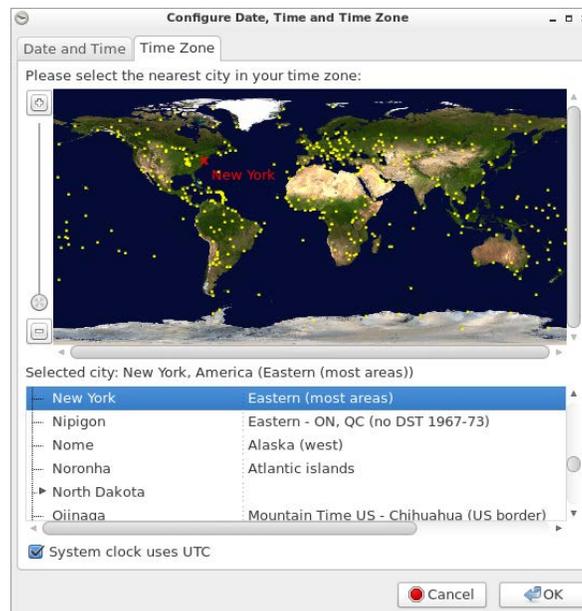

### ► To specify your time zone:

1. Click the Time Zone tab.
2. Click your city or a nearby city in the map.
  - You can scale the map by dragging the slider bar in the left side, or by clicking + (plus) and - (minus) buttons.
  - You can drag the map to move toward your destination.
3. Select your city's name in the list below the map.

4. To make the system time automatically switch between normal and daylight savings time, select the "System clock uses UTC" checkbox.

---

## Keyboard

1. Choose Main Menu > System Settings > Keyboard. The Keyboard Preferences dialog appears.




2. Click any tab to configure different keyboard settings.
  - Configure the keyboard layout in the tab labeled **Layouts** (on page 163).
  - To use the keypad to move the mouse pointer, configure **Mouse Keys** (on page 164).
3. In the "Type to test settings" field, type anything to verify the current keyboard settings.

## Layouts

In the Layouts tab, available keyboard layouts are all shown. The same keyboard layout list is also available when working with the keyboard icon in the Main Toolbar. Any changes made to the dialog's keyboard layout list also change the keyboard layout list available in the Main Toolbar. See *Main Screen and Main Toolbar* (on page 7).

A maximum of four layouts are supported.

### ► To manage available keyboard layouts:

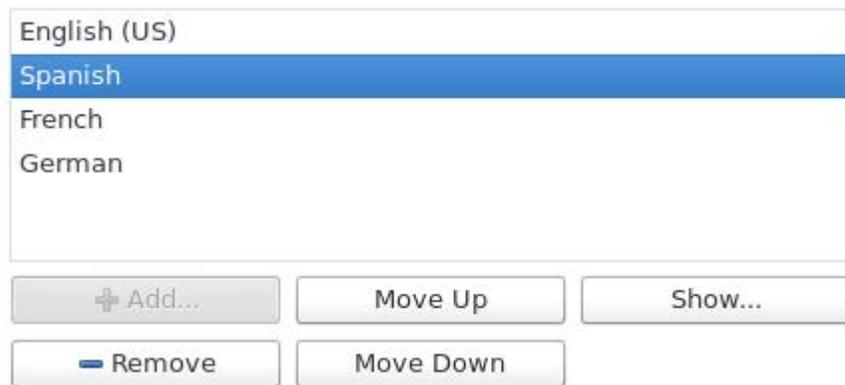

- To resort the keyboard layout list, select one layout and click Move Up or Move Down.
- To delete a layout from the list, select it and click Remove.
- To view how a keyboard layout looks like, select it and click Show.
- To add a layout to the list, click Add. This button is disabled when there are *four* layouts in the list.

### ► To determine the keyboard model:

- Click the button in the "Keyboard model" field. Then select the vendor and model of your keyboard.

### ► Reset to Defaults:

- Click this button to reset all keyboard settings to the defaults.

---

### Mouse Keys

When you want to use the numeric keypad to control the mouse pointer/cursor, select the checkbox labeled "Pointer can be controlled using the keyboard."


When enabled, each keypad key functions as the following table.

Key	Function
0	Depress the selected button
.	Release the selected button
1	Move toward the bottom-left corner
2	Move down
3	Move toward the bottom-right corner
4	Move left
5	Click the selected button
6	Move right
7	Move toward the top-left corner
8	Move up
9	Move toward the top-right corner
Num Lock	The other alternative to activate or deactivate the Mouse Keys function is to press: <i>Left Alt+Left Shift+Num Lock</i>
/	Select primary button
*	Select modifier button
-	Select alternate button
+	Double click the selected button
Enter	Enter

- Acceleration: Use the slider bar to adjust the pointer acceleration rate. Left side is faster and right side is slower.
- Speed: Use the slider bar to adjust the pointer speed. Left side is slower and right side is faster.
- Delay: Use the slider bar to adjust the delay prior to pointer movement. Left side is shorter and right side is faster.

## Monitor

1. Choose Main Menu > System Settings > Monitor. The Monitor Preferences dialog appears.

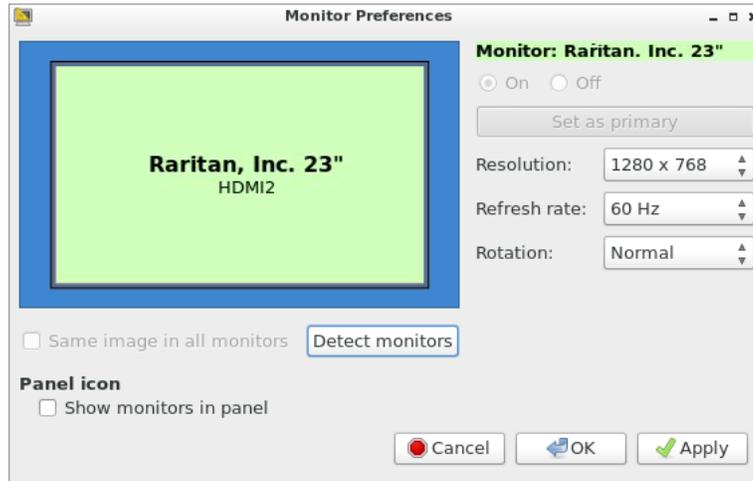

2. Perform or configure any of the following function:

Setting/button	Function
On/Off	Turn on or off this monitor, if there are two monitors connected to the User Station. This setting is disabled when only one monitor is connected.
Set as primary	Click this button to specify this monitor as the primary monitor, when there are two monitors connected. This button is disabled when: <ul style="list-style-type: none"> <li>▪ Only one monitor is connected.</li> <li>▪ OR this monitor has been set as the primary one.</li> </ul>
Resolution	Determine the video resolution applied to this monitor.
Refresh rate	Determine the refresh rate applied to this monitor.
Rotation	Determine how the image on the screen should be rotated, if intended.

Setting/button	Function
Same image in all monitors	If two monitors are connected, determine whether both monitors show the same image. This setting is disabled when only one monitor is connected.
Detect monitors	Click this button if any connected monitor is not detected. Usually it is not necessary to use this function when there is only one monitor connected.
Show monitors in panel	Determine whether the monitor shortcut icon is added to the Main Toolbar. See <b>Main Screen and Main Toolbar</b> (on page 7).

3. If any settings are changed, click OK to close the dialog, Apply to keep the dialog open, or Cancel to cancel.
  - If clicking OK or Apply, a confirmation message appears. Click Restore Previous Configuration to restore to the original settings, or click Keep This Configuration to apply the new settings.

---

## Network Connections

You can connect the two LAN ports of the User Station to the same or diverse subnets.

If you have connected both LAN ports to the network(s) when turning on or restarting the User Station, the User Station *randomly* selects one of the network connections as the default one. However, if you change the network settings of either or both connections, the "final" one that is changed will automatically become the default connection.

---

*Note: You can identify the default connection in the Connection Information dialog. See **Network Icon** (on page 176).*

---


By default, both IPv4 and IPv6 addressing are enabled for both LAN ports, and the following are the default network settings:

- IPv4: *Automatic (DHCP)*
- IPv6: *Automatic*


► **To change network settings:**

1. Choose Main Menu > System Settings > Network. The Network Connections dialog appears, with two factory default connections listed for two LAN ports.

- *Ethernet 1* is for LAN port 1, and *Ethernet 2* is for the other.

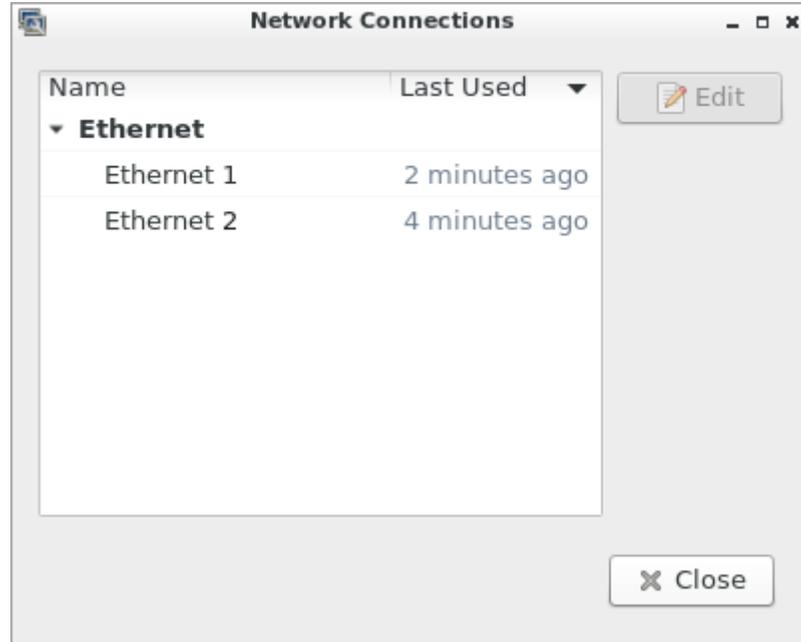

2. Select the desired connection, and click Edit. A dialog similar to the following appears.

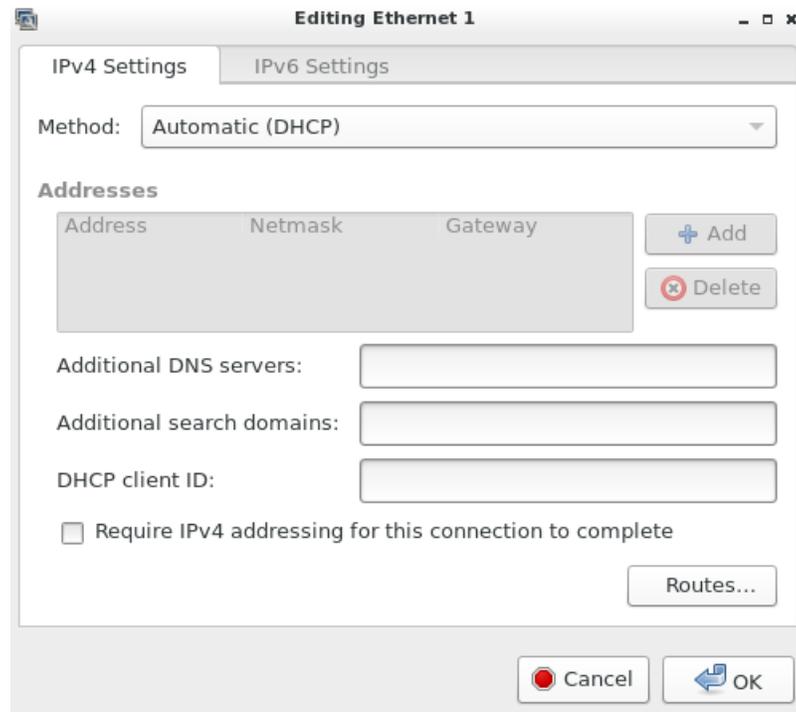

3. Click the IPv4 Settings or IPv6 Settings tab to configure network settings properly.

- **IPv4 Settings:**

Setting	Description
Method	Select one of the following as the connection method and configure associated settings: <ul style="list-style-type: none"> <li>▪ Automatic (DHCP)</li> <li>▪ Automatic (DHCP) addresses only</li> <li>▪ Manual</li> <li>▪ Disabled</li> </ul> See <i>IPv4 Settings</i> (on page 169).

- **IPv6 Settings:**

Setting	Description
Method	Select one of the following as the connection method: <ul style="list-style-type: none"> <li>▪ Ignore</li> <li>▪ Automatic</li> <li>▪ Automatic, addresses only</li> <li>▪ Automatic, DHCP only</li> <li>▪ Manual</li> </ul> See <i>IPv6 Settings</i> (on page 172).

4. Click OK. The new network settings apply now.

---

*Note: You can retrieve current IP addresses from the Connection Information dialog. See **Network Icon** (on page 176).*

---

## IPv4 Settings

**Editing Ethernet 1**

IPv4 Settings | IPv6 Settings

Method: Automatic (DHCP)

**Addresses**

Address	Netmask	Gateway
+ Add		
Delete		

Additional DNS servers:

Additional search domains:

DHCP client ID:

Require IPv4 addressing for this connection to complete

Routes...

Cancel OK

► **Automatic (DHCP):**

The DHCP server in the network automatically assigns an IPv4 address to the User Station as well as DNS server(s) and domain(s).

The following settings are configurable for this method.

Setting	Description
Additional DNS servers	<b>Optional.</b> You may specify IP addresses of one or multiple additional DNS servers for resolving host names. Use commas to separate multiple servers.
Additional search domains	<b>Optional.</b> You may specify IP addresses of one or multiple additional domains for resolving host names. Use commas to separate multiple domains.

Setting	Description
DHCP client ID	<b>Optional.</b> You can specify a DHCP client ID for identifying this User Station in the network.
Require IPv4 addressing for this connection to complete	When deselected, either IPv4 or IPv6 addressing can be used to establish the connection. When selected, only IPv4 addressing is used for making the connection.
Routes	<b>Optional.</b> Configure the IPv4 routing for this User Station. <ul style="list-style-type: none"> <li>▪ Click Add to add one or multiple routing addresses for the User Station to reach in the network.</li> <li>▪ To remove any existing routes, select it and click Delete.</li> <li>▪ <i>Ignore automatically obtained routes:</i> Select this checkbox only when you want to use manually-specified routes.</li> <li>▪ <i>Use this connection only for resources on its network:</i> If selected, this connection will be used only when retrieving resources from the network. It will never be used as the default network connection.</li> </ul>

*Note: You can retrieve current IP addresses from the Connection Information dialog. See **Network Icon** (on page 176).*

► **Automatic (DHCP) addresses only:**

The DHCP server in the network automatically assigns an IPv4 address to the User Station, but no DNS servers or domain servers are specified.

The following settings are configurable for this method.

Setting	Description
DNS servers	Specify IP addresses of one or multiple DNS servers. Use commas to separate multiple servers.

Setting	Description
Search domains	Specify IP addresses of one or multiple domains for resolving host names. Use commas to separate multiple domains.
DHCP client ID	See the above table for information of these fields/options.
Require IPv4 addressing for this connection to complete	
Routes	

► **Manual:**

Select this method when intending to manually assign a static IP address to the User Station.

In the Addresses section, click Add and then type the User Station's IPv4 address, netmask and gateway in this section. At least one IPv4 address, netmask and gateway must be specified.

### Addresses

Address	Netmask	Gateway
192.168.60.80	24	192.168.60.1

+ Add  
⊗ Delete

The following settings are configurable for this method. See the above table for associated information.

- DNS servers
- Search domains
- Require IPv4 addressing for this connection to complete
- Routes

► **Disabled:**

The IPv4 networking settings are all disabled.

## IPv6 Settings

► **Automatic:**

IPv6 autoconfiguration automatically assigns an IPv6 address to the User Station, and retrieves the information of DNS server(s) and domain(s) from the DHCP server.

The following settings are configurable for this method.

Setting	Description
Additional DNS servers	<b>Optional.</b> You may specify IP addresses of one or multiple additional DNS servers for resolving host names. Use commas to separate multiple servers.
Additional search domains	<b>Optional.</b> You may specify IP addresses of one or multiple additional domains for resolving host names. Use commas to separate multiple domains.

Setting	Description
IPv6 privacy extensions	<p>Determine whether and how privacy extensions apply to the IPv6 addressing.</p> <ul style="list-style-type: none"> <li>▪ Disabled: Disables privacy extensions.</li> <li>▪ Enabled (prefer public address): Enables privacy extensions and a public address is preferred.</li> <li>▪ Enabled (prefer temporary address): Enables privacy extensions and a temporary address is preferred.</li> </ul>
Require IPv6 addressing for this connection to complete	<p>When deselected, either IPv4 or IPv6 addressing can be used to establish the connection.</p> <p>When selected, only IPv6 addressing is used for making the connection.</p>
Routes	<p><b>Optional.</b></p> <p>Configure the IPv6 routing for this User Station.</p> <ul style="list-style-type: none"> <li>▪ Click Add to add one or multiple routing addresses for the User Station to reach in the network.</li> <li>▪ To remove any existing routes, select it and click Delete.</li> <li>▪ <i>Ignore automatically obtained routes:</i> Select this checkbox only when you want to use manually-specified routes.</li> <li>▪ <i>Use this connection only for resources on its network:</i> If selected, this connection will be used only when retrieving resources from the network. It will never be used as the default network connection.</li> </ul>

*Note: You can retrieve current IP addresses from the Connection Information dialog. See **Network Icon** (on page 176).*

► **Automatic, addresses only:**

IPv6 autoconfiguration automatically assigns an IPv6 address to the User Station, but no DNS servers or domain servers are specified.

The following settings are configurable for this method.

Setting	Description
DNS servers	Specify IP addresses of one or multiple DNS servers. Use commas to separate multiple servers.
Search domains	Specify IP addresses of one or multiple domains for resolving host names. Use commas to separate multiple domains.
IPv6 privacy extensions	See the above table for information of these fields/options.
Require IPv6 addressing for this connection to complete	
Routes	

► **Automatic, DHCP only:**

The DHCPv6 server in the network automatically assigns an IPv6 address to the User Station, and specify DNS server(s) and domain(s).

The following settings are configurable for this method. See the above table for associated information.

- Require IPv6 addressing for this connection to complete
- Routes

► **Manual:**

Select this method when intending to manually assign a static IP address to the User Station.

In the Addresses section, click Add and then type the User Station's IPv6 address, prefix and gateway in this section. At least one IPv6 address, prefix and gateway must be specified.

**Addresses**

Address	Prefix	Gateway	
2605:0:2:1::5	64	2605:0:2:3::1	
			

The following settings are configurable for this method. See the above table for associated information.

- DNS servers

- Search domains
- Require IPv6 addressing for this connection to complete
- Routes

► **Ignore:**

The IPv6 networking settings are all disabled.

---

## Default Shortcut Icons in the Main Toolbar

Shortcut icons in the Main Toolbar provides quick access to some system settings. For information on the Main Toolbar, see **Main Screen and Main Toolbar** (on page 7).

This section introduces the following factory default icons.




---

### Keyboard Layout Icon



► **Clicking the icon:**

The keyboard layout switches among available languages. By default, the following languages are available.

- *en* - English (US)
- *es* - Spanish
- *fr* - French
- *de* - German

► **Right-clicking the icon:**

A shortcut menu with these commands displays.

- *Layouts*: Changes the keyboard layout.
- *Keyboard Preferences*: Triggers the Keyboard Preferences dialog. See **Keyboard** (on page 162).
- *Show Current Layout*: Shows a keyboard image to indicate the current layout.

---

### Volume Icon



▶ **Clicking the icon:**

A slider bar displays for you to adjust the volume.

▶ **Right-clicking the icon:**

A shortcut menu with this command displays.

- *Mute*: Mutes the sound.

---

## Network Icon



▶ **Clicking the icon:**

A list of available Ethernet networks and connections displays.

- Only one network connection is shown if only one LAN port is connected to the network.
- Two network connections are listed if both LAN ports are connected to the network.
- By default, *Ethernet 1* is for LAN port 1, and *Ethernet 2* is for the other.
- You must have the System permission to make changes to network settings.

An "active" network connection is highlighted in bold, with a Disconnect command following it. To disable any active connection, select Disconnect.

- The formatting of that connection's name turns from bold to normal, indicating that it becomes inactive.


To activate any disabled network connection shown in the list, click it.

- The formatting of that connection's name turns from normal to bold, indicating that it becomes active.

► **Right-clicking the icon:**

A shortcut menu with these commands displays.

- *Enable Networking:* Enables or disables the networking capability. The default is to enable it.
- *Connection Information:* This command shows the networking information of the User Station, including IPv4 and IPv6 addresses.

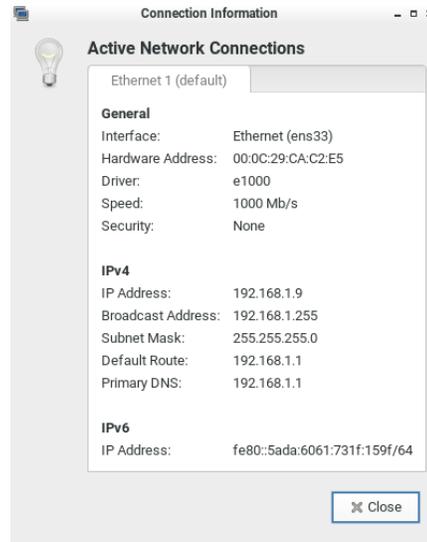

- When only one network connection is active, this dialog shows one tab.
- When both network connections are active, this dialog shows two tabs.
- The default connection has the word "default" shown on its tab.
- *Edit Connections:* This triggers the Network Connections dialog. See **Network Connections** (on page 166).


---

### Clock Icon

Mon Dec 4, 15:38

► **Clicking the icon:**

A calendar with Locations section displays.

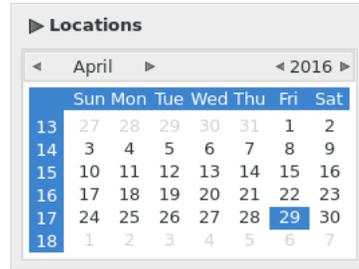

Click Locations to:

- Determine the location and time zone of the User Station.
- Change the time format of the clock shown in the Main Toolbar.

For details, see **Location and Clock Time Format** (on page 179).

To close the calendar, click the clock icon in the Main Toolbar again.


► **Right-clicking the icon:**

A shortcut menu with this command displays. You must have the System permission to change Date/Time settings.


- **Adjust Date & Time:** This triggers the date/time dialog. You must have Systems permissions to change the date and time. See **Date/Time** (on page 159).

### Location and Clock Time Format

After expanding the Locations section, click Edit.

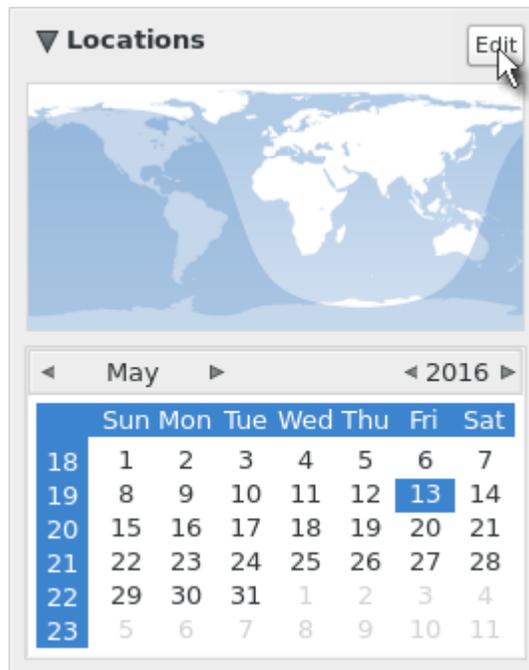

The Clock Preferences dialog appears. Click the desired tab or button to configure settings.

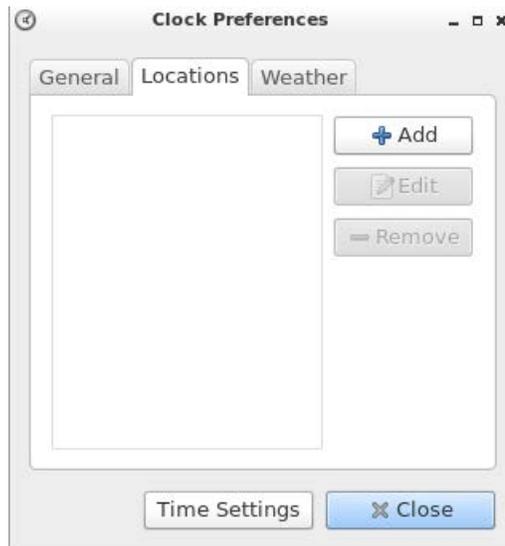

▶ **Time Settings:**


- See *Date/Time* (on page 159).

▶ **Locations:**


- Click Add to specify your city or country.
  - You can simply type the city or country name in the Location Name field and then select the correct one from the list that appears.
  - If your city's or country's name is not available in the list, you can manually specify the Timezone, Latitude and Longitude.
- To modify or delete any existing location in the Locations tab, select it and click Edit or Remove.

▶ **General:**

- *Clock Format:* Select the desired clock format to be shown in the Main Toolbar - 12 or 24 hour format.
- *Panel Display:* Select the information that is shown or available via the Main Toolbar - date, seconds, week numbers, weather and temperature.
  - Date and seconds, if selected, are shown in the clock on the Main Toolbar.
  - Week numbers, if selected, are shown in the calendar. A week number is the week's sequential number in a year.

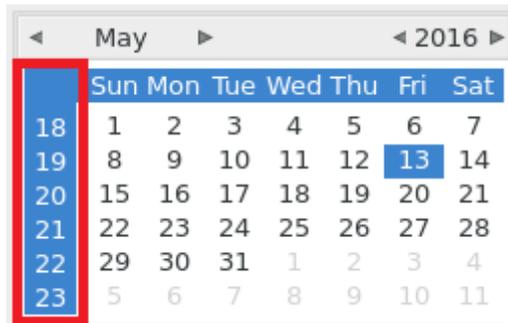


- Weather and temperature, if selected, are shown in the following two positions:
  - **The Main Toolbar**

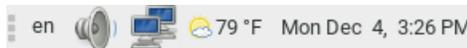

- **The Locations section:** When you hover your mouse pointer over the weather icon below the location name, more information is displayed, including the weather, temperature, wind speed and the time for sunrise/sunset.

*Tip: If the system's time zone setting is different from the selected location's and you have the System Administration privilege, a "Set" button appears to the right of the location name when hovering the mouse pointer around it. You can click the button to set the location's time zone as the system's time zone.*

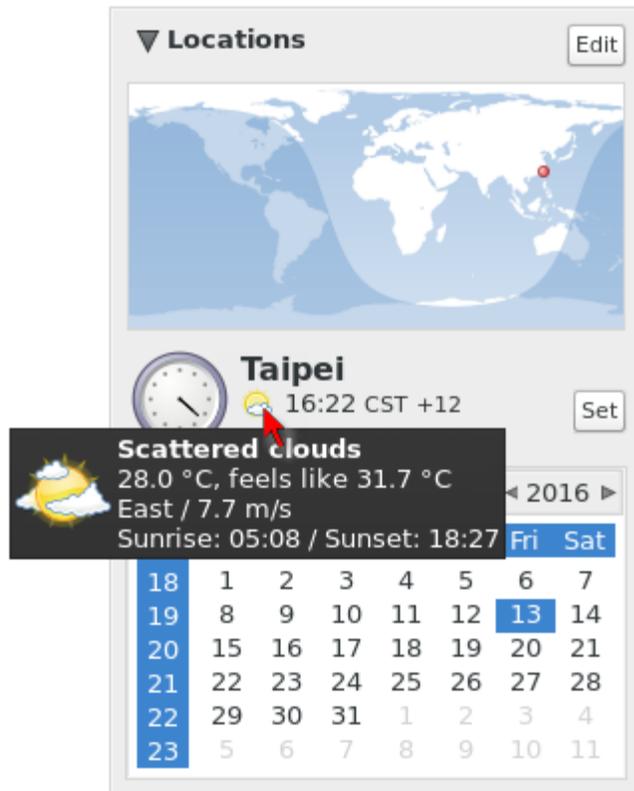

► **Weather:**

- Determine the temperature unit: C (degree Celsius), F (degree Fahrenheit) or K (degree Kelvin).
- Determine the wind speed unit: m/s, km/h, mph, knots, or Beaufort scale.

# Chapter 11 Additional Features

## In This Chapter

Device Resume or Screen Unlocking.....	182
Factory Reset at Startup .....	183
Take a Screenshot.....	184


---

## Device Resume or Screen Unlocking

When the User Station screen is locked, no data is displayed onscreen.

*Note: See Desktop Settings for details on screen locking.*

When you attempt to unlock the screen, a password prompt appears. Only the user who locked the screen can unlock the User Station. Other users must log out and then log in to the User Station if intending to operate it.

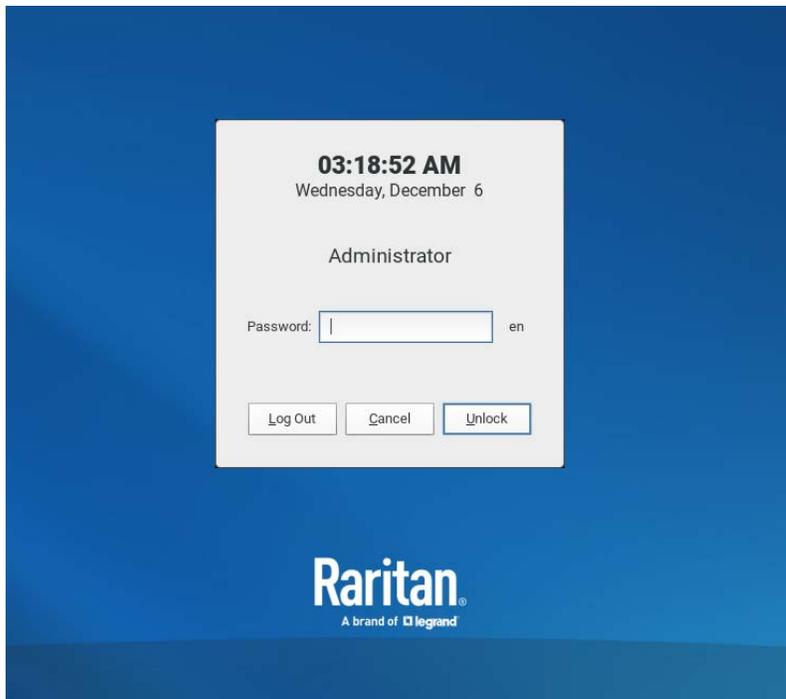

- ▶ **To unlock the User Station:**
  1. Press any key on the keyboard.
  2. A password prompt displays.

3. Enter the password of the user who triggered the screen-locking mode.
4. Click Unlock.

► **To log out of the User Station:**

1. At the password prompt, click Log Out. NO password is needed.
2. The Login Screen displays, and any user can log in.

---

## Factory Reset at Startup

In addition to the factory reset feature in the User Station Configuration window, you can reset the User Station to factory defaults by performing the factory reset during the device boot.

Only the admin user can perform the factory reset at startup. Other users CANNOT perform it regardless of the permissions they own.

The User Station supports the factory reset at startup as of *release 1.1.0*.

Note that the factory reset removes all customized data, which is listed in the section titled **Factory Reset** (on page 151).

► **To perform factory reset when the device boots up:**

1. It may be required to change your admin password to enable this feature, depending on the initial software version implemented on your User Station.
  - If the initial version is *1.1.0 or later*, this feature works regardless of the admin password change.

---

*Note: Raritan recommends changing the default admin password even though this feature works. See **Password Change** (see "Change Password" on page 102).*

---

- You must also change the admin password to enable this feature after the User Station is restored with any backup file created with *an earlier software version (1.0.0 or 1.0.1)* regardless of the initial version.
2. Restart or boot up the User Station.
  3. When a blinking text cursor displays on the top-left corner of the screen after the initial BIOS image, press Esc within a second.
  4. A menu with the two options below is shown.
    - Boot KX III User Station
    - Reset KX III User Station to Factory Defaults
  5. Select **Reset KX III User Station to Factory Defaults**.
    - To abandon the factory reset, select the other option.

6. When the system prompts you to enter user credentials, type the admin credentials -- "admin" user and the current admin password.
  - The default admin password is "raritan" if not changed yet.
7. If the admin credentials are correct, the User Station performs the factory reset and then reboots.
  - If the credentials are incorrect, the User Station returns back to the menu in step 4.

---

## Take a Screenshot

To take a screenshot, you must be in a user group with the Take Screenshot privilege and a privilege such as Device Access that allows you to login. See *Privileges* (on page 110).


A hotkey must be configured for the function.

Your screenshot is saved to a connected USB storage device. If more than one USB storage is detected, the first device by alphabetical device name is chosen.

► **To enable the hotkey for taking a screenshot:**

1. Open User Station Configuration, then choose Preferences > Hotkeys.
2. Scroll down to "Screenshot of Desktop" and "Screenshot of Active Window". If the functions are enabled, use the hotkey displayed. If the functions are disabled, click Edit, then select a hotkey for the function.

See *Hotkeys* (on page 100).

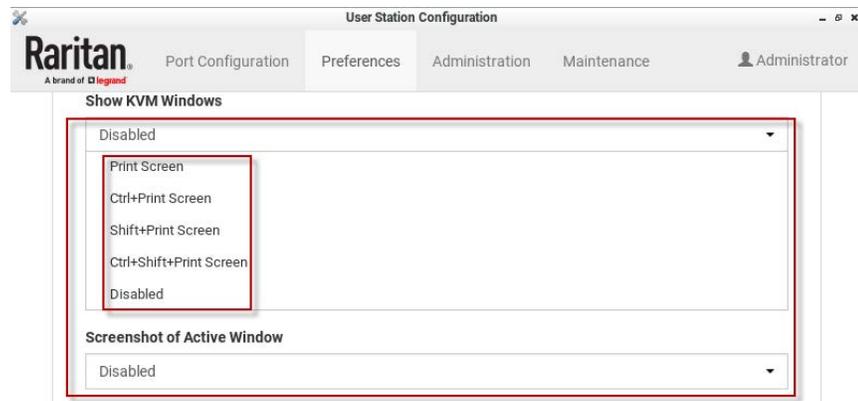

## Appendix A Specification

<b>Chassis design</b>	Slim 1.3 litre metal chassis, black
<b>Dimension (LxWxH)</b>	190 x 165 x 43 mm
<b>Operating temperature</b>	0 to 40 degrees Celsius
<b>Humidity</b>	non-condensing: 10~90%
<b>VESA mount</b>	<ul style="list-style-type: none"> <li>▪ 75 x 75 mm</li> <li>▪ 100 x 100 mm</li> </ul>
<b>Video</b>	<ul style="list-style-type: none"> <li>▪ 1 x HDMI</li> <li>▪ 2 x DisplayPort</li> <li>▪ Support video resolutions up to 3840 x 2560</li> </ul>
<b>I/O ports</b>	<ul style="list-style-type: none"> <li>▪ 1 x SD card reader</li> <li>▪ 2 x Audio (Line out, mic)</li> <li>▪ 2 x USB 3.0 (rear), 6 x USB 2.0 (4 front, 2 rear)</li> <li>▪ 2 x Gigabit LAN (RJ-45), supports WOL, PXE</li> <li>▪ 2 x COM ports (RS-232 + RS-232/RS-422/RS-485)</li> </ul>
<b>Power supply</b>	External 90W fanless power adapter

# Appendix B Authentication of User Stations and KVM Switches

User credentials you use to log in to the Dominion User Station can be different or identical to the user credentials you enter for accessing the port information of any KX III KVM switch.

### ▶ User Station's user credentials:

User credentials for logging in to the User Station determine the tasks/permissions you are allowed to perform on the User Station, but not the tasks/permissions you can perform on KVM switches and KVM ports.

For example, user credentials of the User Station determine whether you can add or remove the data of KVM switches, or whether you can back up and restore the User Station settings.

For detailed information on what you can do on a User Station, see *Privileges* (on page 110).

### ▶ KVM Switch's user credentials:

User credentials entered for KVM switches determine the tasks/permissions you are allowed to perform while accessing computer devices connected to KVM ports (that is, target servers).

For example, user credentials for the KVM switch determine whether you can access all KVM ports on this KVM switch, or whether you can perform the virtual media or power control function on a KVM port/target server.

This is why users of the User Station CANNOT share user credentials of KVM switches, and each user must enter and save his or her own user credentials for KVM switches respectively. See *Editing KVM Switches* (on page 29).

For detailed information on what you can do with a KVM port/target server, see the user documentation for KX III KVM switches, which is accessible from the KVM switch's application or KX III section of Raritan website's *Support page* (<http://www.raritan.com/support/>).

### ▶ Examples:

The following table illustrates different combinations of user credentials for User Stations and KVM switches.

User account for the User Station	Tasks you can do on the User Station	User account for the KVM switch	Tasks you can do on a KVM port/target server
admin	<p>You can do anything, including:</p> <ul style="list-style-type: none"> <li>▪ System administration, such as backup or software update.</li> <li>▪ Device administration, such as adding KVM switches.</li> <li>▪ Device access, such as access to the data of all KVM switches and KVM ports.</li> </ul>	user-A	<p>Limited privileges are granted:</p> <ul style="list-style-type: none"> <li>▪ Port access permitted.</li> <li>▪ No virtual media access permitted.</li> <li>▪ No power control permitted.</li> </ul>
user-1	<p>Limited privileges are granted:</p> <ul style="list-style-type: none"> <li>▪ Device access permitted.</li> <li>▪ No device administration permitted.</li> <li>▪ No system administration permitted</li> </ul>	admin	<p>You can do anything, including:</p> <ul style="list-style-type: none"> <li>▪ Port access.</li> <li>▪ Virtual media access.</li> <li>▪ Power control permitted.</li> </ul>
admin	You can do anything. See above.	admin	You can do anything. See above.

## Appendix C Available Key Sets

The following table shows available key sets for **Keyboard Macros** (see "**Managing Keyboard Macros**" on page 96). Note that a few keys may belong to more than one key set.

Key set	Keys contained
Letters	A to Z
Numbers	0 to 9
Non-Graphic Keys	<ul style="list-style-type: none"> <li>▪ Left Windows Key</li> <li>▪ Right Windows Key</li> <li>▪ Menu Key</li> <li>▪ Print Screen/SysRq</li> <li>▪ Pause</li> <li>▪ ESC</li> <li>▪ Enter</li> <li>▪ Delete</li> <li>▪ Insert</li> <li>▪ Space Bar</li> <li>▪ Tab</li> <li>▪ Key Pad Enter</li> <li>▪ Backspace</li> <li>▪ Home</li> <li>▪ End</li> <li>▪ Page Up</li> <li>▪ Page Down</li> </ul>
Shift Modifiers	<ul style="list-style-type: none"> <li>▪ Left Ctrl</li> <li>▪ Right Ctrl</li> <li>▪ Left Alt</li> <li>▪ Right Alt</li> <li>▪ Left Shift</li> <li>▪ Right Shift</li> <li>▪ Scroll Lock</li> <li>▪ Caps Lock</li> <li>▪ Num Lock</li> </ul>

Key set	Keys contained
Symbols	<ul style="list-style-type: none"> <li>▪ - (Minus)</li> <li>▪ = (Equals)</li> <li>▪ [ (Left Bracket)</li> <li>▪ ] (Right Bracket)</li> <li>▪ \ (Back Slash)</li> <li>▪ ; (Semi-colon)</li> <li>▪ ' (Apostrophe)</li> <li>▪ ` (Grave)</li> <li>▪ , (Comma)</li> <li>▪ . (Period)</li> </ul>
Direction Keys	<ul style="list-style-type: none"> <li>▪ Tab</li> <li>▪ Backspace</li> <li>▪ Home</li> <li>▪ End</li> <li>▪ Page Up</li> <li>▪ Page Down</li> <li>▪ Right Arrow</li> <li>▪ Left Arrow</li> <li>▪ Up Arrow</li> <li>▪ Down Arrow</li> </ul>
F1-F16	F1 to F16
Key Pad Keys	<p>All keys on the key pad, including:</p> <ul style="list-style-type: none"> <li>▪ . (period)</li> <li>▪ 0 to 9</li> <li>▪ Enter</li> <li>▪ +</li> <li>▪ -</li> <li>▪ *</li> <li>▪ /</li> </ul>
Special Functions	<p>Delay time in milliseconds (ms), including:</p> <ul style="list-style-type: none"> <li>▪ 25 ms</li> <li>▪ 100 ms</li> <li>▪ 500 ms</li> <li>▪ 1000 ms</li> </ul>

Appendix C: Available Key Sets

Key set	Keys contained
Japanese Keys	<ul style="list-style-type: none"> <li>▪ Japan Kana</li> <li>▪ Japan Convert</li> <li>▪ Japan No Convert</li> <li>▪ Japan Yen</li> <li>▪ Japan Circumflex</li> <li>▪ Japan @</li> <li>▪ Japan :</li> <li>▪ Japan Kanji</li> <li>▪ Japan Ro</li> </ul>
Korean Keys	<ul style="list-style-type: none"> <li>▪ Korea Hanja</li> <li>▪ Korea Hangul</li> </ul>
Sun Keys	<p>Specials keys on the Sun keyboard, including:</p> <ul style="list-style-type: none"> <li>▪ Stop</li> <li>▪ Again</li> <li>▪ Undo</li> <li>▪ Cut</li> <li>▪ Copy</li> <li>▪ Paste</li> <li>▪ Find</li> <li>▪ Mute</li> <li>▪ Volume Up</li> <li>▪ Volume Down</li> <li>▪ Props</li> <li>▪ Front</li> <li>▪ Help</li> <li>▪ Compose</li> <li>▪ Open</li> </ul>

## Appendix D Card Reader Restriction Caused by KX III KVM Switch Settings

In the following context, "the device" refers to a KX III KVM switch, not the User Station.

When PC-Share mode is enabled on the device, multiple users can share access to a target server.

However, when a smart card reader is connected to a target, the device will enforce privacy regardless of the PC-Share mode setting.

In addition, if you join a shared session on a target server, the smart card reader mounting will be disabled until exclusive access to the target server becomes available.

## Appendix E Certificate Requirements

Dominion User Station requests and verifies server certificates for its TLS connections if the according options are set. In FIPS-mode certificate verification is always enabled. The following protocols potentially verify the server's certificate:

- RDMP: the KX status protocol, TLS via OpenSSL
- RFB: the KX KVM redirection protocol, TLS via JSSE and NSS (in FIPS-mode)
- LDAPS: secure LDAP, TLS via OpenSSL
- CC-SG: TLS via JSSE and NSS (FIPS mode)

Dominion User Station has certain requirements for a X.509 Version 3 Certificate, specifically with respect to the contained extensions and their values.

### ► Required Extensions

X.509 Version 3 Certificates allow you to embed additional information in the form of extensions. For more detailed information see RFC 5280. The following certificate extensions shall be present:

- Authority Key Identifier (RFC 5280 4.2.1.1)
- Subject Key Identifier (RFC 5280 4.2.1.2)
- Basic Constraints (RFC 5280 4.2.1.9)
  - CA: false
- Key Usage (RFC 5280 4.2.1.3): critical
  - Digital Signature
  - Key Encipherment
  - Key Agreement
- Extended Key Usage (RFC 5280 4.2.1.12)
  - TLS Web Server Authentication
  - TLS Web Client Authentication

### ► Hostname Verification

With version 2.0.0, Dominion User Station introduces hostname verification when checking certificates. The following requirements must be met to pass the verification:

- The Common Name of the certificate must be a full qualified host name (including domain)
  - It is also possible to use a descriptive name as Common Name and add the fully qualified host name to the SAN (Subject Alternative Names) section. This is supported on KX 3.5 or newer.

- Enter the KX3 (or CC-SG or LDAP server) with the same fully qualified host name as in the CN or SAN of the certificate into KXUST.
  - Using IP addresses, both IPv4 and IPv6, for the CN/SAN or when entering the KX into the KXUST does not work. IP addresses are discouraged for use in certificates and out of scope in the TLS spec (<https://tools.ietf.org/html/rfc6125#section-1.7.2>)

- In FIPS mode, the check may also work with IP addresses and a hostname SAN in the certificate

► **Notes about self-signed certificates from KX:**

Before KX 3.5, self signed certificates had the CA flag set. In KX 3.5 or newer, the CA flag is not set. Self signed certificates created with KX 3.5 will pass certificate check even if it is already expired. In general, the use of self signed certificates is discouraged.

► **Examples**

OpenSSL's command line tool openssl can be used to create according certificates.

Sign a KX3-CSR (Certificate Signing Request) with by a CA (Certification Authority):

```
openssl x509 -req -days 365 -in kx3.csr -CA ca/root-ca.crt \
    -CAkey ca/root-ca.key -set_serial 01 \
    -extfile v3.ext -out kx3-by-root-ca.crt
```

with the following meanings:

- kx3.csr: the KX3-CSR file
- ca/root-ca.crt: the CA's certificate file
- ca/root-ca.key: the CA's private key file
- v3.ext: the extensions definition file with the following content:

```
authorityKeyIdentifier=keyid,issuer
subjectKeyIdentifier=hash
basicConstraints=CA:FALSE
keyUsage = critical, digitalSignature, keyEncipherment,
keyAgreement
extendedKeyUsage = serverAuth, clientAuth
```

A certificate created in this way will contain an extension section looking like the following:

```
X509v3 extensions:
    X509v3 Authority Key Identifier:

keyid:F3:E0:95:4D:E6:3F:7E:2D:F9:F1:5F:3D:4B:AC:13:D1
:B9:ED:6C:1A
    X509v3 Subject Key Identifier:

30:99:CB:3A:DA:38:B4:94:09:ED:EF:AE:53:AC:C5:21:1B:73
:91:B9
    X509v3 Basic Constraints:
```

```
CA:FALSE
X509v3 Key Usage: critical
    Digital Signature, Key Encipherment, Key Agreement
X509v3 Extended Key Usage:
    TLS Web Server Authentication, TLS Web Client
Authentication
```

This can be reproduced with an OpenSSL command line like this,  
assuming kx3-by-root-ca.crt is the certificate file:

```
openssl x509 -in kx3-by-root-ca.crt -noout -text
```



# Index

## A

About this Device • 153, 158  
Absolute Mouse Mode • 60, 61, 63  
Adding KVM Switches • 27, 28  
Adding LDAP Servers • 113, 114, 121  
Additional Features • 182  
Administration Features • 27, 104  
Advanced Color Settings • 65, 68  
Advanced Video Settings • 65, 66  
Archive File Storage • 147  
Audio Device • 70, 71, 73  
Audio Settings • 71, 99, 147  
Authentication of User Stations and KVM Switches • 13, 29, 105, 186  
Automatic Archives • 143, 145  
Automatic Mouse Mode • 62  
Available Key Sets • 97, 188

## B

Backup and Restore • 147, 153  
Basic Network Settings • 12, 20  
Bulk Import Examples • 30, 33

## C

Card Reader Restriction Caused by KX III KVM Switch Settings • 80, 191  
Card Reinsertion Scenarios • 82  
CC-SG Authentication Fallback • 132  
CC-SG Integration Requirements • 128  
Certificate Failure Messages • 20, 133, 135  
Certificate Requirements • ii, 133, 192  
Certificates • 116, 132, 135, 136  
Change Password • 12, 102, 183  
Clock Icon • 8, 177  
Color Accuracy • 54, 57  
CommandCenter Secure Gateway (CC-SG) Integration • ii, 12, 26, 28, 128  
Configuring KVM Ports • 9, 14, 33, 40, 48  
Connecting Audio Devices • 71  
Connection Error Message • 20  
Connection Properties • 54  
Create an Archive • 143

## D

Date and Time • 160  
Date/Time • 147, 159, 178, 180  
Default Connection Properties • 54, 56  
Default Shortcut Icons in the Main Toolbar • 175  
Deleting Archive Files • 146, 147  
Deleting Backup Files • 150  
Deleting KVM Switches • 30  
Device Resume or Screen Unlocking • 22, 182  
Diagnostic Log File • 156  
Disconnecting a Virtual Device • 70, 72, 74, 77, 81, 83  
Display Settings • 137  
Dual Mouse Modes • 60, 61  
Dual Video Port Connections • 53, 92  
Dual Video Port Status • 44

## E

Editing KVM Switches • 13, 28, 29, 37, 73, 75, 186  
Editing or Deleting LDAP Servers • 121, 123  
Editing or Deleting Macros • 98  
Editing or Deleting User Groups • 111, 126  
Editing or Deleting Users • 108, 126  
Emulating the Card Reinsertion • 82, 83  
Enabling CC-SG Integration • 129  
Enabling or Disabling the LDAP Authentication • 114, 122, 124, 127  
Event Log • 139  
Event Log Archives • 142  
Event Type and Description • 139, 141  
Executing Macros • 96, 97  
Exporting and Importing Backup Files • 147, 149  
Exporting Archive Files • 145, 146, 147

## F

Factory Reset • 151, 183  
Factory Reset at Startup • 151, 183  
Fit window to Target • 88  
Front View • 4

Full-Screen Mode • 89

## G

Getting Started • 10

## H

Hide Mouse Cursor • 89

Hotkeys • ii, 100, 101, 184

## I

Identifying External Media • 44

Identifying States of KVM Switches and Ports • 37, 40, 41

Importing KVM Switches • ii, 27, 30

Installation and Configuration • 10

Introduction • 1

Introduction to the Software • 6

Introduction to the User Station • 4

IPv4 Settings • 22, 168, 169

IPv6 Settings • 22, 168, 172

## K

Keyboard • 147, 162, 175

Keyboard Layout Icon • 8, 175

Keyboard Macro Example • 97, 98

Keyboard Macros • 58

KVM Client Settings • 15, 51, 88, 89, 91, 93

## L

Layouts • 162, 163

LDAP • 107, 113, 120

LDAP Login Failure Message • 127

Location and Clock Time Format • 178, 179

Log Level for Diagnostic Log Files • 156

Logging in with CC-SG Integration • 128, 130, 131

Logging in with LDAP • 127

Login Screen • 6

Logout or Shutdown • 22

## M

Main Screen and Main Toolbar • 7, 12, 163, 166, 175

Maintenance Features • 27, 138

Managing Keyboard Macros • 58, 96, 98, 188

Managing KVM Switches and Ports • 26

Monitor • 8, 147, 165

Mounting a Card Reader • 79

Mounting CD-ROM/DVD-ROM/ISO Images • 75

Mounting Local Drives • 74

Mouse Keys • 162, 164

Mouse Settings • 59

Mouse Synchronization Tips • 60, 63

Move Keys • 9, 100, 101

## N

Navigation and Access to KVM Ports • 38

Navigator with CC-SG Integration • 38, 41, 128, 132

Network Connections • 20, 147, 166, 177

Network Icon • 8, 155, 166, 168, 170, 173, 176

Noise Filter • 55, 58

Number of Supported Virtual Media Drives • 78

## O

Online Help and Hotkeys Help • 9

Operating the Port Scanner • 49

Overview • 1, 10

## P

Package Contents • 2

Peripheral Devices and USB Settings • 69, 73

Port Data Retrieval Status • 34, 36, 43

Port Navigator • 35, 39

Port Scanner • ii, 35, 48

Power Control • 87

Prerequisites for Using Virtual Media • 73

Privileges • 105, 109, 110, 184, 186

Product Features • 2

Product Photos • 3

Product Photos and Features • 2

## R

Rackmount Using L-type Brackets (Optional) • 24

Rear View • 5

Removing an Installed Certificate • 134

## S

- Scale Video • 88, 94
- Scanner Options • 49, 51
- Scenarios When Read/Write is Unavailable • 74, 75
- Searching for LDAP Users and Groups • 113, 123
- Security Settings • 135
- Setting the Maximum Search Results • 114, 122, 126
- Setting User Preferences • 27, 93
- Show Window Decorations • 89, 94
- Side View • 5
- Single Mouse Cursor • 60, 63, 95
- SmartCard Reader • 70, 79
- Software Update • 153
- Specification • 185
- Standard Mouse Mode • 63
- Step 1
  - Connect the Equipment • 10
- Step 2
  - Initial Log in to the Dominion User Station • 11
- Step 3
  - Add KX III KVM Switches (without CC-SG integration) • 12, 27, 28
- Step 4
  - Access KVM Switches and KVM Ports (without CC-SG integration) • 14, 39
- Step 5
  - Use the KVM Client • 17
- Support • 155
- Support Login • 155
- Supported Virtual Media Types • 73
- Synchronize Mouse • 60, 62
- System Settings • 159

## T

- Take a Screenshot • ii, 184
- Text Readability • 54, 57
- Time Zone • 160, 161

## U

- Unavailable Hotkeys for Port Access • 35

- USB Profile Overview • 85, 86
- USB Profiles • 70, 84
- User Groups • 107, 108, 109, 112, 113
- User Station Configuration • 26, 28, 30, 93, 96, 99, 103, 105, 109, 114, 129, 139, 143, 146, 147, 151, 154, 155, 156, 157, 158
- Users • 105, 109, 112, 113, 122
- Using Filters • 15, 40, 44, 45
- Using Search • 40, 45
- Using the KVM Client • 19, 53, 97, 128

## V

- VESA Mount (Optional) • 22
- Video Mode • 55, 57
- Video Settings • 64
- View Settings • 88
- Virtual Media • 2, 70, 72
- Virtual Media CIMs • 61, 73, 78
- Volume Icon • 8, 175

## W

- What's New in the Dominion User Station User Guide for Release 2.0 • ii
- Window Management • 90, 95

## ▶ U.S./Canada/Latin America

Monday - Friday  
8 a.m. - 6 p.m. ET  
Phone: 800-724-8090 or 732-764-8886  
For CommandCenter NOC: Press 6, then Press 1  
For CommandCenter Secure Gateway: Press 6, then Press 2  
Fax: 732-764-8887  
Email for CommandCenter NOC: tech-ccnoc@raritan.com  
Email for all other products: tech@raritan.com

## ▶ China

### Beijing

Monday - Friday  
9 a.m. - 6 p.m. local time  
Phone: +86-10-88091890

### Shanghai

Monday - Friday  
9 a.m. - 6 p.m. local time  
Phone: +86-21-5425-2499

### GuangZhou

Monday - Friday  
9 a.m. - 6 p.m. local time  
Phone: +86-20-8755-5561

## ▶ India

Monday - Friday  
9 a.m. - 6 p.m. local time  
Phone: +91-124-410-7881

## ▶ Japan

Monday - Friday  
9:30 a.m. - 5:30 p.m. local time  
Phone: +81-3-5795-3170  
Email: support.japan@raritan.com

## ▶ Europe

### Europe

Monday - Friday  
8:30 a.m. - 5 p.m. GMT+1 CET  
Phone: +31-10-2844040  
Email: tech.europe@raritan.com

### United Kingdom

Monday - Friday  
8:30 a.m. to 5 p.m. GMT  
Phone +44(0)20-7090-1390

### France

Monday - Friday  
8:30 a.m. - 5 p.m. GMT+1 CET  
Phone: +33-1-47-56-20-39

### Germany

Monday - Friday  
8:30 a.m. - 5:30 p.m. GMT+1 CET  
Phone: +49-20-17-47-98-0  
Email: rg-support@raritan.com

## ▶ Melbourne, Australia

Monday - Friday  
9:00 a.m. - 6 p.m. local time  
Phone: +61-3-9866-6887

## ▶ Taiwan

Monday - Friday  
9 a.m. - 6 p.m. GMT -5 Standard -4 Daylight  
Phone: +886-2-8919-1333  
Email: support.apac@raritan.com